





MegaSized Jaguar Playcenter Base Install

PARTS NEEDED

Rockwall Assembly-	(1)
Step/ Chain Ladder Assembly-	(1)
458-32- 137" Mainbeam-	(2)
CC-189- 16" Right Playcenter Gusset-	(2)
CC-188- 16" Left Playcenter Gusset-	(2)

HARDWARE NEEDED

6A-2- 1/2" Acorn Nut Plated-	(4)	6C- 1/2" Hex Nut-	(4)
6M- 1/2" Split Lockwasher-	(4)	6P- 1/2" USS Flatwasher-	(4)
6Q- 3/4" USS Flatwasher-	(4)	6A-5- 1/2" x 7" Carriage Bolt-	(4)
6F- 3/8" x 3 1/2" Hex Lag Screw-	(16)	6O- 3/8" USS Flatwasher-	(16)

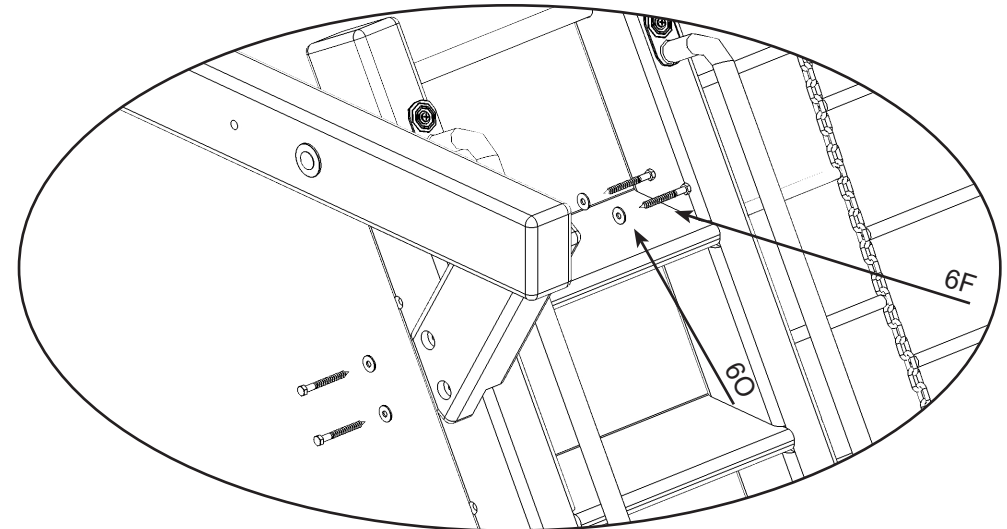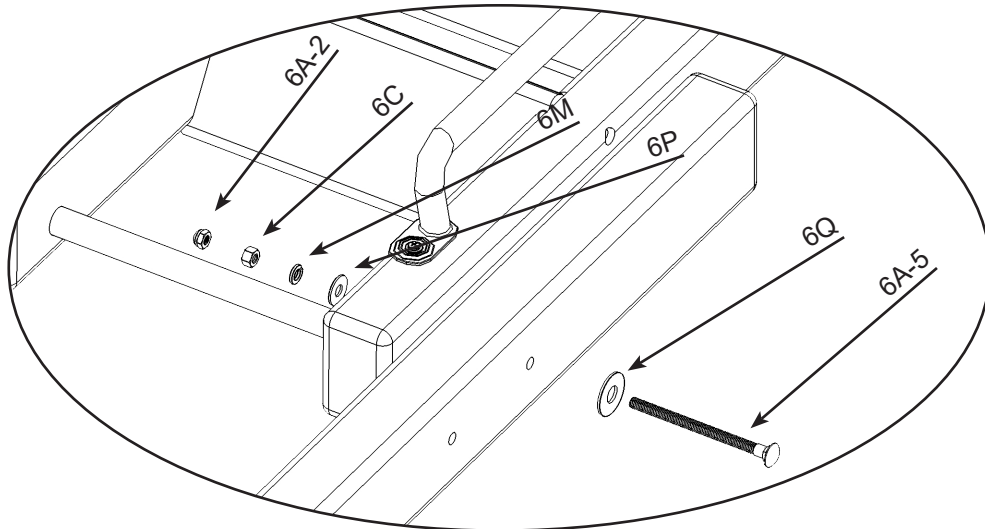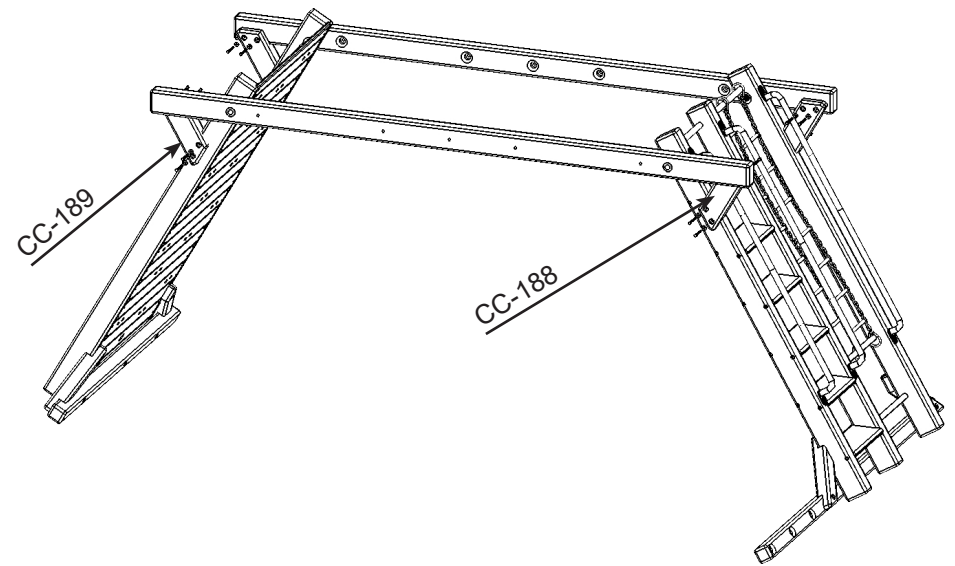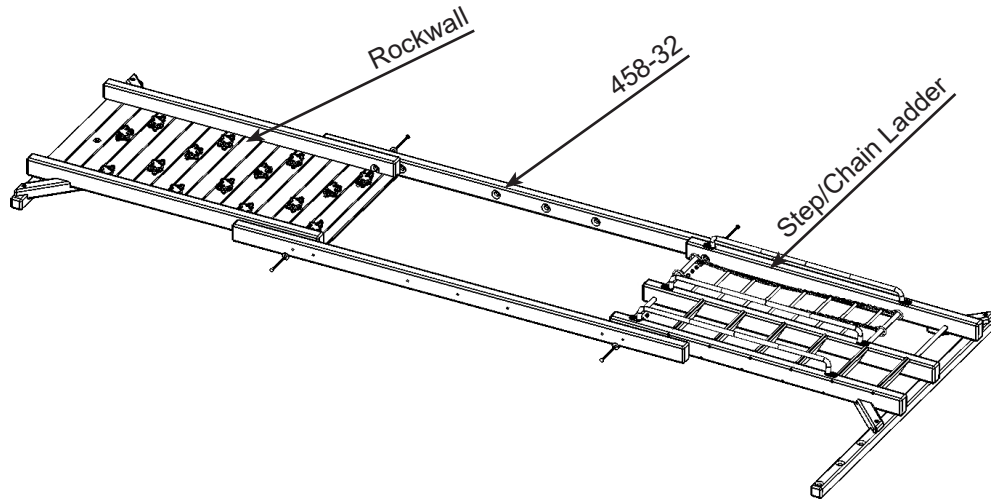

MegaSized Jaguar Playcenter Base Install





PARTS NEEDED

CC-173- 38 7/8" Corner Post- (4)
CC-175- 80 5/8" Center Post- (2)

6A-4- 1/2" x 6 1/2" Carriage Bolt- (6)
6P- 1/2" USS Flatwasher- (6)
6C- 1/2" Hex Nut- (6)

HARDWARE NEEDED

(6) 6Q- 3/4" USS Flatwasher- (6)
(6) 6M- 1/2" Split Lockwasher- (6)
(6) 6A-1- 1/2" Acorn Nut Plated- (6)

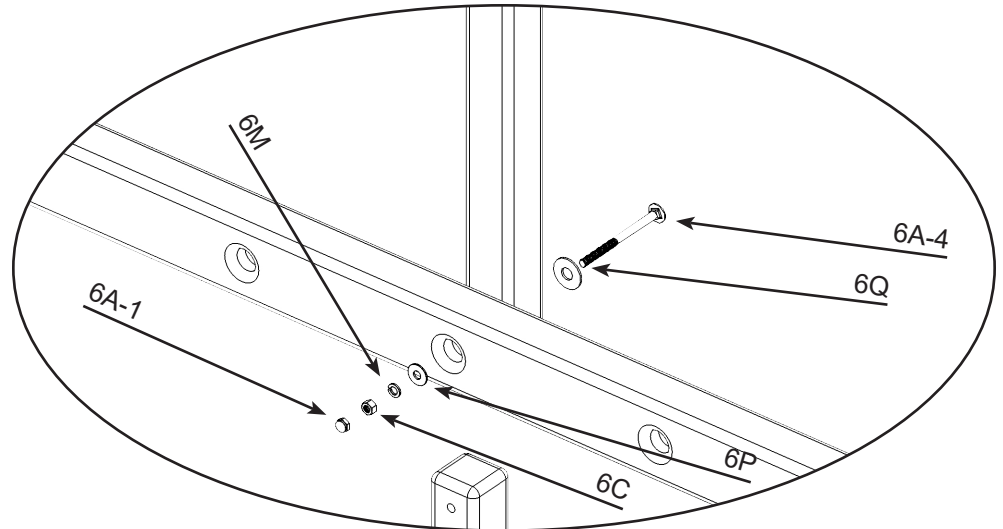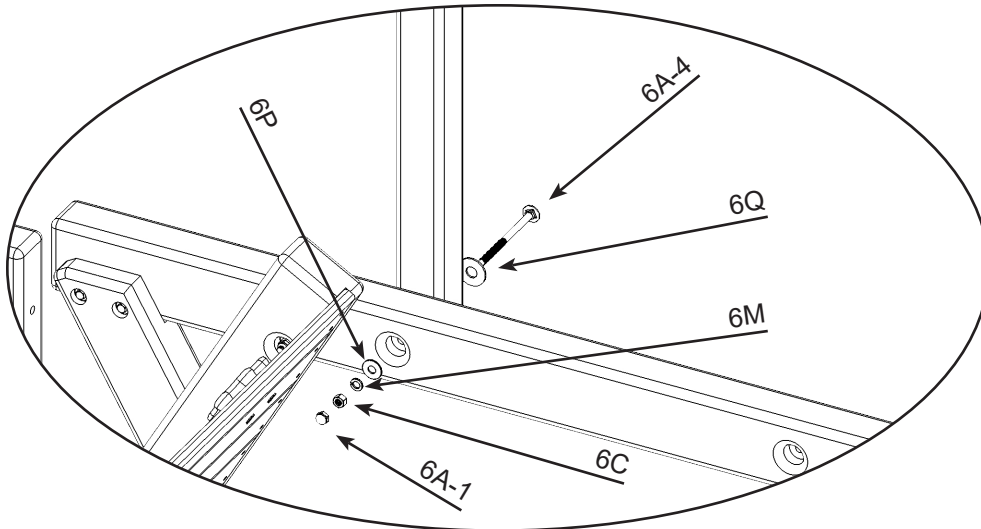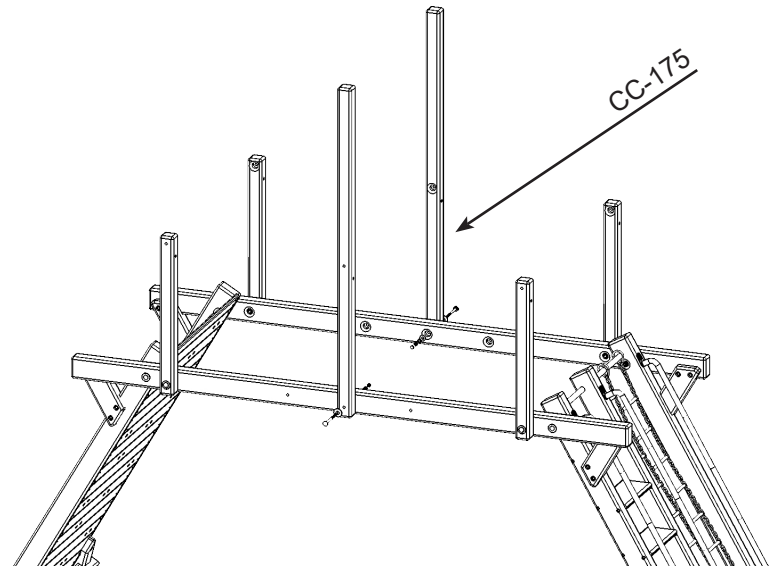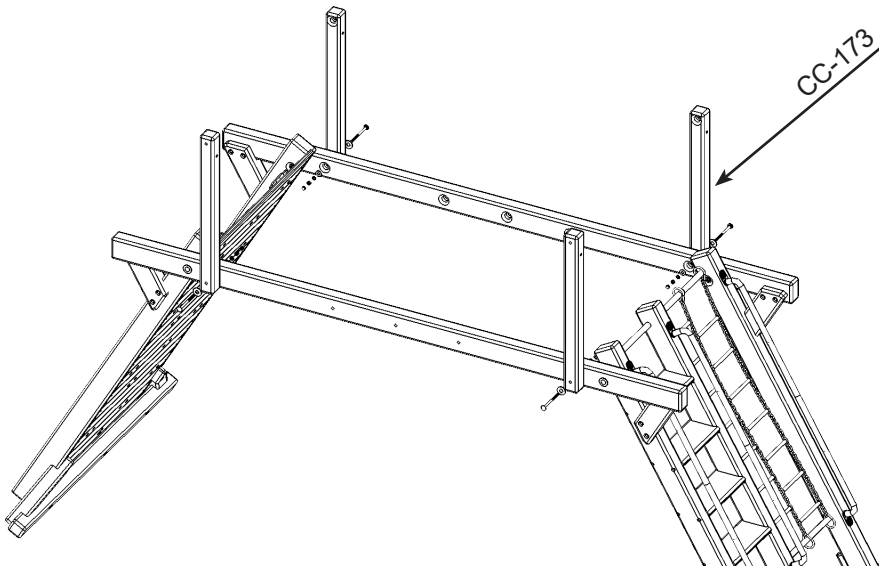

MegaSized Jaguar Playcenter Base Install





PARTS NEEDED

Deck Assembly-	(3)
458-28- 119 1/2" Top Joist-	(1)
458-29- 119 1/2" SB Top Joist-	(1)

A-5- 1/4" x 4 1/2" Hex Lag Screw-	(12)
6A-4- 1/2" x 6 1/2" Carriage Bolt-	(6)
6P- 1/2" USS Flatwasher-	(6)
6C- 1/2" Hex Nut-	(6)

HARDWARE NEEDED

A-8- 1/4" USS Flatwasher-	(12)
6Q- 3/4" USS Flatwasher-	(6)
6M- 1/2" Split Lockwasher-	(6)
6A-1- 1/2" Acorn Nut Plated-	(6)

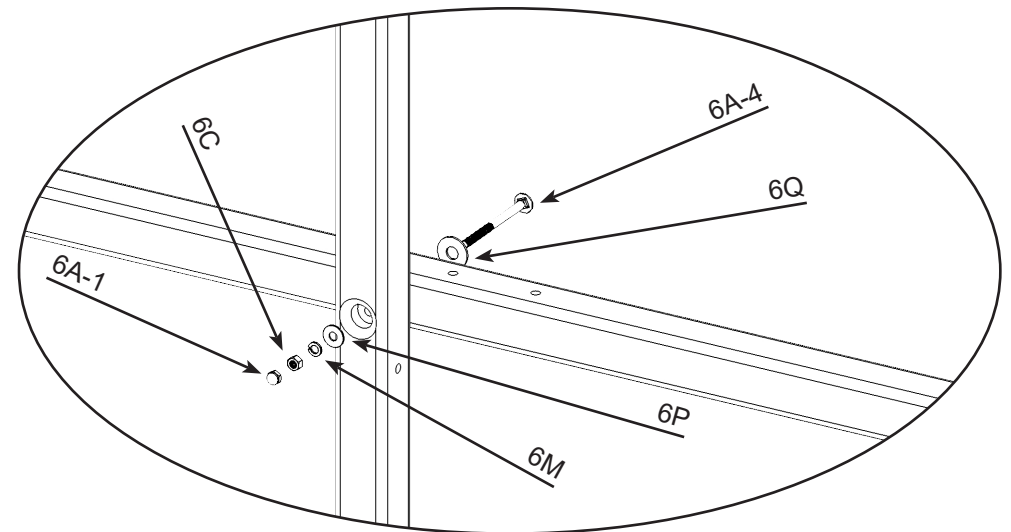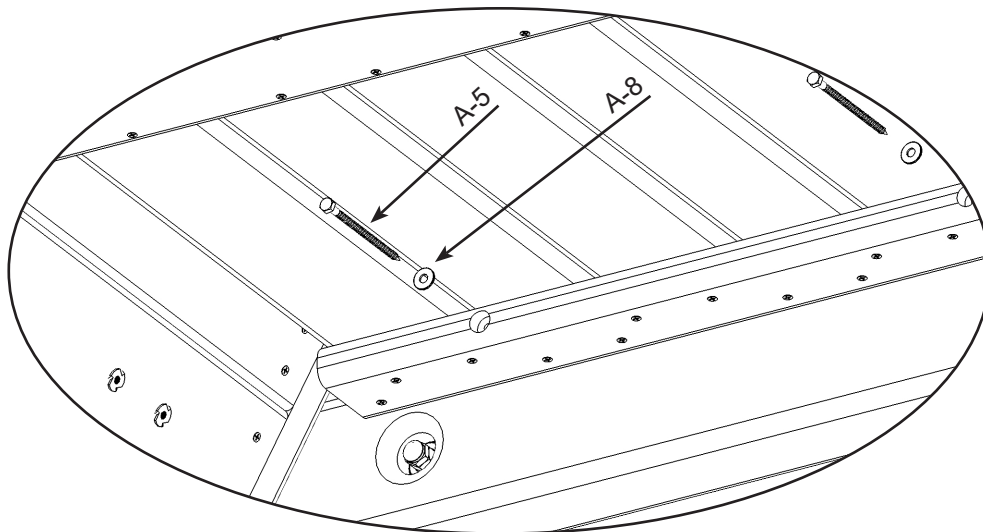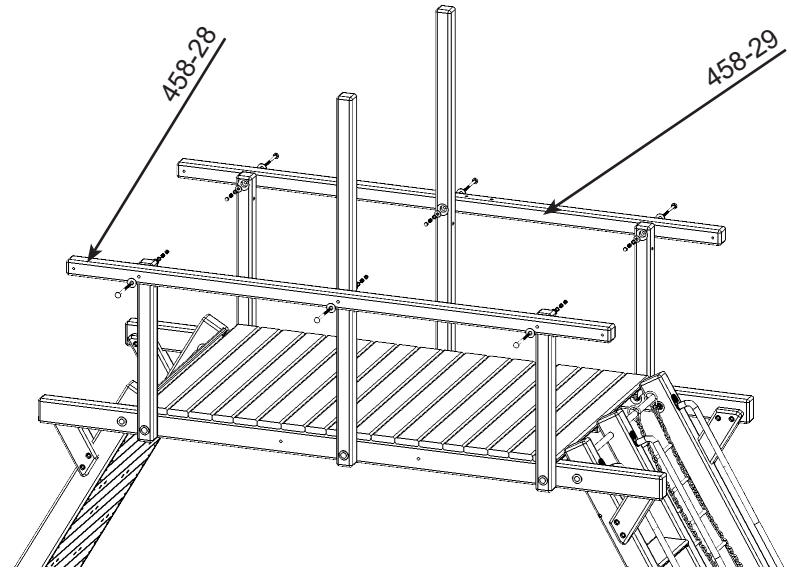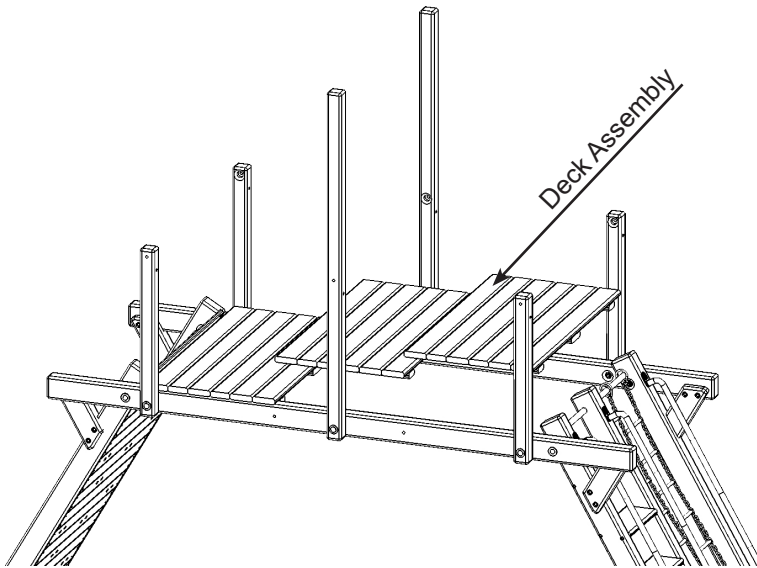






MegaSized Jaguar Playcenter Base Install

PARTS NEEDED

458-21- 38 7/8" Mid Rail Post- (4)
 CC-149- 19" Left Gusset- (2)
 CC-148- 19" Right Gusset- (2)

HARDWARE NEEDED

A-2- 1/2" x 6 1/2" Carriage Bolt- (4)	A-11- 3/4" USS Flatwasher- (4)
A-10- 1/2" USS Flatwasher- (4)	A-7- 1/2" Split Lockwasher- (4)
A-3- 1/2" Hex Nut- (4)	A-1- 1/2" Acorn Nut Plated- (4)
A-6- 3/8" USS Flatwasher- (4)	A-9- 3/8" x 5" Hex Lag Screw- (4)
6F- 3/8" x 3 1/2" Hex Lag Screw- (8)	6O- 3/8" USS Flatwasher- (8)

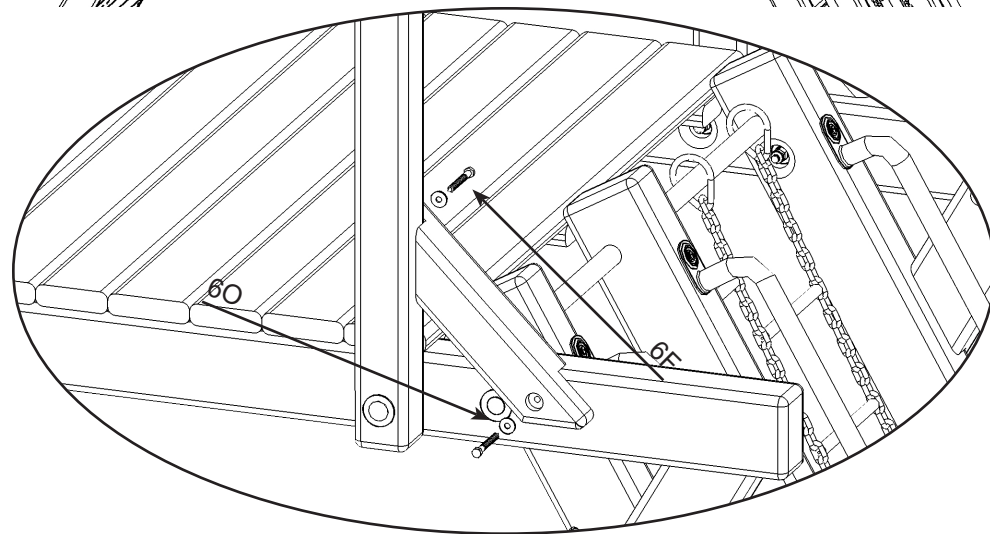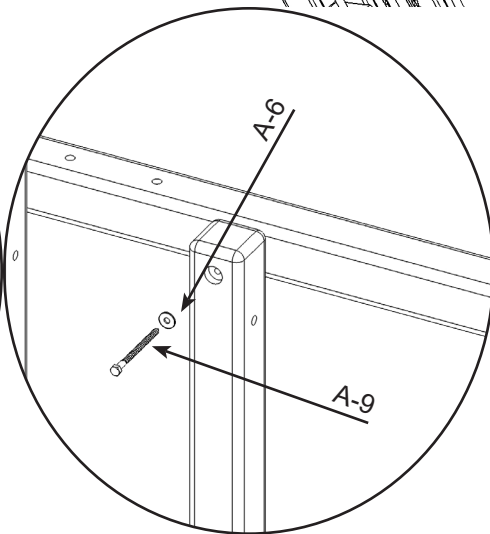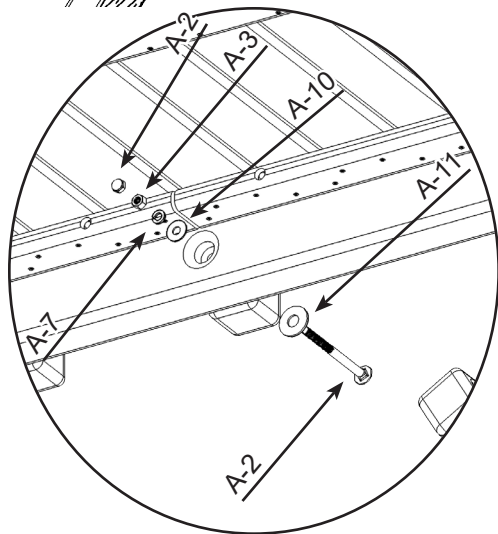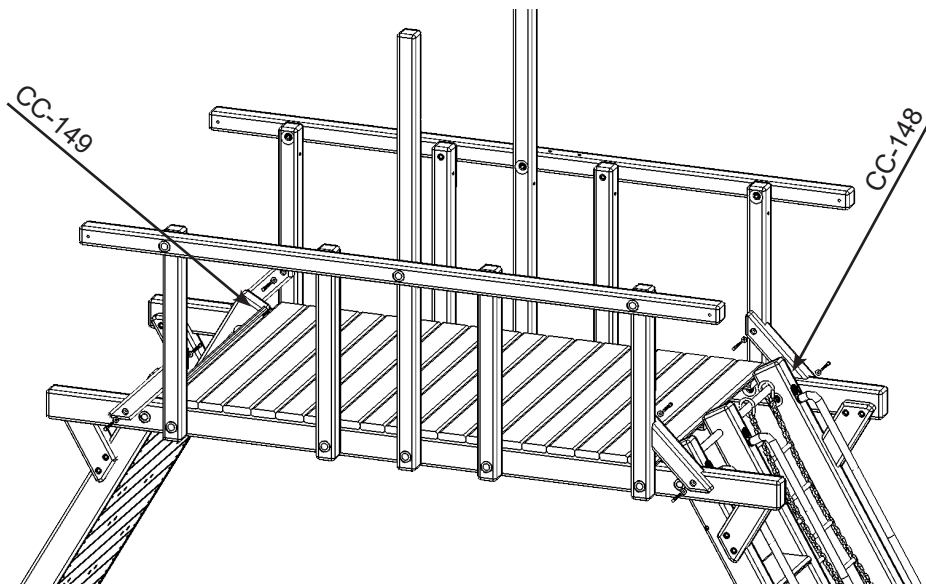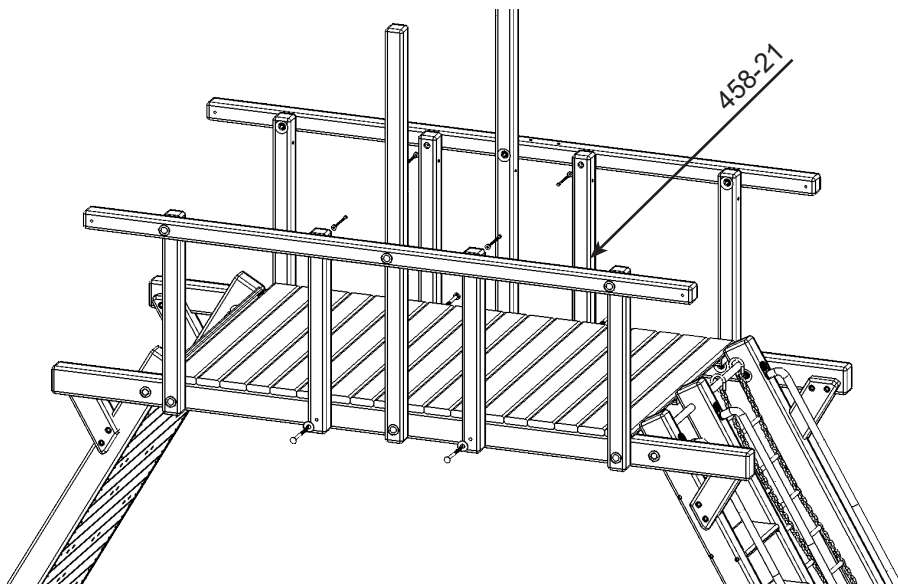

MegaSized Jaguar Playcenter Base Install





PARTS NEEDED

CC-177- 100" Trapeze Arm-	(1)
CC-176- 100" Upper Rope Arm-	(1)
CC-149- 19" Left Gusset-	(1)
CC-148- 19" Righth Gusset-	(1)

6A-4- 1/2" x 6 1/2" Carriage Bolt-	(4)
6P- 1/2" USS Flatwasher-	(4)
6C- 1/2" Hex Nut-	(4)
6G- 3/8" x 5" Hex Lag Screw-	(4)
6F- 3/8" x 3 1/2" Hex Lag Screw-	(4)

HARDWARE NEEDED

6Q- 3/4" USS Flatwasher-	(4)
6M- 1/2" Split Lockwasher-	(4)
6A-1- 1/2" Acorn Nut Plated-	(4)
6O- 3/8" USS Flatwasher-	(8)

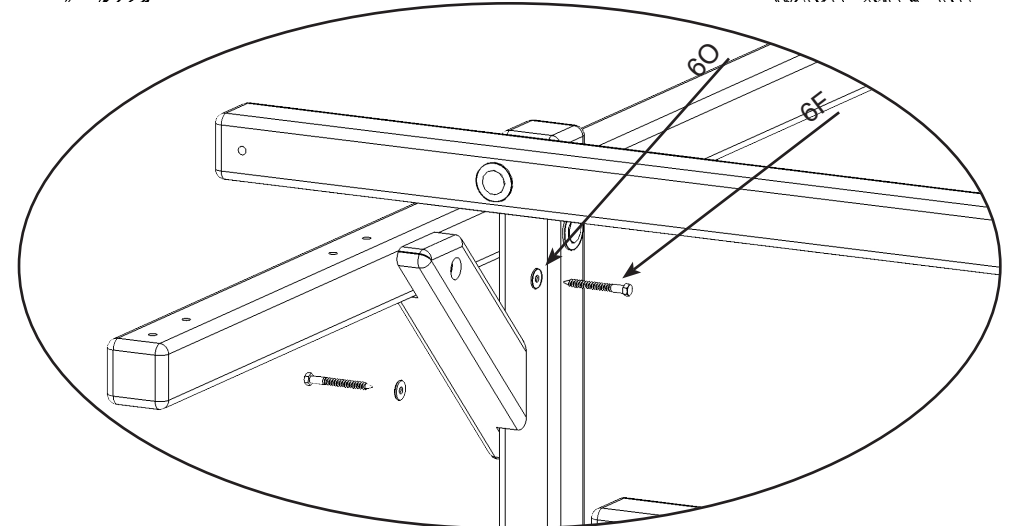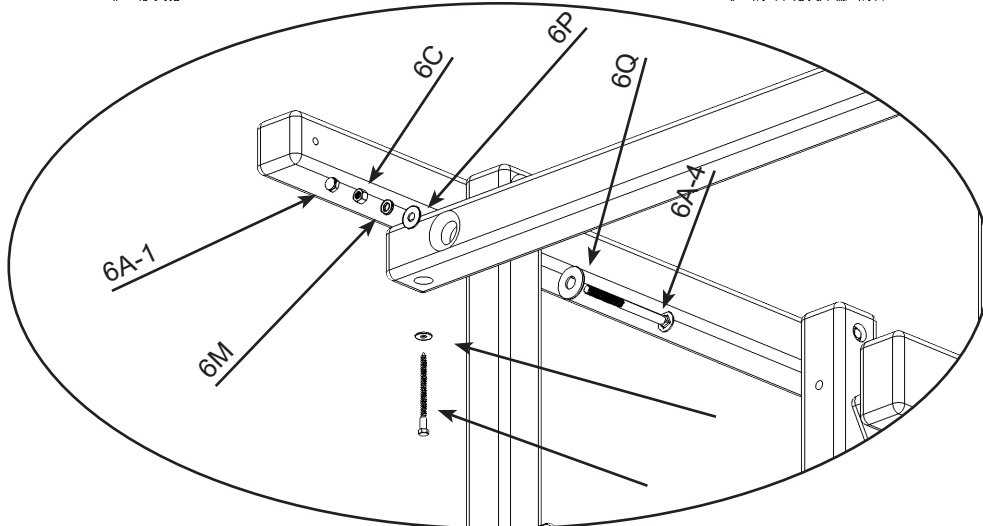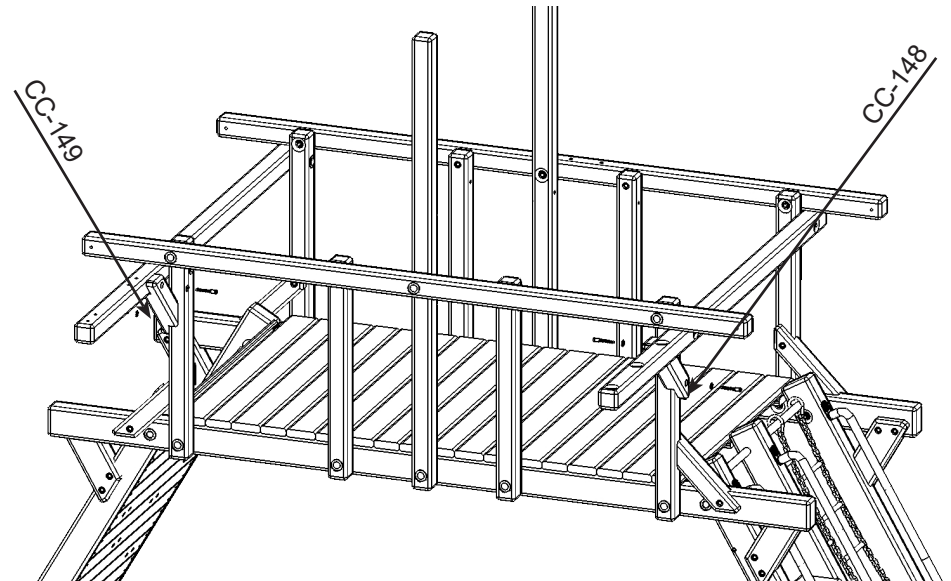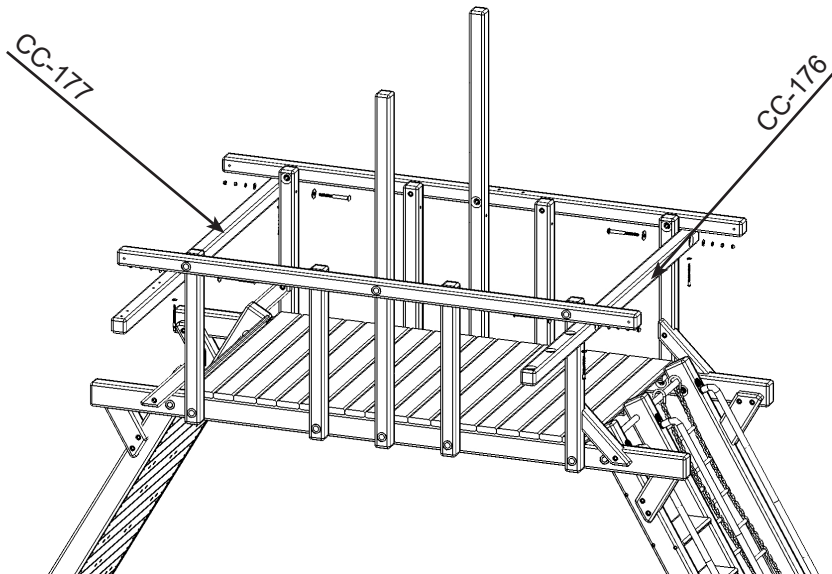





MegaSized Jaguar Playcenter Base Install

PARTS NEEDED

458-7- 11 1/2" Mid Rail Bottom- (4)
CC-100- 25" Rail Bottom- (3)

HARDWARE NEEDED

A-8- 1/4" USS Flatwasher- (8)
A-4- 1/4" x 3" Hex Lag Screw- (8)
6D- 1/4" x 3" Hex Lag Screw- (8)
6N- 1/4" USS Flatwasher- (8)

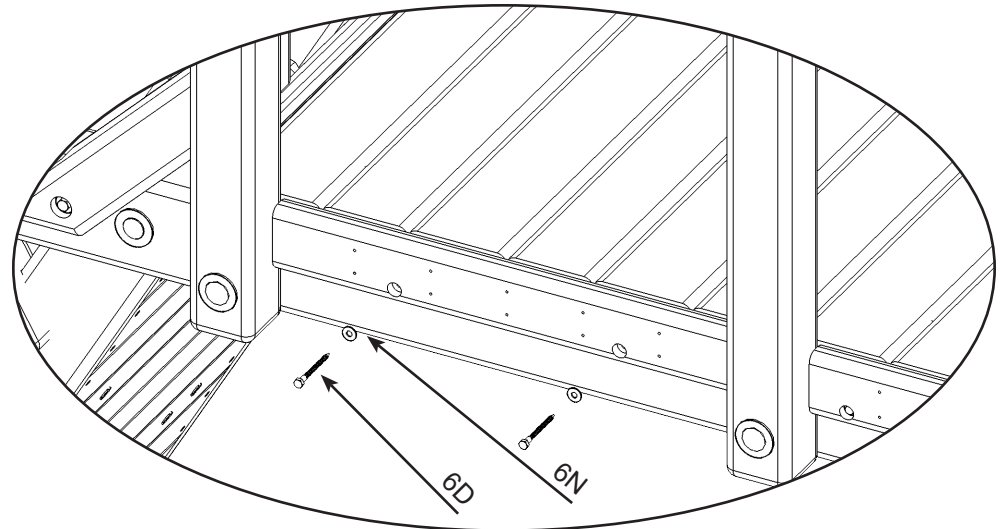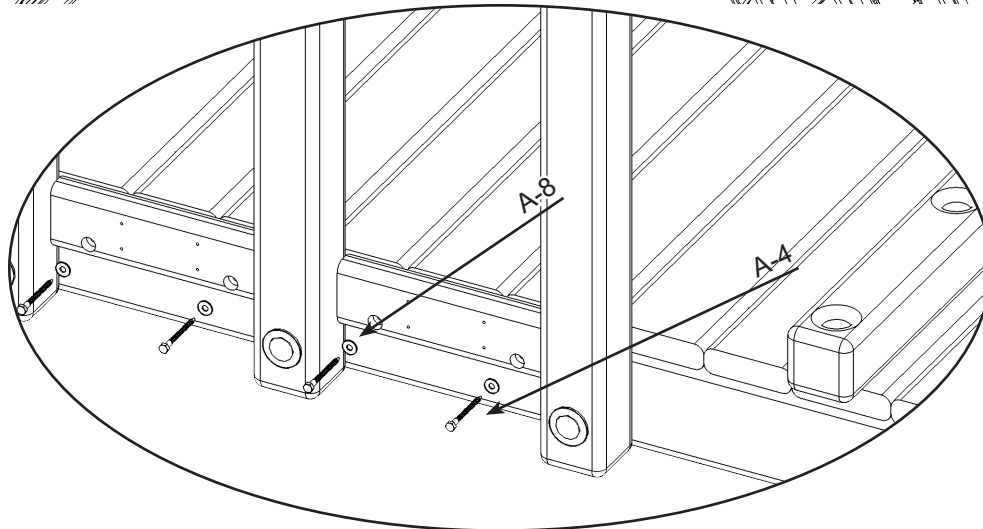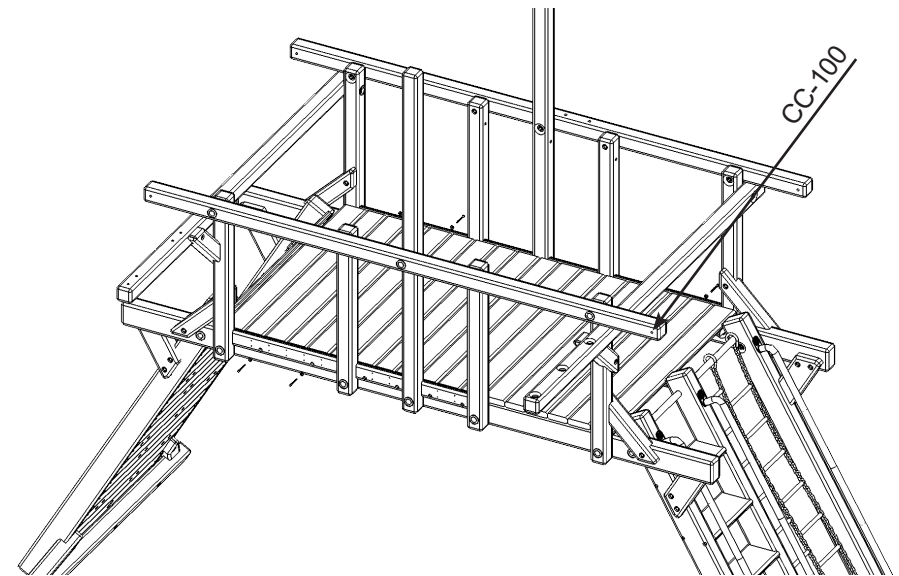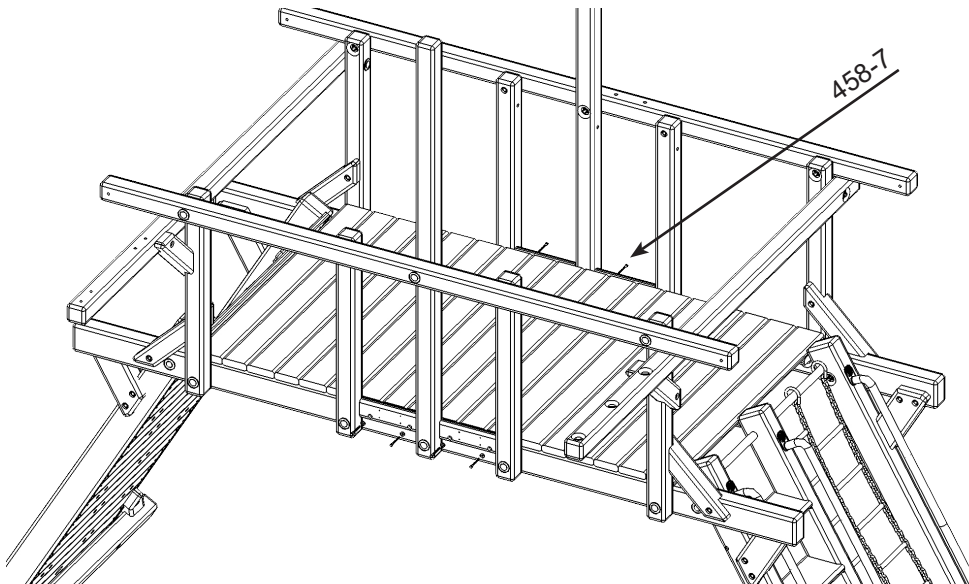





MegaSized Jaguar Playcenter Base Install

PARTS NEEDED

CC-142- 25" Entrapment Block- (1)
Slide- (1)

HARDWARE NEEDED

6O- 3/8" USS Flatwasher- (2)
6G- 3/8" x 5" Hex Lag Screw- (2)
6H- #14 x 2" Pan Phillips T/S- (3)
6N- 1/4" USS Flatwasher- (3)

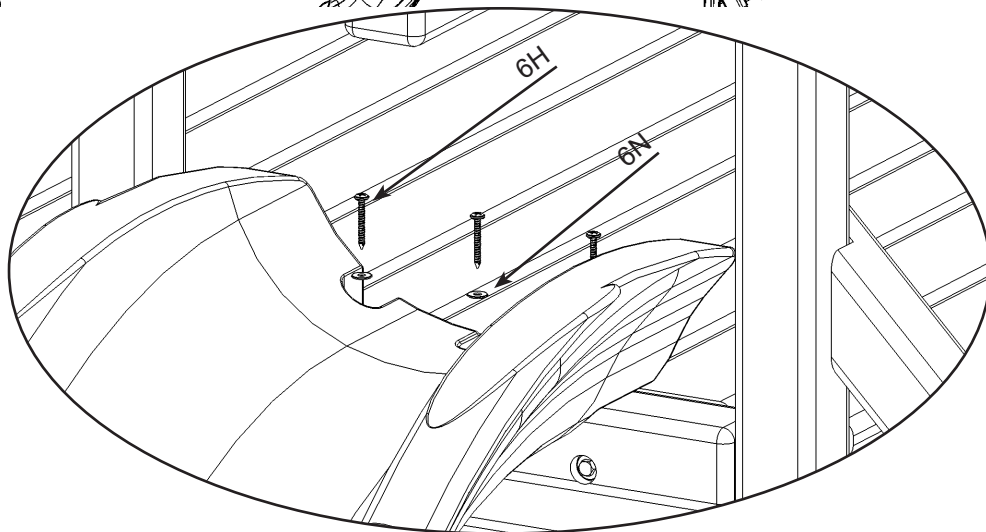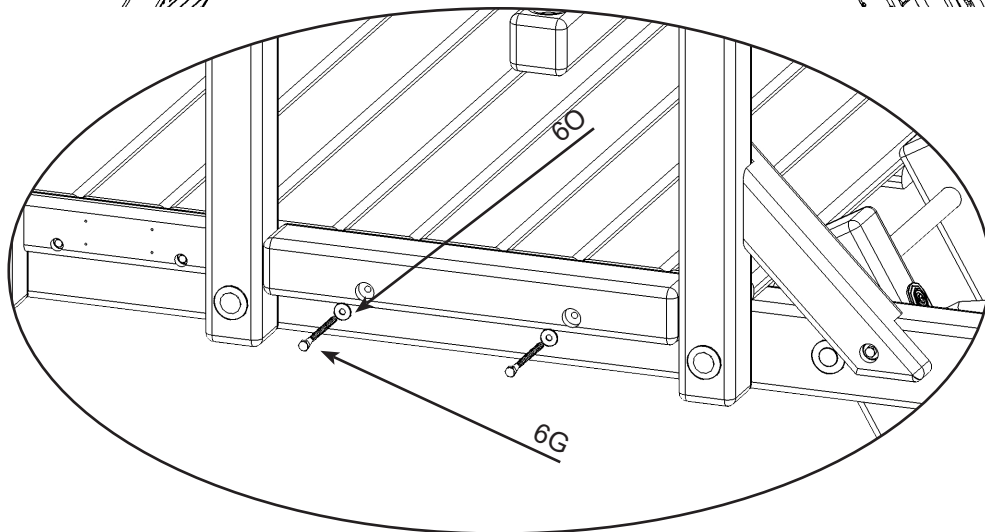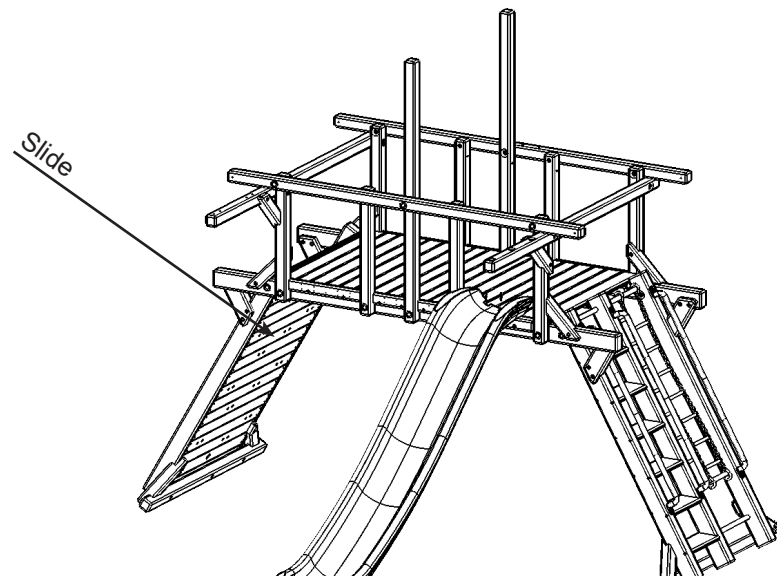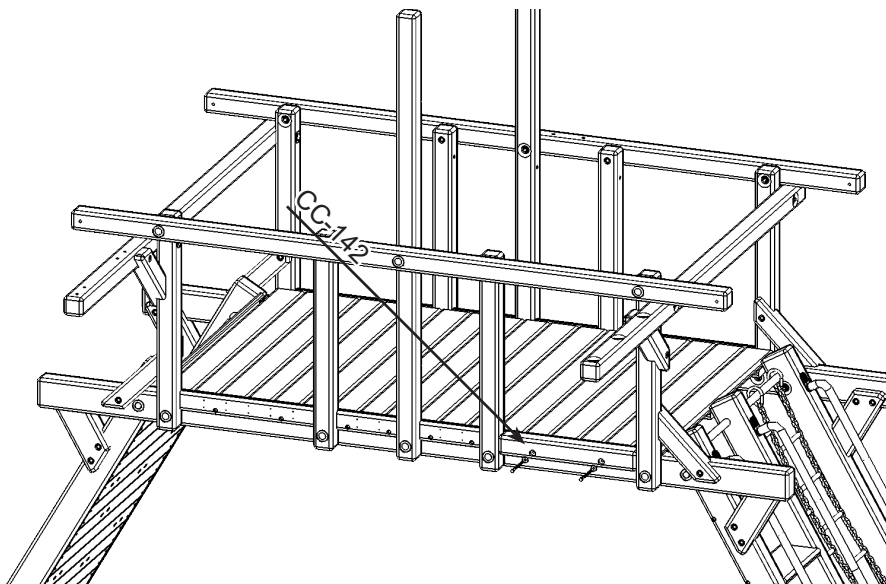

MegaSized Jaguar Playcenter Base Install





PARTS NEEDED

453-E- Playgrip Safety Handle- (4)
 453-K- Ductile Iron Swing Hanger- (2)

6N- 1/4" USS Flatwasher- (8)
 6A-6- 3/8" x 5" Hex Bolt- (4)
 6O- 3/8" USS Flatwasher- (4)
 6A-7- 3/8" Nylon Insert Locknut- (4)

HARDWARE NEEDED

(8) 6H- #14 x 2" Pan Phillips T/S- (8)
 (4) 6A-8- 3/8" Bolt Cup- (4)
 (4) 6L- 3/8" Split Lockwasher- (4)
 (4) 6A-1- 3/8" Acorn Nut Plated- (4)

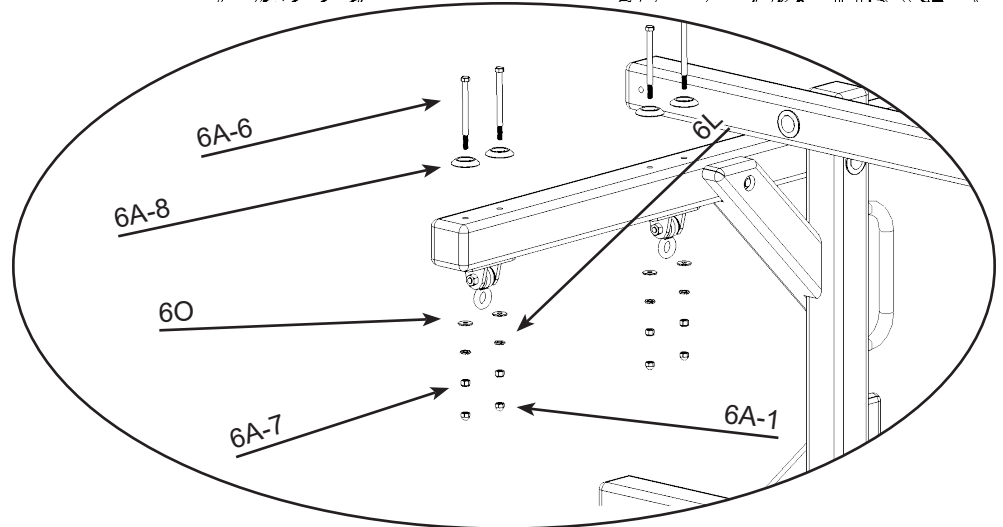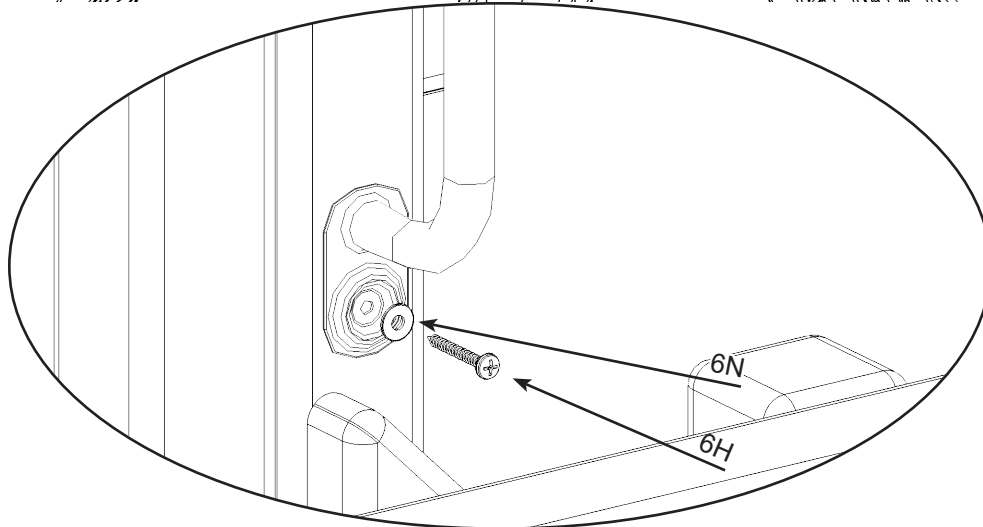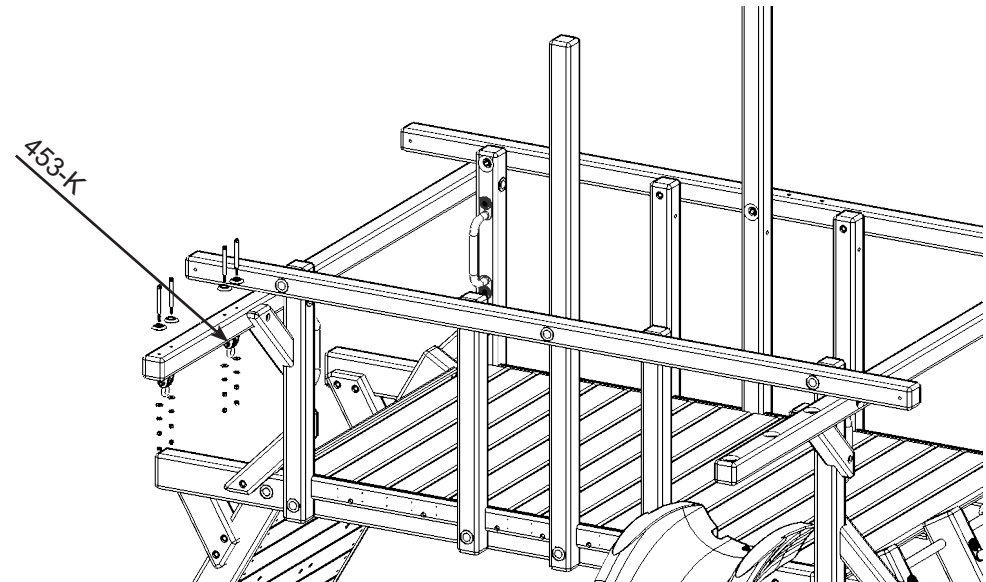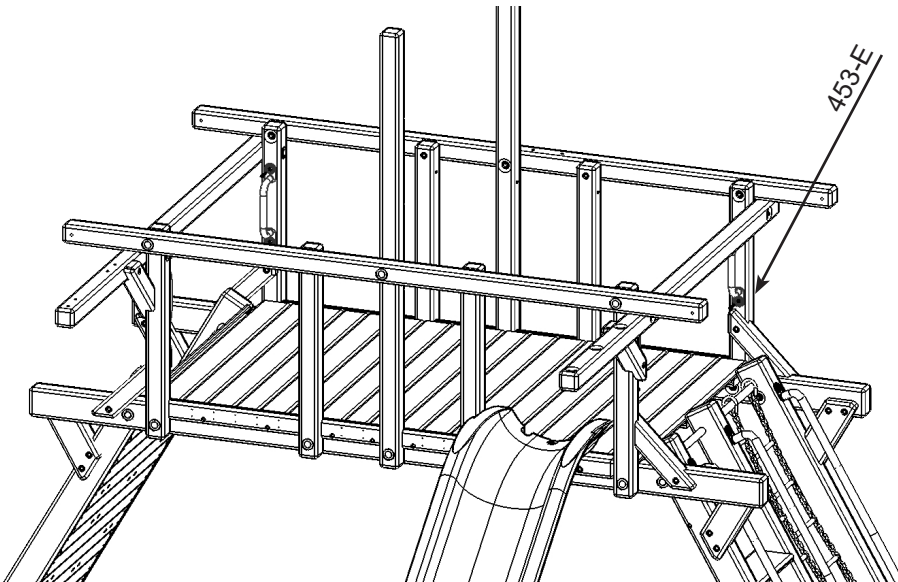


MegaSized Jaguar Playcenter Base Install

PARTS NEEDED

453-I- 20" Trapeze Bar- (1)
453-H- 18' Yellow Rope- (3)
CC-103- 28" Rope Rung- (7)

HARDWARE NEEDED

6A-9- 8 x 80mm Spring Clip- (2)

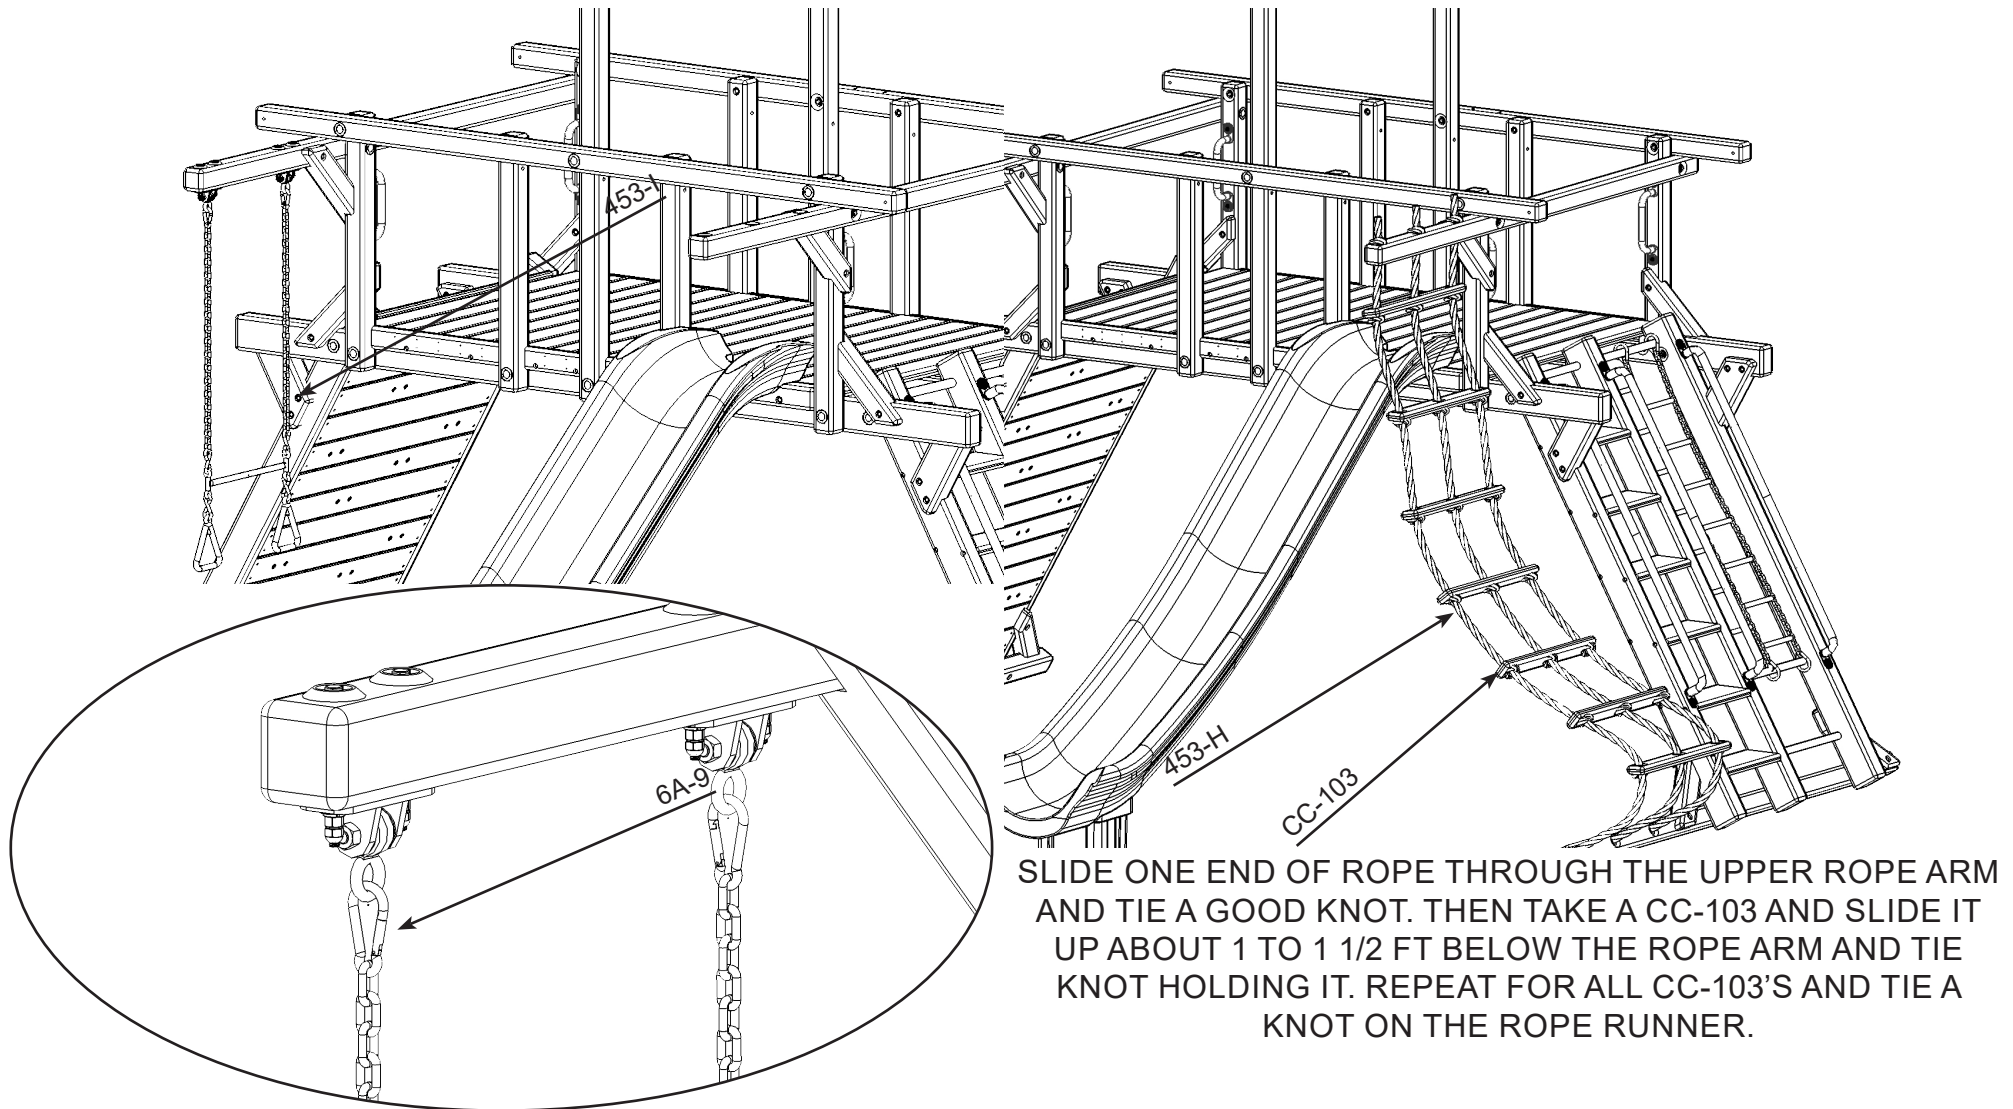

MegaSized Jaguar Playcenter Base Install

PARTS NEEDED




CC-143- 11" Rope Block-
453-G- 16' Yellow Rope-

(1)
(1)

HARDWARE NEEDED

6O- 3/8" USS Flatwasher-
6G- 3/8" x 5" Hex Lag Screw-

(2)
(2)

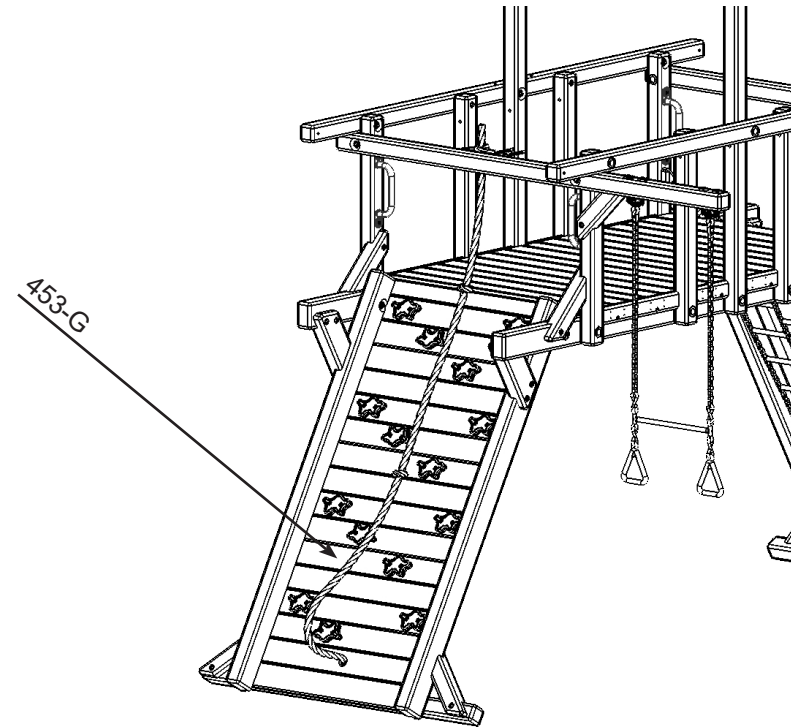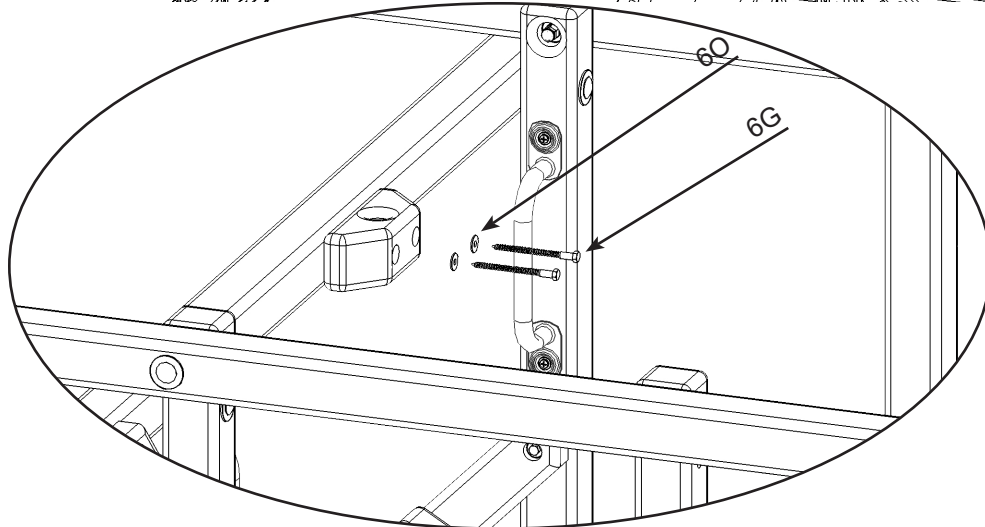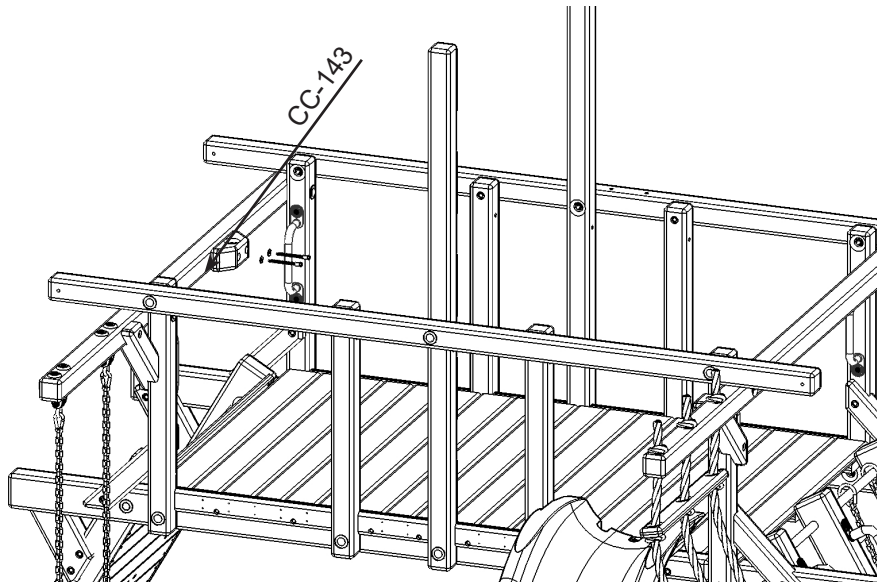

SLIDE 453-G THROUGH CC-143 AND TIE A KNOT HOLDING IT IN PLACE. WORK YOUR WAY DOWN TYING A KNOT EVERY 2 TO 3 FEET UNTIL YOU STRING THE ROPE THROUGH ROCKWALL BOARD WITH ROPE HOLE AND TIE A KNOT SECURING THE ROPE TO THE ROCKWALL.

MegaSized Jaguar Playcenter Base Install

PARTS NEEDED

453-M- Tire Swivel-

(1)

6A-3- 1/2" x 4 1/2" Carriage Bolt-

(2)

6P- 1/2" USS Flatwasher-

(2)

6C- 1/2" Hex Nut-

(2)

HARDWARE NEEDED

6Q- 3/4" USS Flatwasher-


(2)

6M- 1/2" Split Lockwasher-


(2)

6A-1- 1/2" Acorn Nut Plated-


(2)

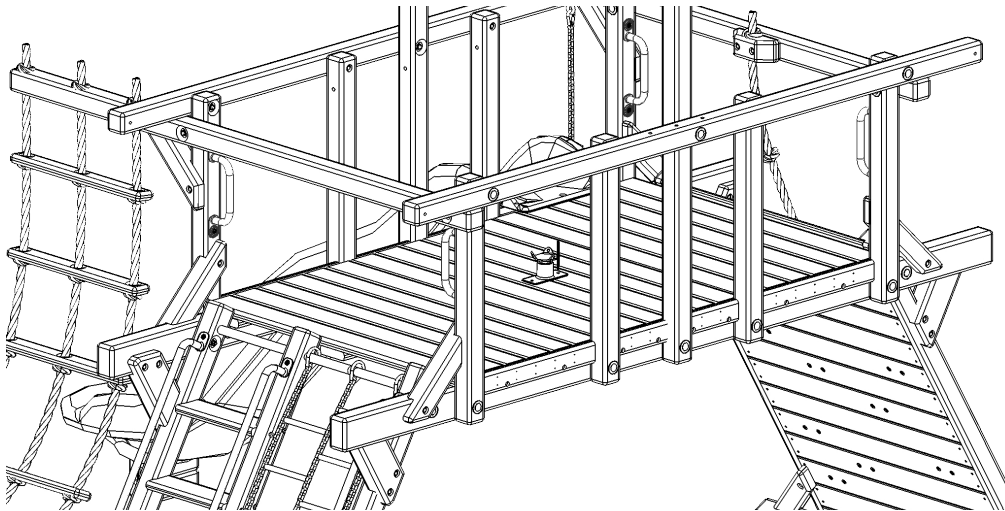

FIND THE CENTER OF THE DECK AND MARK THE HOLES TO BE DRILLED

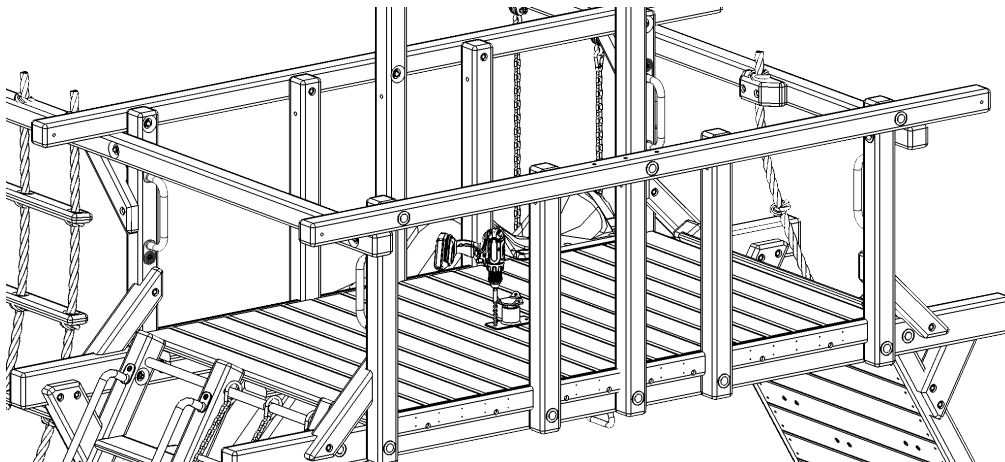

USING A 9/16" BIT DRILL THROUGH THE DECK ON THE MARKED HOLES

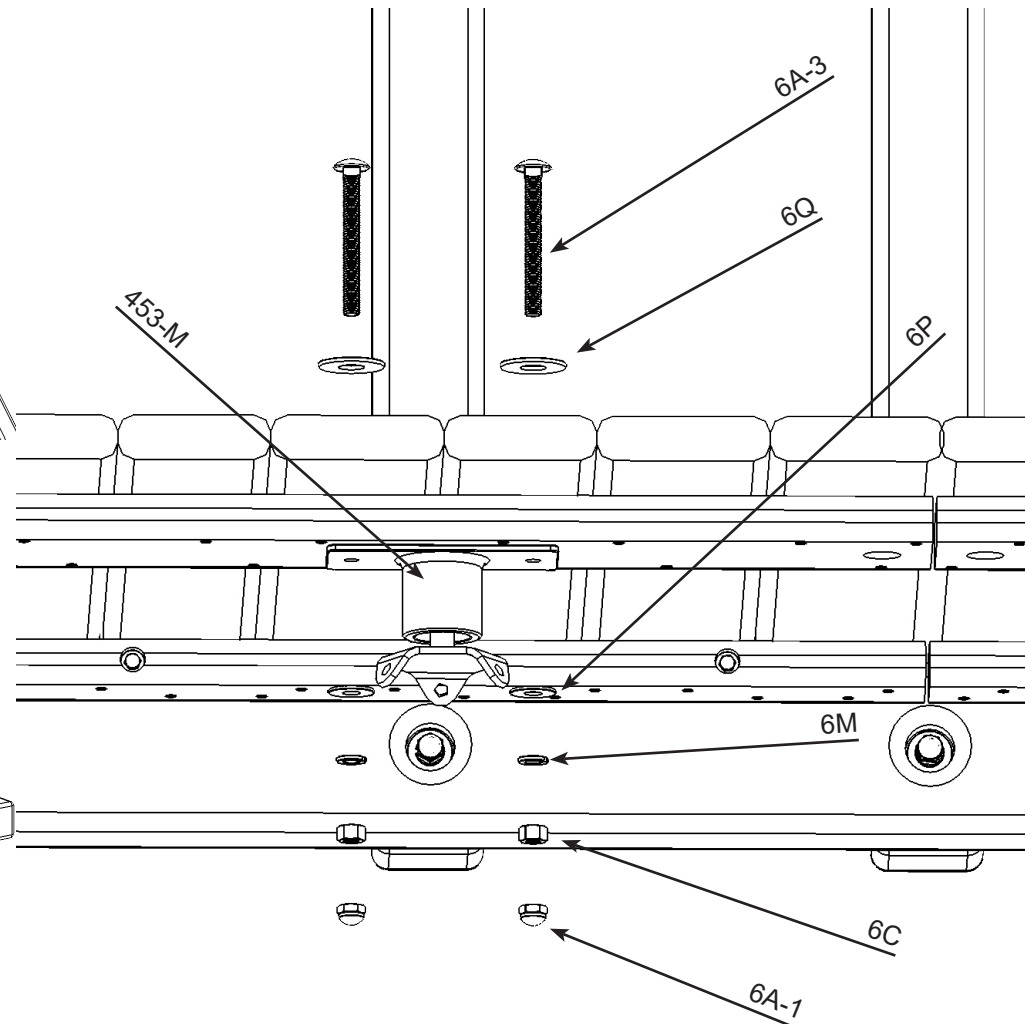

MegaSized Jaguar Playcenter Base Install


PARTS NEEDED

Tire Swing- (1)
453-B- Swingbeam T-Bracket- (1)

6A-9- 8 x 80mm Spring Clip- (3)
SB-19- 3/4" USS Flatwasher- (2)
SB-16- 1/2" Split Lockwasher- (2)
SB-2- 1/2" Acorn Nut Plated-

HARDWARE NEEDED

(3) SB-3- 1/2" x 3 1/2" Carriage Bolt- (2)
(2) SB-18- 1/2" USS Flatwasher- (2)
(2) SB-7- 1/2" Hex Nut- (2)

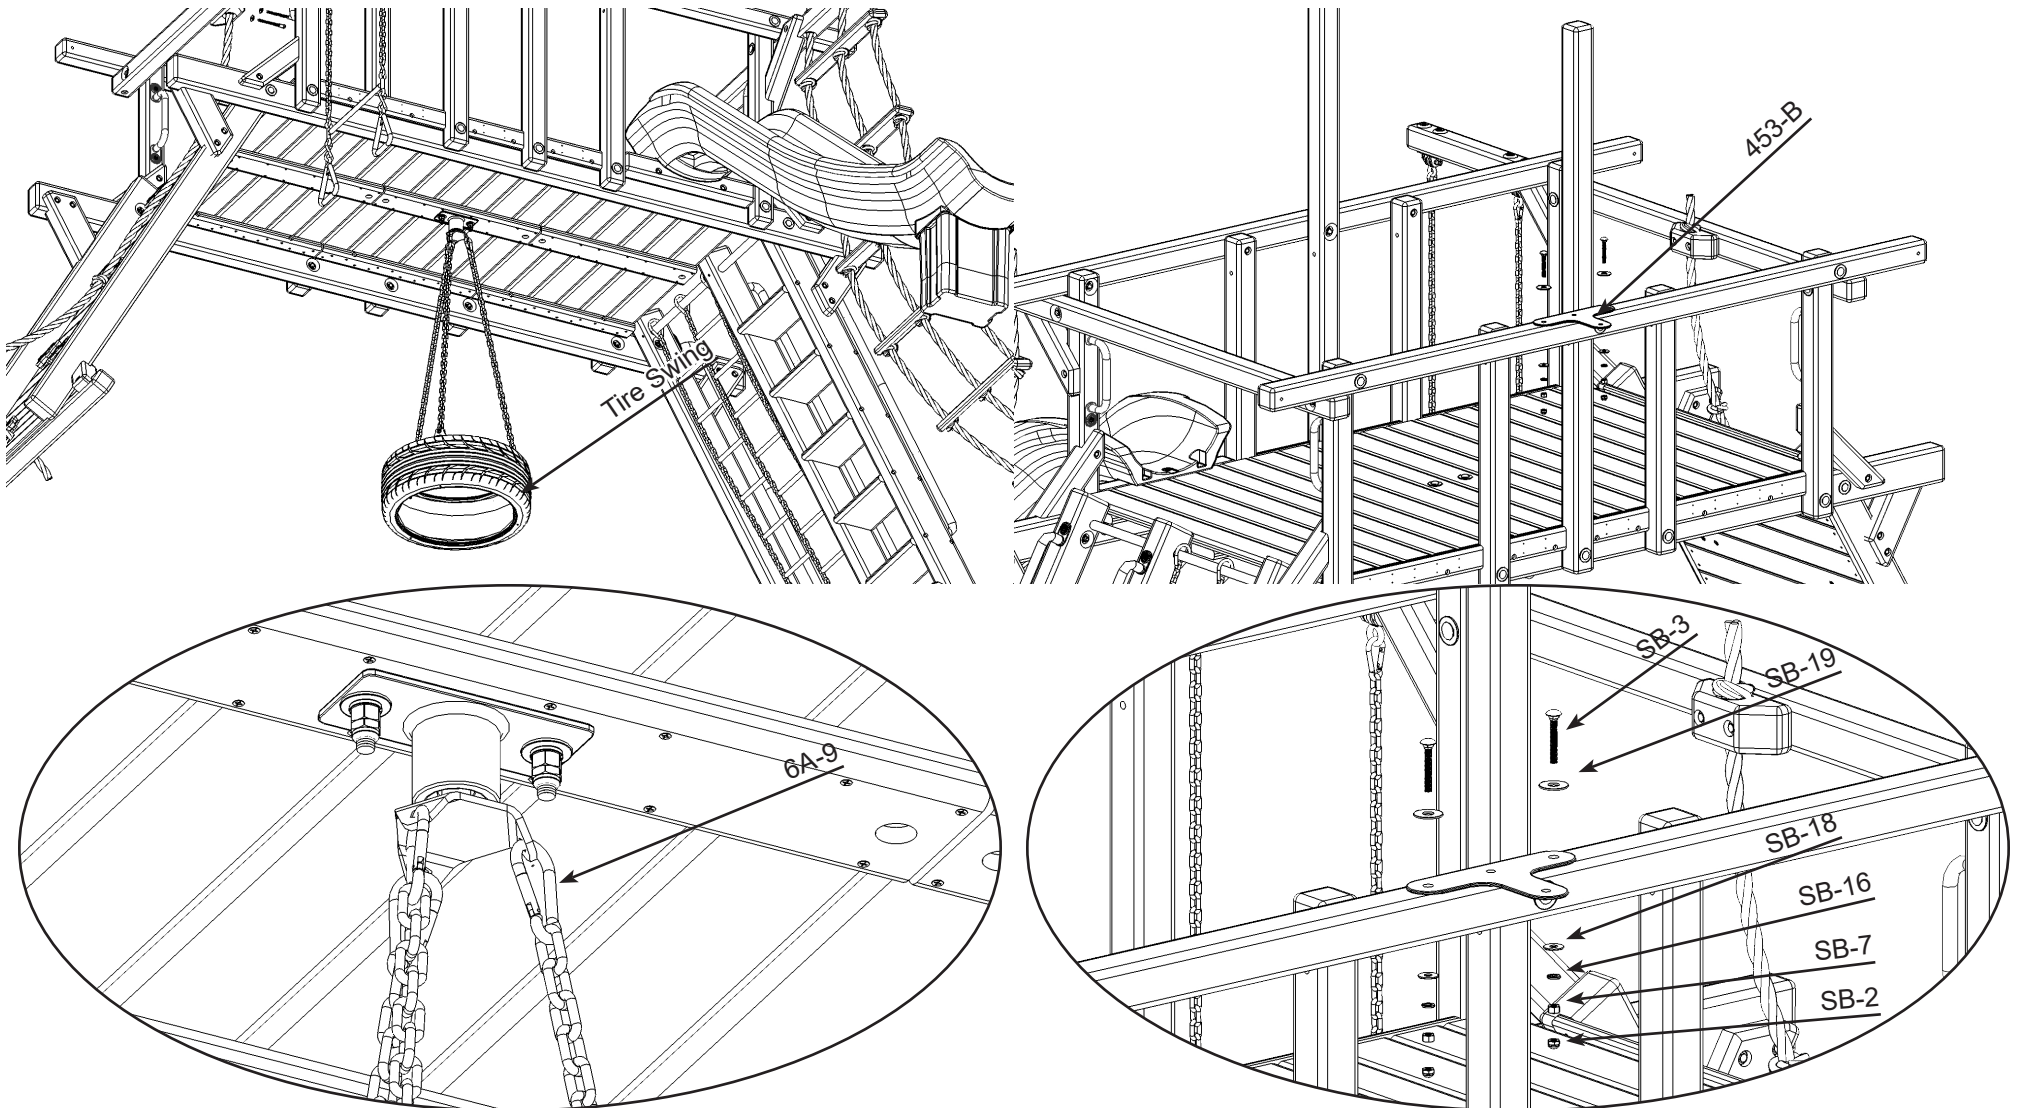

MegaSized Jaguar Playcenter Base Install

PARTS NEEDED

A-Frame Assembly-

(1)

SB-4- 1/2" x 7" Carriage Bolt-
SB-19- 3/4" USS Flatwasher-
SB-16- 1/2" Split Lockwasher-
SB-2- 1/2" Acorn Nut Plated-
SB-17- 3/8" USS Flatwasher-

HARDWARE NEEDED

(1)

SB-5- 1/2" x 9" Carriage Bolt-
SB-18- 1/2" USS Flatwasher-
SB-7- 1/2" Hex Nut-
SB-12- 3/8" x 5" Hex Lag Screw-

(1)




(2)

(2)

(2)

(2)

SET A-FRAME ON TOP JOIST AND SQUEEZE THE LEGS TOGETHER UNTIL LEVEL

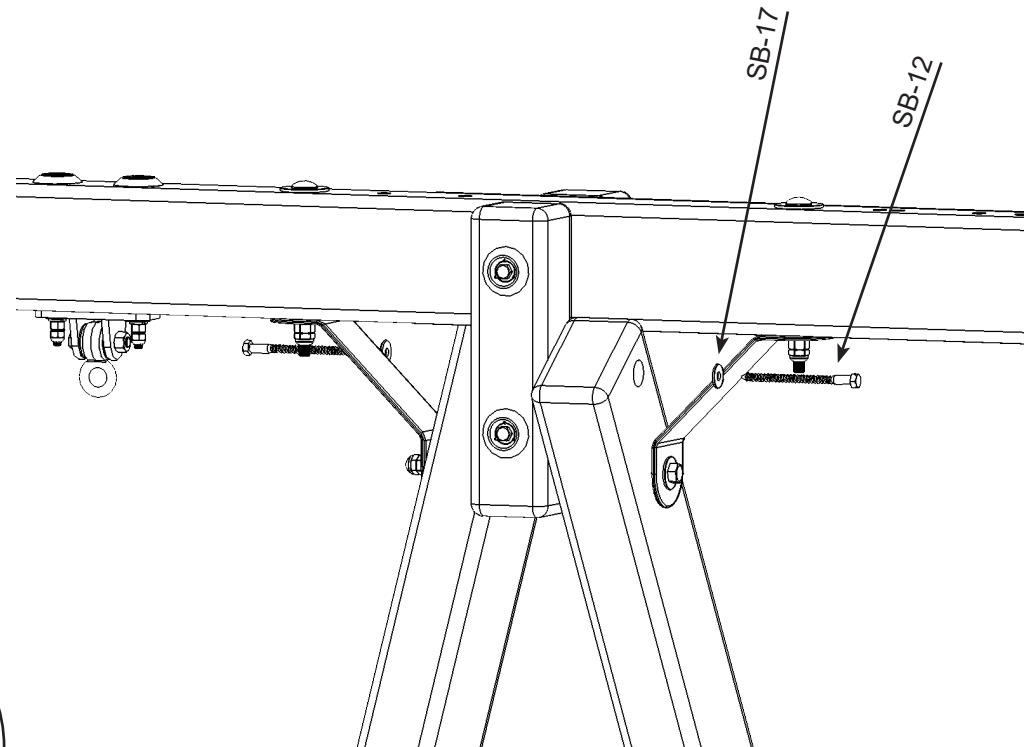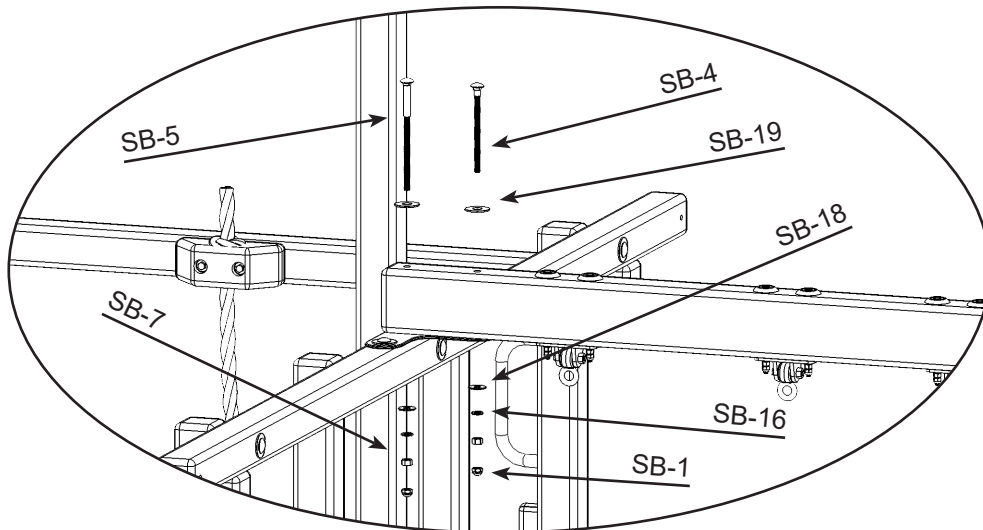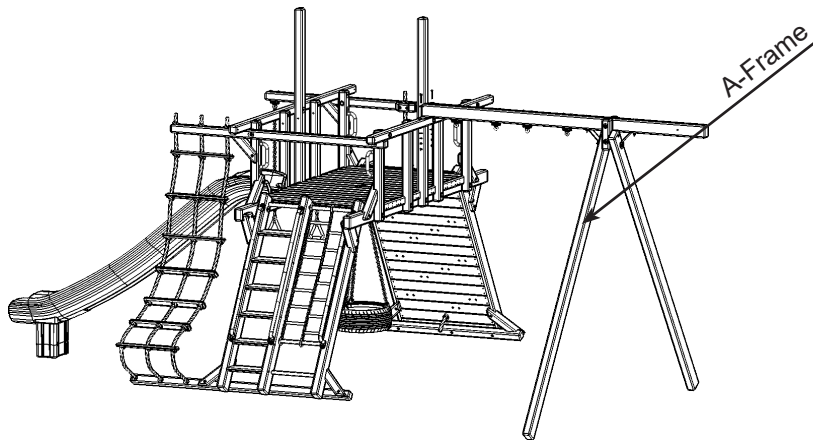

AFTER ATTACHING AND LEVELING THE A-FRAME LOCK IN PLACE AS SHOWN

MegaSized Jaguar Playcenter Base Install


PARTS NEEDED

CC-182- 96" A-Frame Crossmember- (1)
453-N- 84" Chained Belt Swing- (2)



SB-4- 1/2" x 7" Carriage Bolt- (2)
SB-18- 1/2" USS Flatwasher- (2)
SB-7- 1/2" Hex Nut- (2)
SB-21- 8 x 80mm Spring Clip- (4)

HARDWARE NEEDED



(2) SB-19- 3/4" USS Flatwasher- (2)
(2) SB-16- 1/2" Split Lockwasher- (2)
(2) SB-2- 1/2" Acorn Nut Plated- (2)

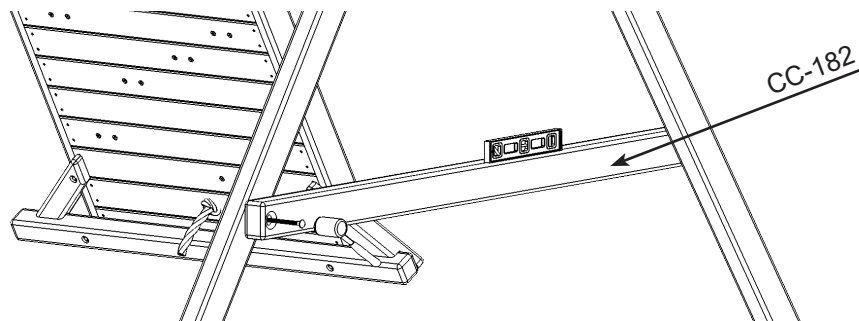

LEVEL CROSSMEMBER ACROSS THE A-FRAME LEGS AND MARK HOLES

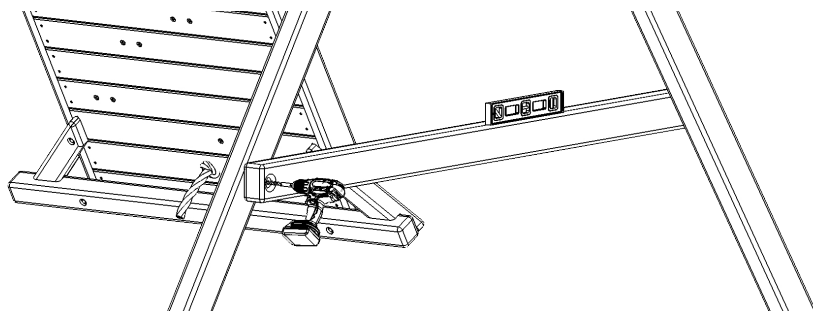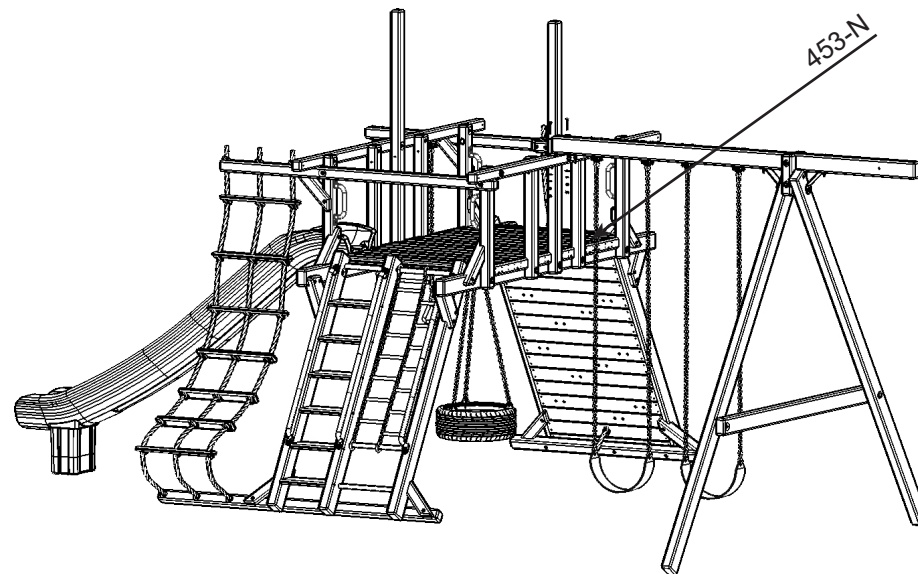

USING A 9/16" DRILL BIT DRILL OUT HOLES AND ASSEMBLE AS SHOWN

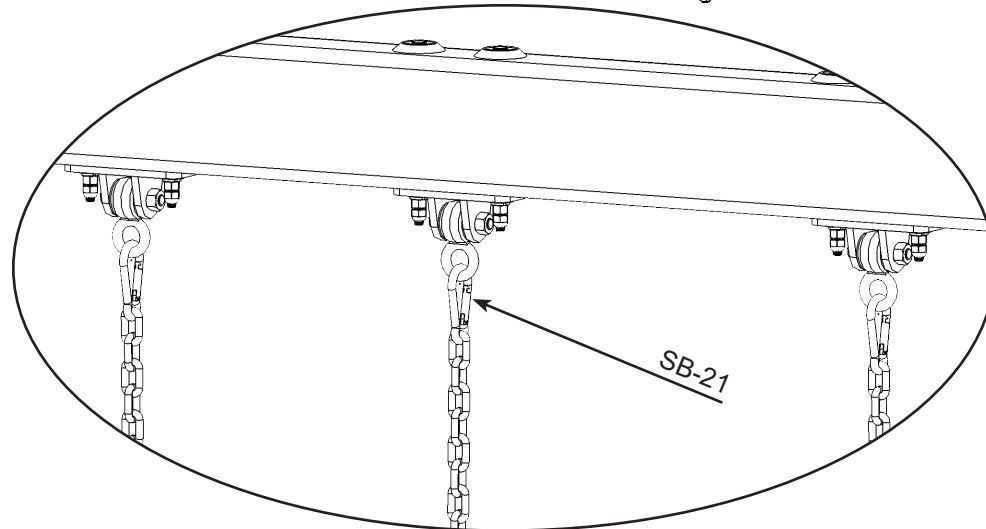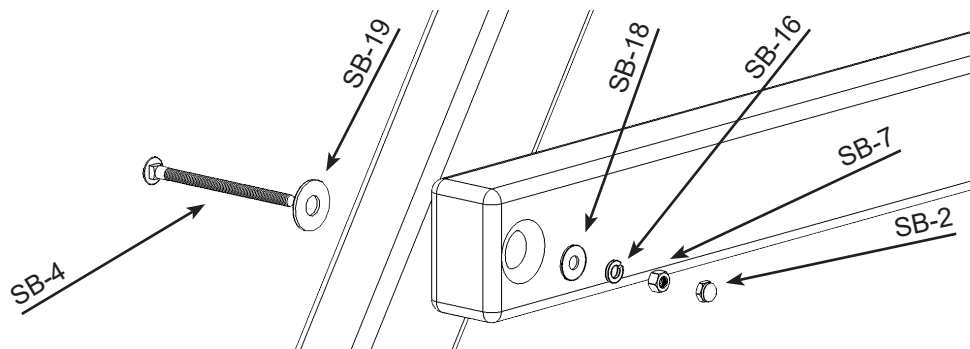

MegaSized Jaguar Playcenter Base Install


PARTS NEEDED

453-Q- 19" Ships' Wheel-
453-P- Telescope-

(1)
(1)

HARDWARE NEEDED

(Hardware with Accessories)

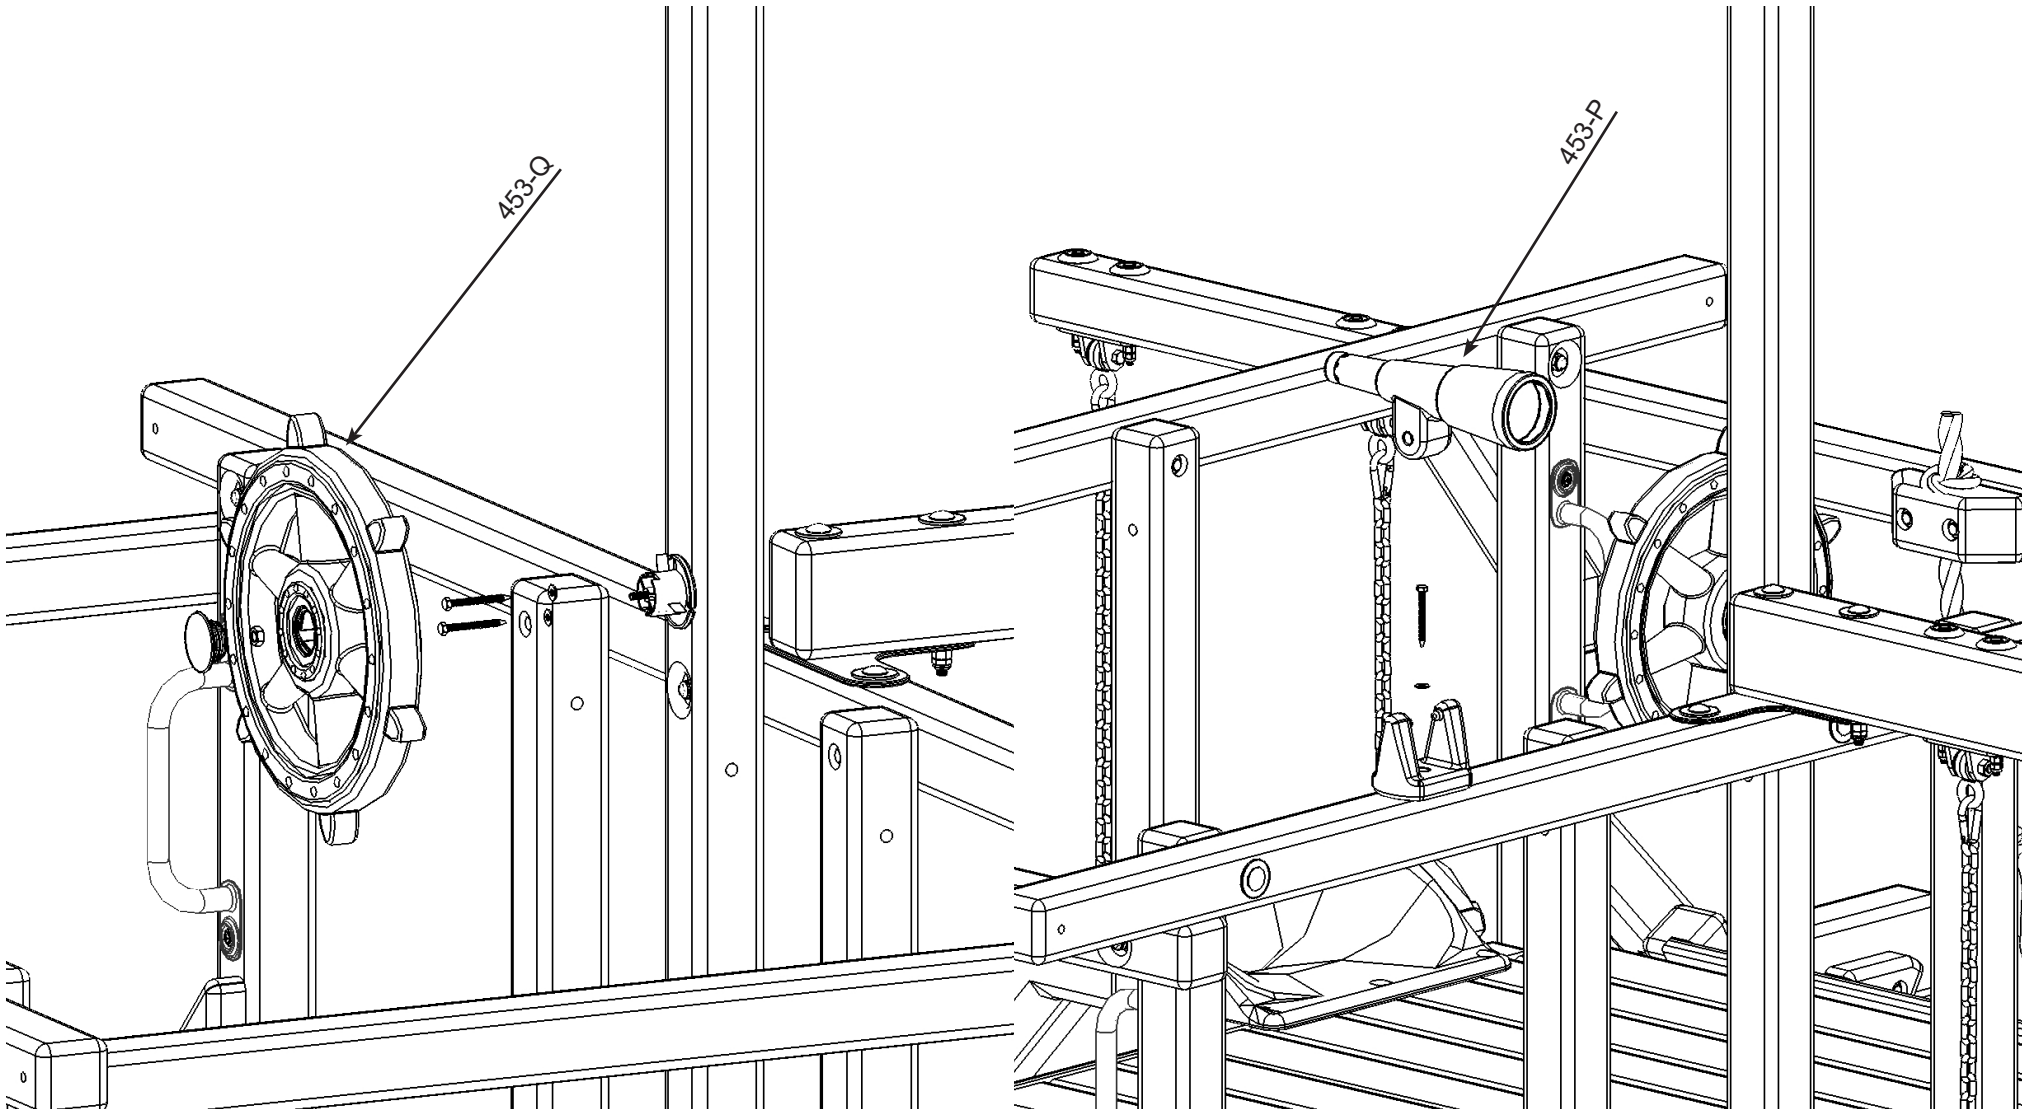

MegaSized Jaguar Playcenter Base Install Finish

