

KSI-601 Version 2020



4465 West Sam Houston Parkway N.
Houston, Texas 77041
WWW.TREEFROGSSHOWROOMS.COM

© 2018 KID STRUCTURES INC.

Sections

- Section 1: Cover & Liability Info
- Section 2: Product Parts
- Section 3: Sub-Assemblies
- Section 4: Main Assembly
- Section 5: Rail Options
- Section 6: Treehouse Option

IMPORTANT - PLEASE READ

As fresh lumber acclimates to its new environment, the natural tendencies of the tree can show itself in the form of checks, or “cracks” in the lumber. In almost all cases this is normal and it will not affect the structural integrity of your play set.

Cosmetic defects that do not affect the structural integrity of the product, or natural defects of wood such as warping, checking or any other physical properties of wood that do not present a safety hazard, are not covered by this warranty.

Defects that develop because the product is exposed to extreme climate conditions are not covered by this warranty. Defects that develop as a result of faulty or improper installation of the product are also not covered by this warranty.

Most cracks are not warrantable, however if you believe that the integrity of your play set is compromised by this natural occurrence, please contact the Tree Frogs Swing Set Dealer that you purchased your swing set from.

We appreciate your purchase and know that you will enjoy your play system for many years to come.

Tools Needed for Assembly

Tape Measure	24" Level	Angle Square
Phillips Screw Driver	3/8" Cordless Drill or Electric Drill	3/8" Drive Ratchet or Electric Impact Gun
Claw Hammer or Rubber Mallet	Pliers or Vise Grips	7/16" Deep Well Socket
9/16" Deep Well Socket	3/4" Deep Well Socket	1/8", 1/4", and 9/16" Drill Bits
Phillips Head Screw Bits	An Adult with two Adult Helpers	

Please familiarize yourself with the install manual, parts/components and general construction process of your new swing set before getting started. Approximate assembly time: 6 to 8 hours. 6 foot unobstructed safety perimeter around swingset recommended.

Pre-Assembly Hints

- Depending on your experience, assembly of our play sets can take as little as 6 hours up to 24 hours, depending on size, after inventory of parts; therefore, we recommend you set aside a full two days for assembly.
- Identify all of the parts for your play set. Empty each box and lay out boards so you can see each part. Your instruction book will have detailed drawings that will make it easy for you to recognize individual parts. Keep all hardware and metal parts separate from wooden pieces.
- After everything is laid out, check carefully to ensure all parts are present. Make sure there are no broken boards.
- Find an area to sort your hardware. It is best to open the hardware on a solid surface so that you do not lose any pieces in the grass.
This will save time and familiarize you with all the different pieces in the hardware bag.
- ****Important note: Wood has some natural defects such as knots, surface cracks, etc... We reject parts that are structurally defective. We use a high quality lumber in our structures; however, you should inspect each part for splinters or rough spots and sand them smooth to prevent injury.****
- After familiarizing yourself with all of the components, read all instructions thoroughly. Reading instructions after you have studied the parts will help you understand more clearly the installation process, and help to eliminate unnecessary mistakes.
- Pay close attention to the diameter and length of each bolt and screw.
- Never tighten hardware completely at first. It helps to have some adjustment for bolt alignment while you are attaching parts together. After everything is square, tighten each joint.
- After the main unit is assembled it is critical that the floor is level and square. If the main frame is not level, the walls and floor will be out of square.
- After you complete installation, make sure every bolt, screw, and nut is tight, and every board is secure. Wood will expand and contract with the seasons.
- Place the set on level ground, not less than 6ft from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- All 1/4" and 3/8" lag bolts must have pre-drilled holes 1-1/2" to 2" deep. Use a 1/8" drill bit for the 1/4" lag bolts and 1/4" drill bit for 3/8" lag bolts. Use pre-drilled holes in facias as a reference for placing lag bolt pilot holes.
- If a board lifts or rises causing a gap between boards when running in lag bolts or screws, back out the screw or lag bolt and press or apply pressure (but not enough to crack or break board) while re-running in the lag bolt or screw in the same hole.
- Do not over tighten bolts, lag bolts or screws. You can damage boards, break hardware, and/or strip out the hardware.
- When using hammer do not beat on the hardware, but gently tap it in. Never beat on the wood as it will leave marks.

Leveling Your Swing Set During Assembly

- Complete the steps which will be the basic frame of the fort {i.e. four corner posts with base (sand box boards) and deck supports}
- Position in the most level area chosen for the play set, keeping in mind the location and size of the swing beam, ladder, slides, etc. that extend off the fort.
- Once the frame is in the final position, check for vertical and horizontal levelness to determine which side(s) will need to be dug into the ground to level the play set.
- With a shovel, score the ground around the outside edges of the sandbox boards on the 'high' side of the fort. This is the area that will be dug in. Make sure to score deep enough; the scored lines will be your digging template.
- Push the frame off and away from the scored area, far enough to dig and remove dirt to reach the appropriate depth.
- Dig a channel along the scored line(s) for the base of the fort (corner post and sandbox boards) to rest into. Dig the channel(s) to the same level depth. The bottom of the channel(s) should be level to each other so your frame doesn't teeter or rock because the channel(s) are uneven.
- Once you have removed enough grass and dirt, slide/push the frame into the channel(s). Place a level on the vertical and horizontal boards of the frame to determine if enough soil, or too much, was removed.
- Repeat this process until the basic frame is plumb and level and in its final position before completing the rest of the assembly.
- Measure to make sure fort is square.

**** Important: if you require a channel depth of more than 6", then we recommend you have your play set area professionally graded before completing assembly. ****

Choosing A Location For Your Playset

When choosing a location for your swing set, always keep your child or children's safety in mind. Here are some recommendations to help you locate and install a safe play area.

- This play set is designed for the use of 4 occupants who have a combined weight not exceeding 800 pounds on the elevated floor; 3 occupants who have a combined weight of 525 pounds on the swing area; for a total Unit capacity of 5 occupants who have a combined weight of 1325. (this weight is not including the picnic table area)
- On-site adult supervision is required.
- The swing set should be located on level ground. The stationary components such as ladders and slides are required to be a minimum of six feet from any structure or obstruction such as a fence, garage, house, tree, overhanging branches, electrical wires, clotheslines, etc. Any swinging equipment is also required to be a minimum distance twice the height of the swing beam away from these obstructions or structures as well. The swing set should be located a safe distance from any water hazards, such as a lake, river, bayou, swimming pool, etc.
- Do not install this residential swing set in a commercial setting. This swing set is not manufactured for commercial usage and will void all warranties. Tree Frogs Wooden Swing Set Factory is not responsible for any damages or injuries resulting from this swing set being used in a commercial setting.
- Never install this swing set indoors; or over concrete, asphalt, packed earth, grass, carpet or any other hard surface. A fall onto a hard surface can result in serious or fatal injury.
- The U.S. Consumer Product Safety Commission (CPSC) recommends that you install and maintain a resilient surface under your swing set. The CPSC's Consumer Information Sheet for Playground Surfacing Materials is on the next page. A resilient surface, should be installed after the swing set has been completely assembled according to these instructions. The swing set must rest on solid ground. Please note that this swing set has a maximum fall height of 7'.

Maintaining Your Swing Set

Here are some maintenance tips required to insure safe play on your swing set for years of fun.

- At the beginning of each usage season and every two weeks during, check: nuts and bolts and tighten as needed, swing seats, chains, ladders, slides, rope and wood components for sign of deterioration and replace if necessary.
- On a yearly basis, we recommend that you coat your swing set with a sealant or preservative. You may also want to spot sand any areas prior to sealing.

**** Special note: Although we recommend that you reseal your swing set annually, you may have to touch up the high traffic areas and/or areas that have a high exposure to direct sunlight.****

- Be sure that the sealant you select is non-toxic and child safe. Your local Tree Frogs Wooden Swing Set Factory dealer may offer a complete power wash and reseal and maintenance program.
- Do not use line trimmers or "weed eaters" around your swing set. The line will remove both paint and wood from uprights and base pieces. Any damage resulting from this type of abuse is not covered under our limited warranty.
- Remove plastic swing seats and take in doors or do not use when temperature drops below 0°F.

Please keep this install manual for future reference.

To insure SAFE PLAY adults must teach children:

- Not to walk close to, in front of, behind, or between moving items.
- Not to swing empty swing seats.
- Not to swing sideways into the path of adjacent swings.
- Not to use the swing set in a manner other than that for which it is intended.
- Not to get off the equipment while it is in motion.
- Not to jump off the tower.
- Not to stand in the swing seats.
- Not to swing so high that chains become slack, or above the height of the swing support.
- Not to jump on a slide.
- Not to climb on top of the swing support.
- Not to attach to the swing set any item that is not specifically designed for use with the equipment, such as (but not limited to) jump ropes, clotheslines, pet leashes, cables, and chains. These may become strangulation hazards.
- To hold on to swings and climbers with both hands.
- To slide feet first, never head first.
- To watch for other children while swinging or playing near the swing set.

To also insure SAFE PLAY adults must:

- Limit climbing and swinging heights to each child's ability.
- Verify that suspended climbing ropes are secured at both ends.
- Verify that suspended climbing ropes cannot be looped back on themselves.
- Dress children appropriately for play. Use well-fitted shoes that do not have slippery soles.
- Avoid ponchos, scarves, hoods, loose fitting clothing, neckties, and any clothing with a drawstring. Serious injury could result should any part of the children's clothing become entangled in the swing set.
- Do not allow children to play wearing helmets.
- Remember that children are inventive. When they develop games that are unsafe, be alert and change the rules.

Weight limits for Treefrogs Swingsets

Fort Platform: 800 Lbs.Total Weight.

Swing Belts: 175 Lbs.

Trapeze: 125 Lbs.

Full Bucket Swing: 50 Lbs.

Toddler Bucket Swing: 50 Lbs.

Tire Swing: 125 Lbs. Total Weight

Rope Ladder: 75 Lbs.

Rock Wall: 150 Lbs.

All Slides: 125 Lbs.

Tree Frogs recommends that the weight limits for all components must not be exceeded. Failure to adhere to these and other safety guidelines could result in damage to the swing set. and/or injury to the users.

CONSUMER INFORMATION SHEET FOR PLAYGROUND SURFACING MATERIALS

The U.S. Consumer Product Safety Commission (CPSC) estimates that about 100,000 playground equipment related injuries resulting from falls to the ground surface are treated annually in U.S. hospital emergency rooms. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self-evident that a fall onto a shock-absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. However, it should be recognized that some injuries from falls will occur no matter what playground surfacing material is used.

Playground equipment should never be placed on hard surfaces such as concrete or asphalt. Grass may appear to be acceptable, but can turn to hard packed earth in areas of high traffic. Shredded bark mulch, wood chips, or fine gravel are considered to be acceptable shock absorbing surfaces when installed and maintained at a sufficient depth under and around play equipment.

TABLE 1 -CRITICAL HEIGHTS (in feet) OF TESTED MATERIAL

MATERIAL	UNCOMPRESSED DEPTH			COMPRESSED DEPTH
	6 Inch	9 Inch	12 Inch	9 inch
Wood Chips	7	10	11	10
Double Shredded Bark Mulch	6	10	11	7
Engineered Wood Fibers	6	7	>12	6
Fine Sand	5	5	9	5
Coarse Sand	5	5	6	4
Fine Gravel	6	7	10	6
Medium Gravel	5	5	6	5
Shredded Tires**	10-12	N/A	N/A	N/A

** This is data from tests conducted by independent testing laboratories on a 6 inch depth of uncompressed shredded tire samples produced by four manufacturers. The test reported critical heights, which varied from 10 feet to greater than 12 feet. It is recommended that persons seeking to install shredded tires as a protective surface request test data from the supplier showing the critical height of the material when it was tested in accordance with ASTM F1292.

Table 1 should be read as follows: If, for example, uncompressed wood chips are used at a minimum of 6 inches, the Critical Height is 7 feet. If 9 inches of uncompressed wood chips are used, the Critical Height is 10 feet. It should be noted that, for some materials, the Critical Height decreases when the material is compressed. It is recommended that a shock absorbing material should extend a minimum of 6 feet in all directions from the perimeter of stationary equipment such as climbers and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of 2 times the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for your equipment. The choice of a material depends on the type and height of the playground equipment, the availability in your area, and its cost.

This information has been extracted from the CPSC publications "Playground Surfacing-Technical Information Guide" and "Handbook for Public Playground Safety." Copies of these reports can be obtained by sending a postcard to:

Office of Public Affairs
U.S. Consumer Product Safety Commission
Washington, D.C. 20207

Toll-free Hotline: 1-800-638-2772 or at <http://www.cpsc.gov>

2018 TREE FROGS Limited Lifetime Warranty

Limited 10-Year Warranty, Limited 5-Year Warranty

Tree Frogs Warranties all Jaguar Playcenter Series, Bengal Forts Series, MegaDeck Fort Series Redwood components and Cedar components against structural failure due to warping, wood rot, insect infestation (excluding Carpenter Bees) or decay for the period of 10 Years from the date of original purchase. This warranty does not cover cracks, fissions, checks, fading, knots and weathering that are normal natural characteristics of wood, that do not affect the structural integrity of the product. The Redwood and Cedar components warranty is extended to a Limited Lifetime Warranty to the original owner upon registering this warranty within 90 days of purchase at www.treefrogsswingsets.com.

Tree Frogs Warranties all Parrot Island Fort Series, Parrot Island Playcenter Series, Rainforest Cottage Series Cedar components against structural failure due to warping, wood rot, insect infestation (excluding Carpenter Bees) or decay for a period of 10 Years from the date of original purchase. This warranty does not cover cracks, fissions, checks, fading, knots and weathering that are normal natural characteristics of wood, that do not affect the structural integrity of the product.

Tree Frogs Warranties all Toucan Fort Series, Toucan Playcenter Series, Orangutan Fort Series, Stand Alone Swings Cedar components against structural failure due to warping, wood rot, insect infestation (excluding Carpenter Bees) or decay for a period of 5 Years from the date of original purchase. This warranty does not cover cracks, fissions, checks, fading, knots and weathering that are normal natural characteristics of wood, that do not affect the structural integrity of the product.

In addition, a 10-Year Limited Warranty applies to all roto-molded slides, ductile iron swing hangers, tire swivels, metal climbing rungs and swing beam brackets against failure due to rust or failure in defect in material. Surface rust, fading, weathering, cracks/chips in coatings and corrosion that do not affect structural integrity are not covered by this warranty. Furthermore, a 5-Year Limited Warranty applies to all components & accessories including all swings, chain ladders, gliders, handles, brackets, bubble panels, tarps, steering/ships wheels, telescopes, binoculars, buoy ball, blow molded slides and disc seat that are not covered under the 10-Year Warranty to be free from defects in material and workmanship. Surface rust, fading, weathering, cracks/chips in coatings and corrosion that do not affect structural integrity are not covered by this warranty.

And for a period of 1-Year Tree Frogs warranties all ropes, structural foam molded slides to be free of defects in material and workmanship. Fading is not considered a defect and may occur with seasonal and geographical conditions.

****10-Year Warranty Exclusion:** Toucan Fort Series, Toucan Playcenter Series, Orangutan Series, Stand Alone Swings (Limite 5Yr/5Yr/1Yr WARRANTY).

This warranty is limited to a repair or replacement of the defective part. Product covered under this warranty will be shipped at the customer's expense. Tree Frogs is not responsible for any expense associated with freight, or delivery and installation of the warranted part(s). Tree Frogs reserves the right to inspect all warranty claim parts for which a claim has been made.








This limited warranty applies only to the original retail purchaser and for residential use only, non-residential use voids warranty. These warranties void when product is transferred or sold or no longer in possession by original owner. A copy of the original invoice must be presented to initiate warranty claim. This limited warranty does not cover damage from abuse, acts of God, vandalism, maintenance guideline neglect, alterations, normal wear & tear, use other than residential, unauthorized modification, damage due to moving of product or improper installation and or use. Any modification could damage the structural integrity of the play system and voids all warranties.








This warranty is exclusive and expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use. Tree Frogs does not assume, or authorize any person to assume for us, any other liability in connection with the sale of our products.








This warranty gives you specific legal rights, and you also may have other rights that vary from state to state. Register your play system's warranty at www.treefrogsswingsets.com.








Tree Frogs reserves the right at any time to change product specifications or substitute similar components.








See your instruction manual for guidelines on regular maintenance. <http://treefrogsshowrooms.com/installation-manuals/>. Your child's play system & perimeter play zone should be inspected regularly for any wear & safety hazards.

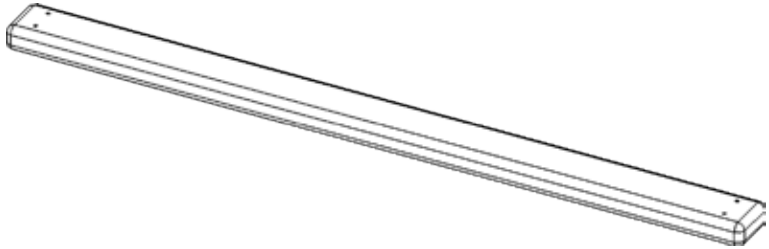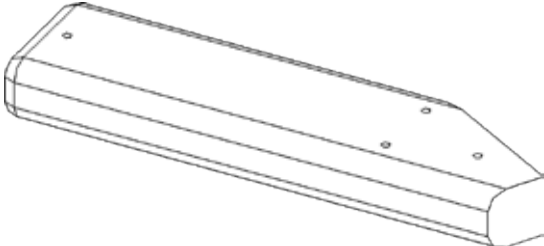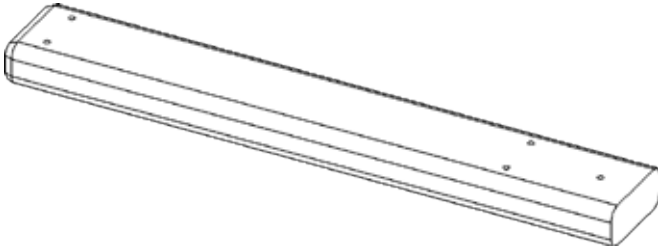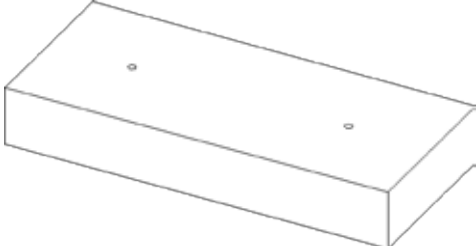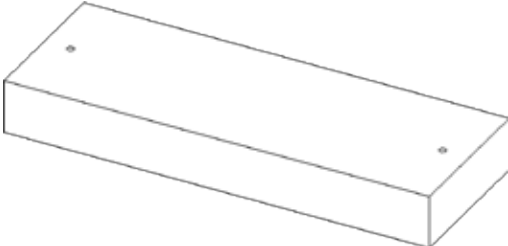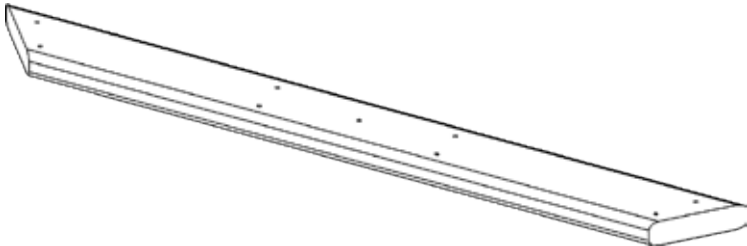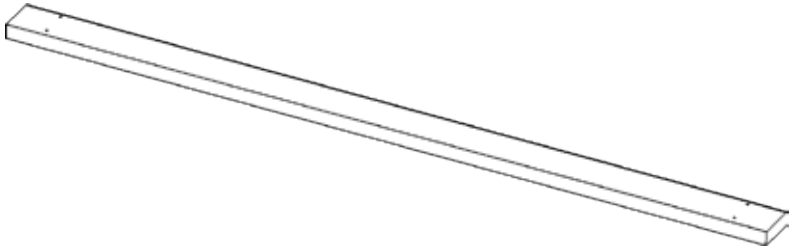
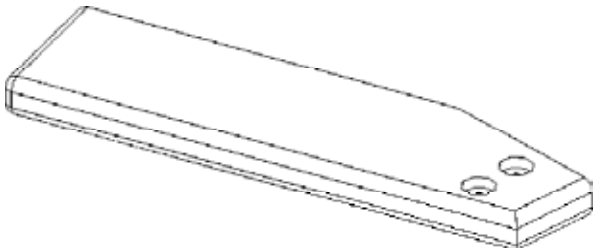
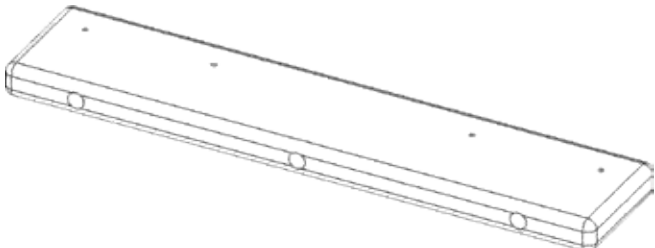
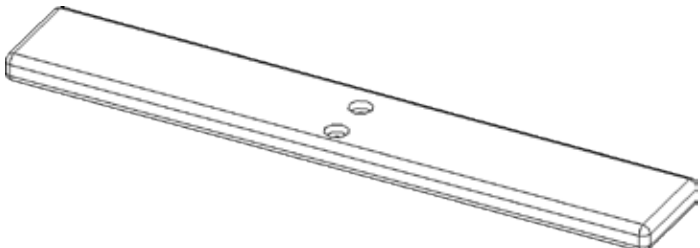
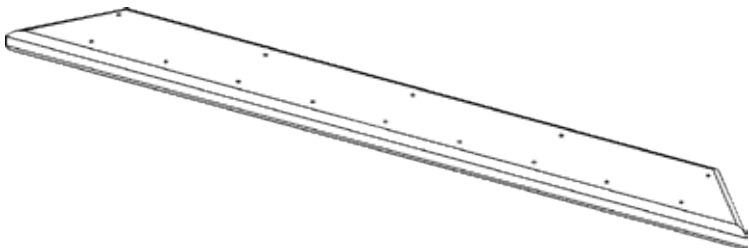
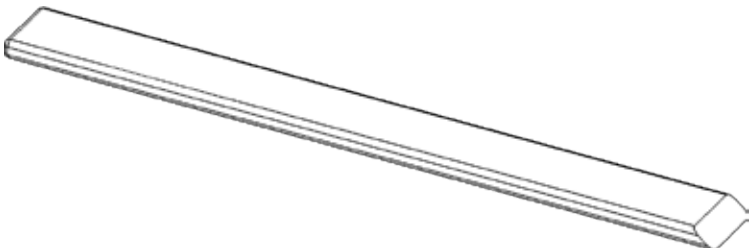
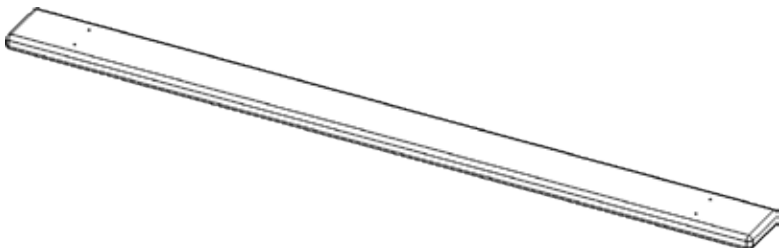
Picture	Description	QTY.
	<p>601-1 26 1/2" Lower SB Side Panel Board</p>	<p>1</p>
	<p>601-2 7 5/8" Wood Roof Fan Board #2</p>	<p>4</p>
	<p>601-3 13 1/16" Wood Roof Fan Board #3</p>	<p>2</p>
	<p>601-4 5 3/4" Chimney Block #3</p>	<p>2</p>
	<p>601-5 7" Chimney Block #4</p>	<p>2</p>
	<p>601-6 25 13/16" Wood Roof Fan Bottom</p>	<p>2</p>
	<p>601-7 48 1/16" Wood Roof Topper</p>	<p>1</p>

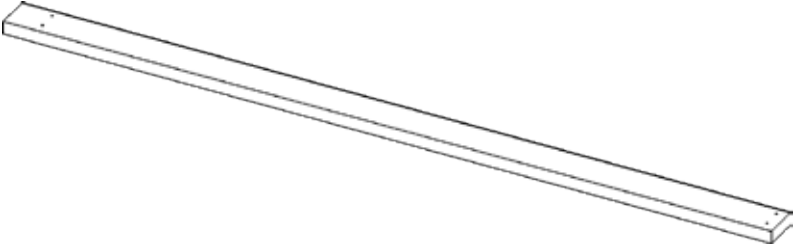
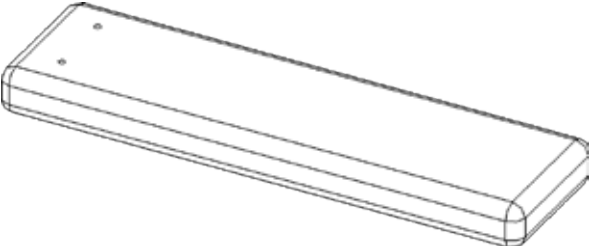
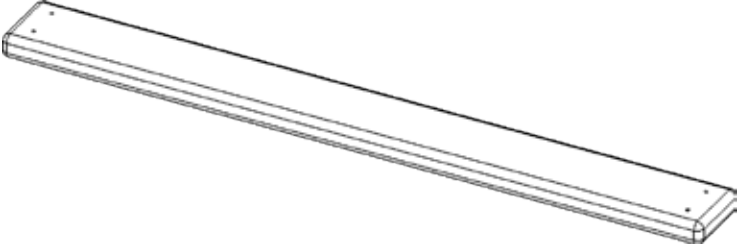
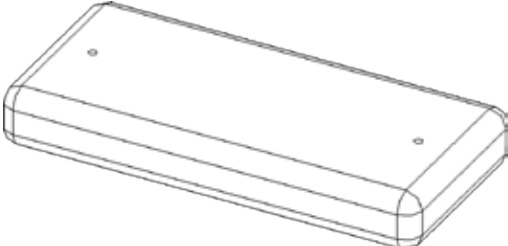
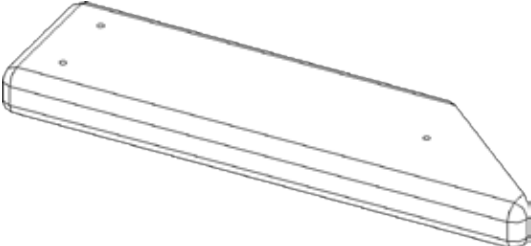
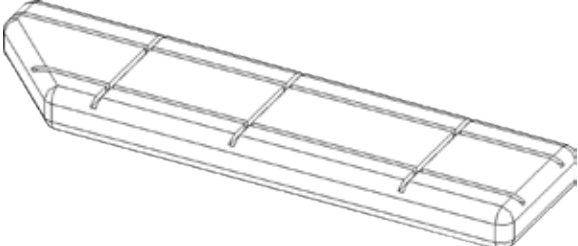
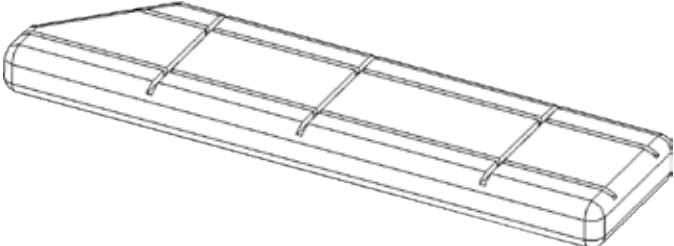
Picture	Description	QTY.
	<p>601-8 52 3/16" Wood Roof Topper</p>	<p>1</p>
	<p>601-9 10 1/16" Under Fan Board</p>	<p>12</p>
	<p>601-10 26 1/2" Panel Board</p>	<p>2</p>
	<p>601-11 6 1/4" Upper Lemonade Board</p>	<p>13</p>
	<p>601-12 10 1/16" Under Fan Angled Board</p>	<p>4</p>
	<p>601-13 11 1/4" Left Shutter Trapeze Side</p>	<p>2</p>
	<p>601-14 11 1/4" Right Shutter Trapeze Side</p>	<p>2</p>

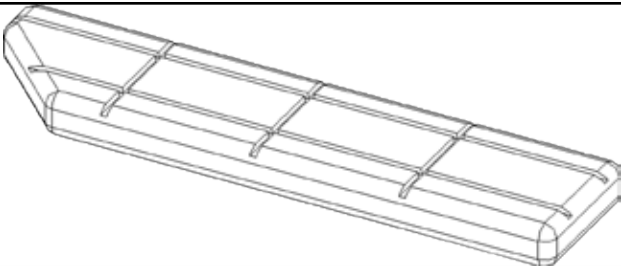
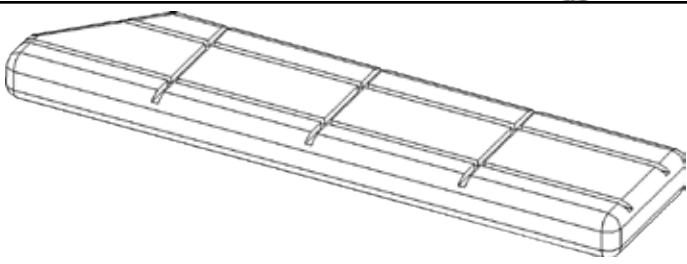
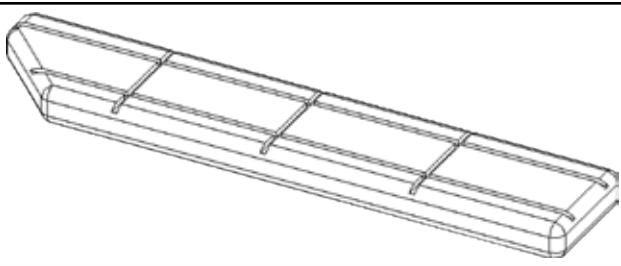
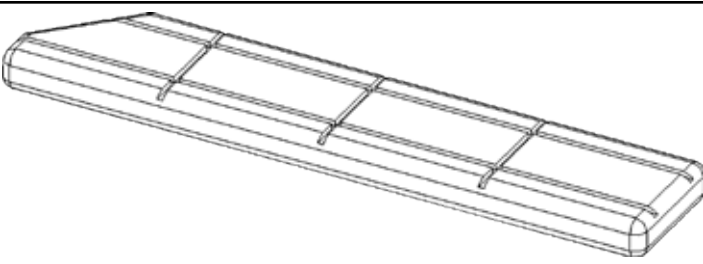
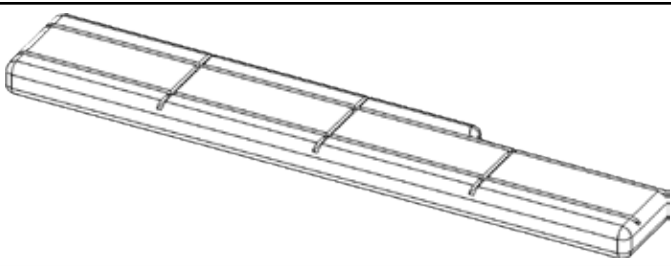
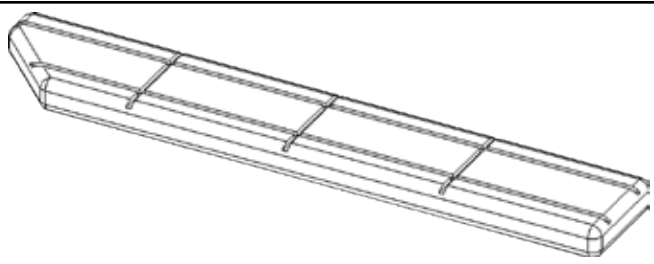
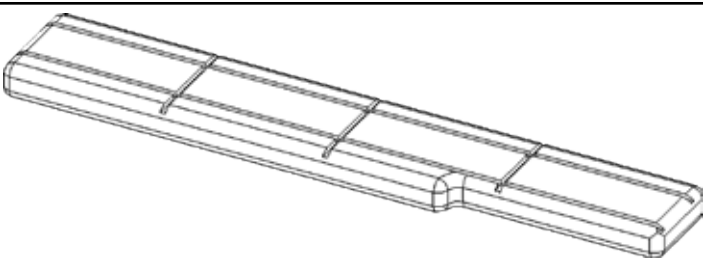
Picture	Description	QTY.
	<p>601-15 12" Left Window Shutter For Side</p>	<p>4</p>
	<p>601-16 12" Right Window Shutter For Side</p>	<p>4</p>
	<p>601-17 14 1/4" Lower Left Shutter</p>	<p>1</p>
	<p>601-18 Lower Right Shutter</p>	<p>1</p>
	<p>601-19 16 3/4" Left SB Shutter</p>	<p>1</p>
	<p>601-20 16 3/4" Left SB Side Shutter</p>	<p>1</p>
	<p>601-21 16 3/4" Right SB Shutter</p>	<p>1</p>

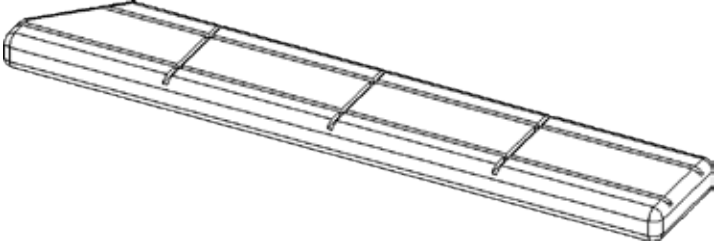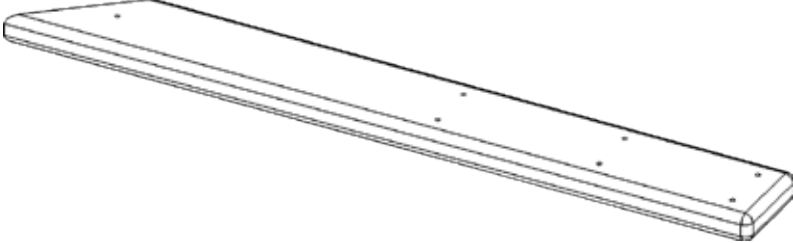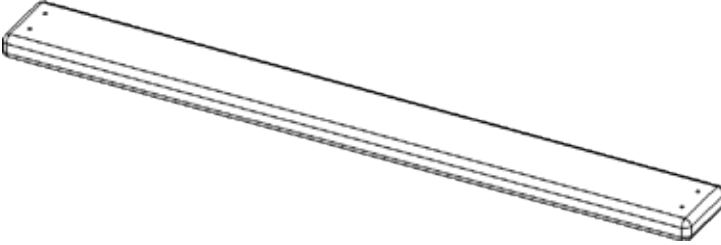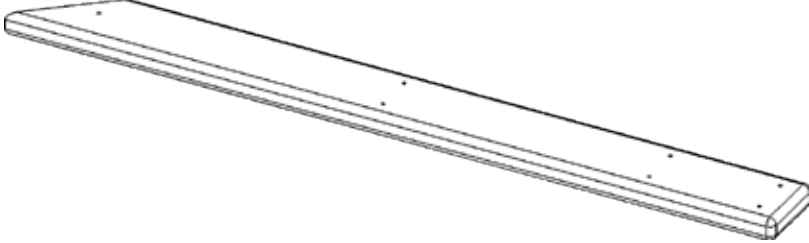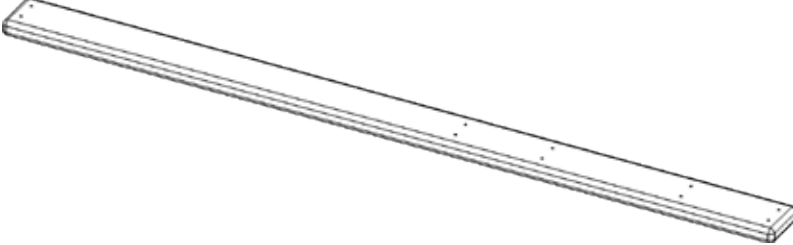
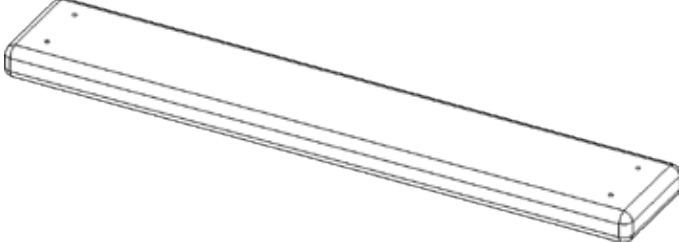
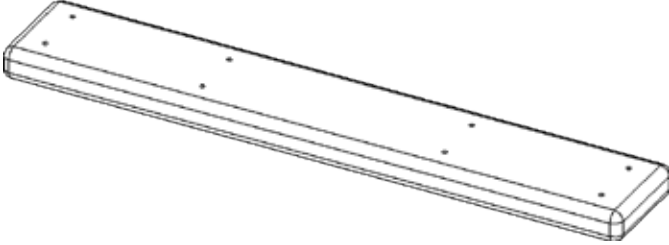

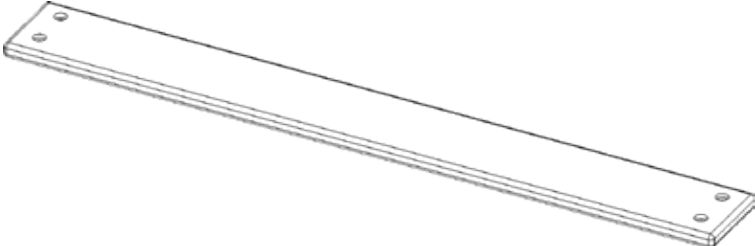
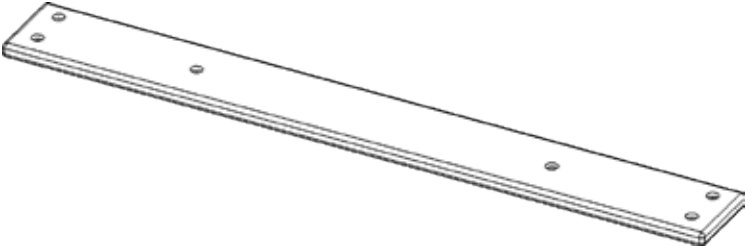
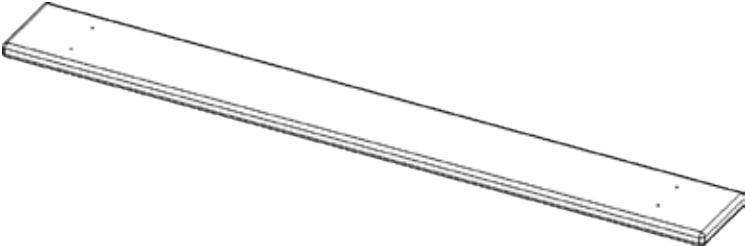
Picture	Description	QTY.
	<p>601-22 16 3/4" Right SB Side Shutter</p>	<p>1</p>
	<p>601-23 23 1/16" Corner Angle Board</p>	<p>2</p>
	<p>601-24 26 1/2" Lower Panel Board</p>	<p>11</p>
	<p>601-25 28 13/16" Corner Angle Board for SB Side</p>	<p>2</p>
	<p>601-26 44 1/2" Lower Panel Board</p>	<p>2</p>
	<p>601-27 17 1/4" Upper Panel Board</p>	<p>6</p>
	<p>601-28 17 1/4" Upper Panel Board For Shutters</p>	<p>8</p>

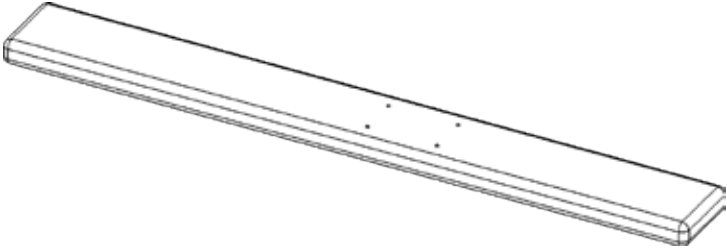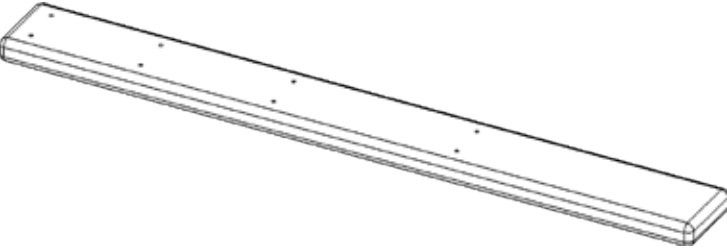
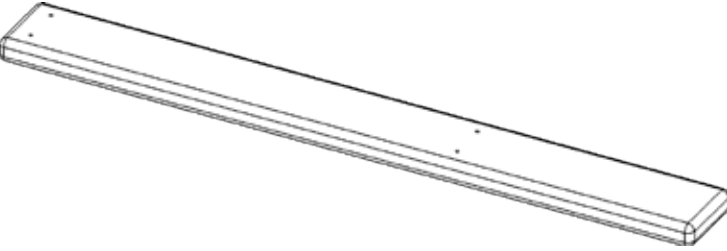
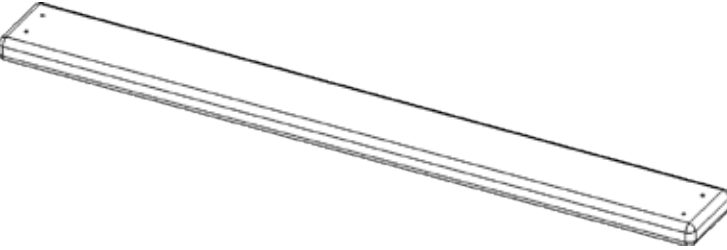
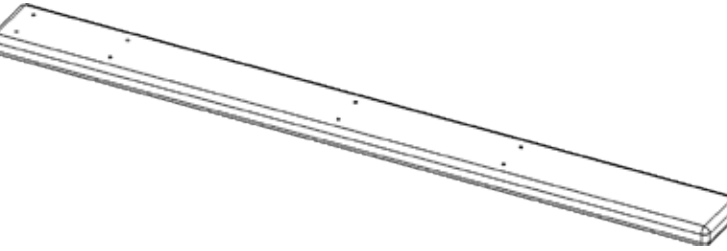
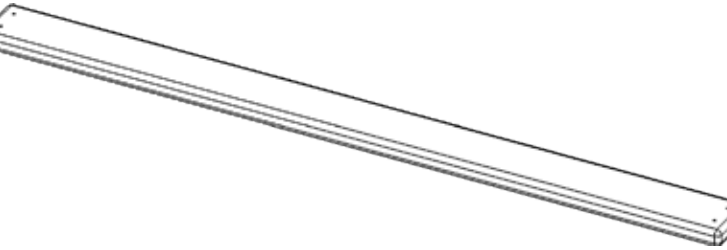
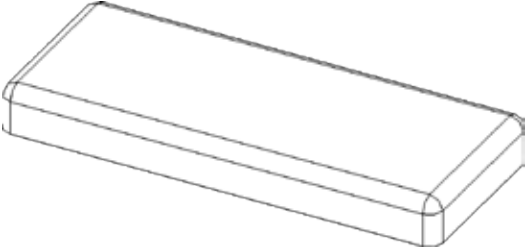

Picture	Description	QTY.
	<p>601-29 24 9/16" SB Side Under Fan Center Board</p>	<p>8</p>
	<p>601-30 26 1/16" Upper Panel Board For End Shutter</p>	<p>2</p>
	<p>601-31 26 1/16" Upper Panel Board For End</p>	<p>1</p>
	<p>601-32 26 1/2" Rail Picket</p>	<p>46</p>
	<p>601-33 31 9/16" Under Fan Center Board SB Side</p>	<p>2</p>
	<p>601-34 37 15/16" Picnic Seat Board</p>	<p>4</p>
	<p>601-35 8 1/4" Center Wood Roof Support</p>	<p>1</p>








Picture	Description	QTY.
	<p>601-36 12" Short 2- Hole Facia</p>	<p>3</p>
	<p>601-37 12 3/4" Wood Roof Support</p>	<p>2</p>
	<p>(CC-011) 601-38 16" Tic Tac Toe Board</p>	<p>2</p>
	<p>601-39 21" Center Support Facia</p>	<p>1</p>
	<p>601-40 28 11/16" Panel Support</p>	<p>2</p>
	<p>601-41 33 3/4" Wood Roof Center Support</p>	<p>4</p>
	<p>601-42 44" Picnic Seat Board</p>	<p>3</p>

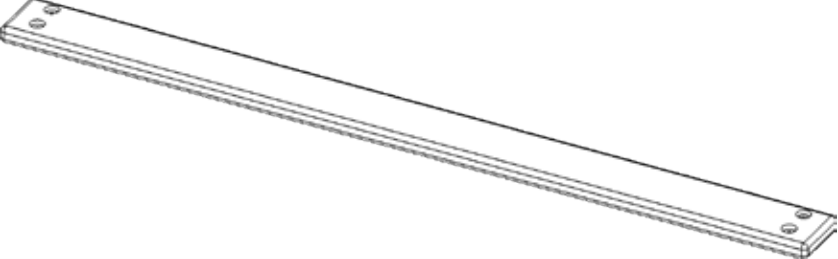
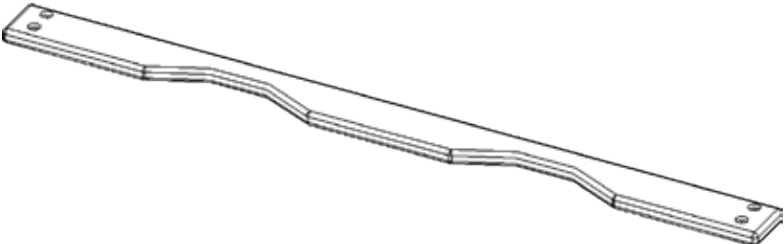
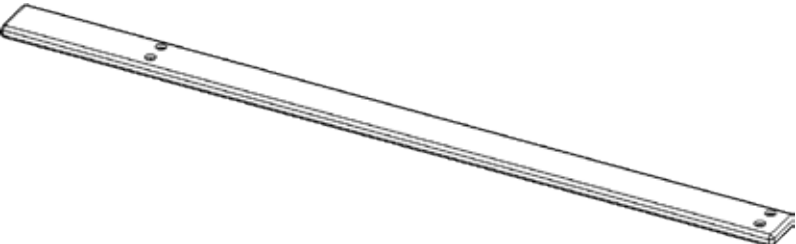
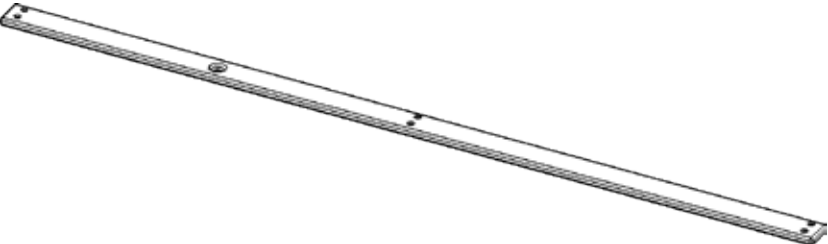
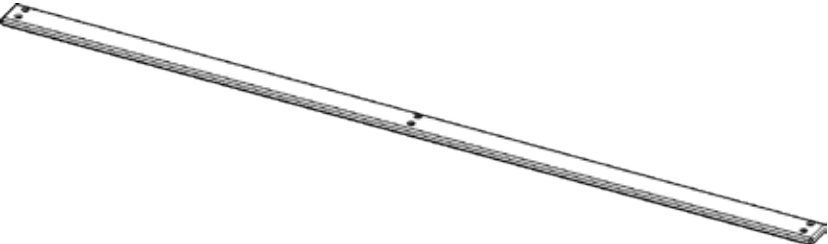
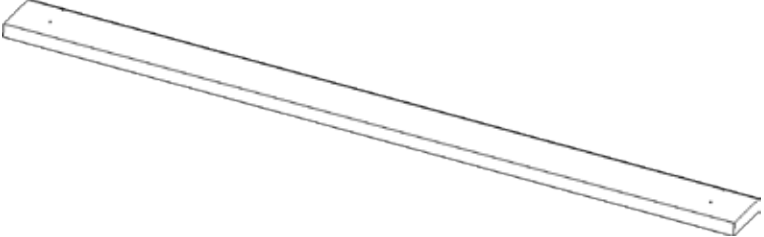
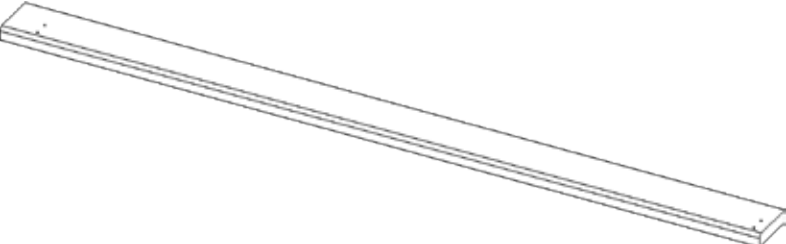
Picture	Description	QTY.
	(CC-029) 601-43 44" Slim 4- Hole Facia	5
	601-44 47 13/16" Window Arches	2
	601-45 56 13/16" Ladder Side Rail Support Facia	1
	601-46 92 5/8" Rope Hole Facia	1
	601-47 92 5/8" Upper 6- Hole Facia	1
	601-48 48 1/16" Wood Roof Topper	1
	601-49 52 3/16" Wood Roof Topper	1

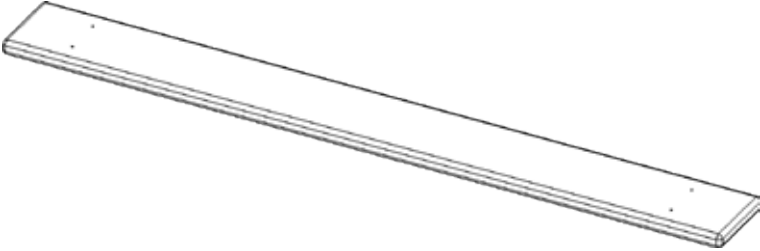
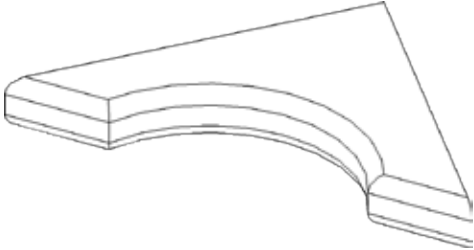
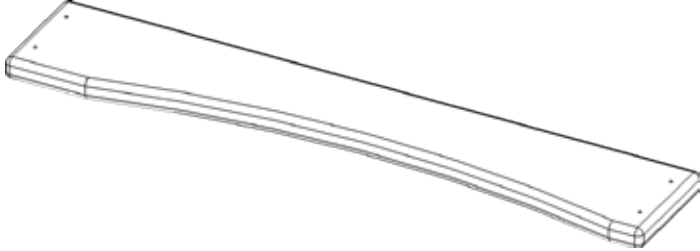
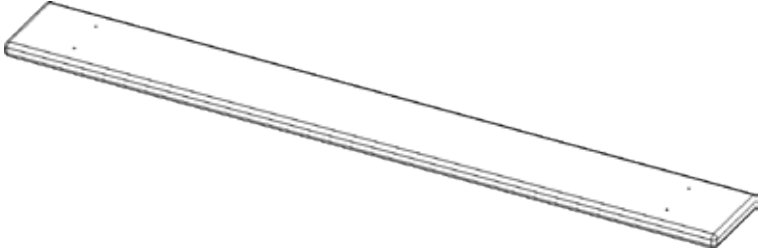
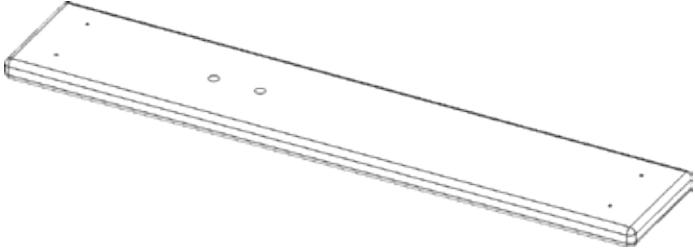
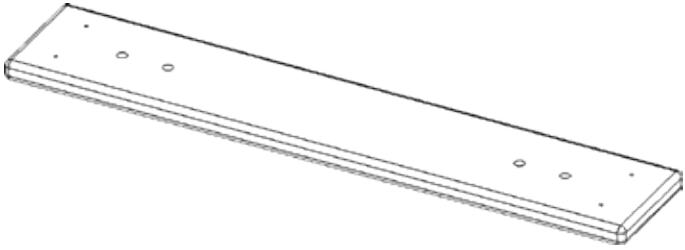
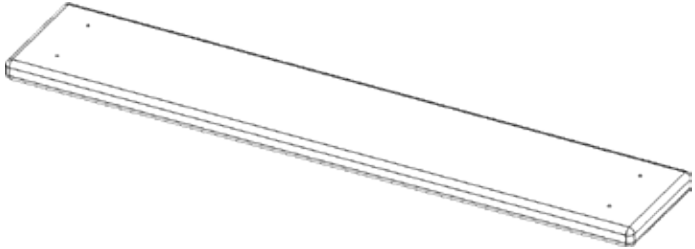
Picture	Description	QTY.
	<p>601-50 44" Picnic Table Board</p>	<p>6</p>
	<p>601-51 8 3/8" Wood Roof Peak</p>	<p>3</p>
	<p>601-52 26 1/2" Tic Tac Toe Filler Arch</p>	<p>2</p>
	<p>601-53 44" Deck Board</p>	<p>16</p>
	<p>(CC-061) 601-54 28" 1- Rock Rockwall Board</p>	<p>4</p>
	<p>(CC-059) 601-55 28" 2- Rock Rockwall Board</p>	<p>3</p>
	<p>(CC-060) 601-56 28" Blank Rockwall Board</p>	<p>4</p>





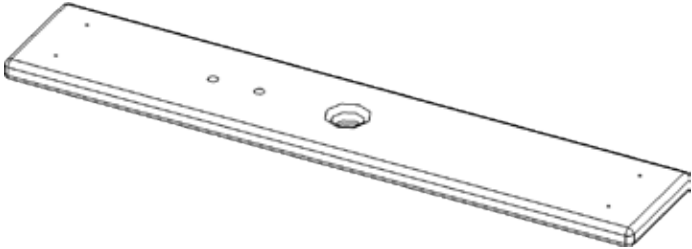
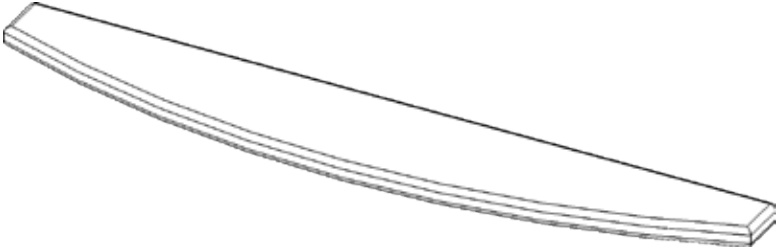
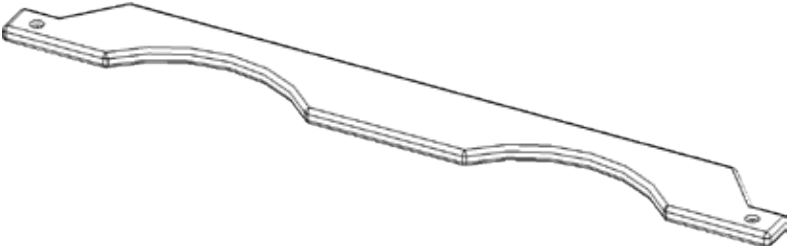
Picture	Description	QTY.
	<p>601-57 28" Rockwall Board w/ Rope Hole</p>	<p>1</p>
	<p>601-58 32 1/4" Lemonade Counter</p>	<p>1</p>
	<p>601-59 44" Window Top</p>	<p>2</p>
	<p>601-60 44" Lemonade Facia</p>	<p>1</p>
	<p>(CC-072) 601-61 44" 4- Hole Facia</p>	<p>3</p>
	<p>601-62 44" 6- Hole Facia</p>	<p>1</p>
	<p>601-63 44" Picnic Seat Board</p>	<p>2</p>

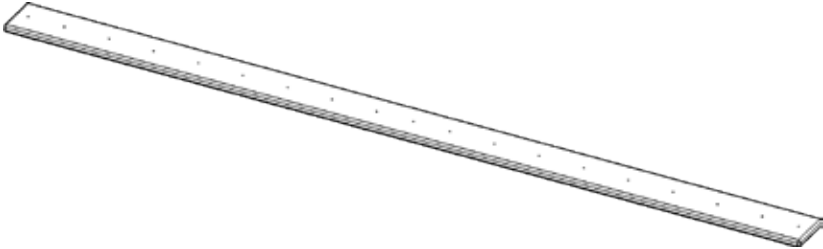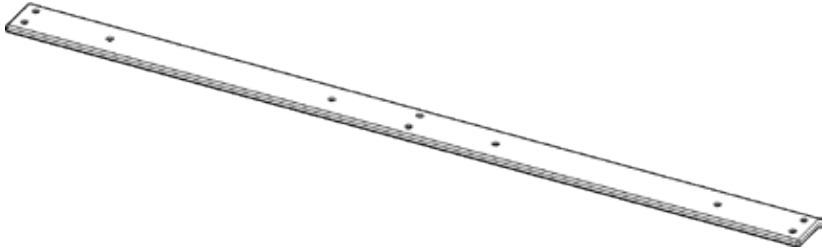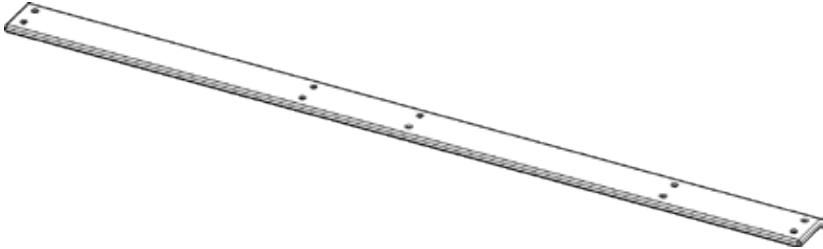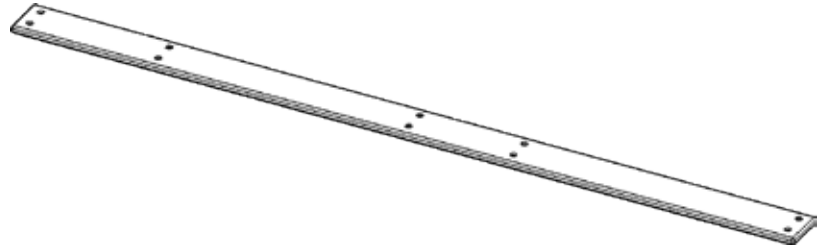
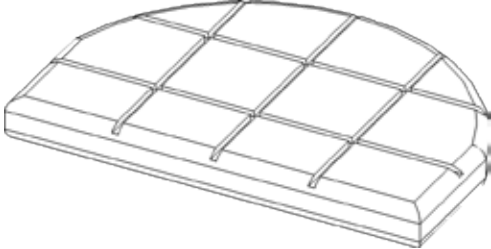
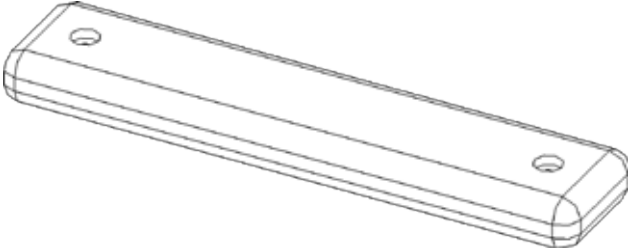
Picture	Description	QTY.
	<p>601-64 92 5/8" Deck Support</p>	<p>1</p>
	<p>601-65 92 5/8" 10- Hole Facia</p>	<p>2</p>
	<p>601-66 92 5/8" Ladder Side Runner</p>	<p>1</p>
	<p>601-67 92 5/8" Rockwall Side Runner</p>	<p>1</p>
	<p>601-68 8 5/16" Wood Roof Fan Plate</p>	<p>2</p>
	<p>601-69 15 3/8" Picnic Seat Bench Support</p>	<p>2</p>
	<p>(CC-093) 601-70 17" Gusset</p>	<p>14</p>

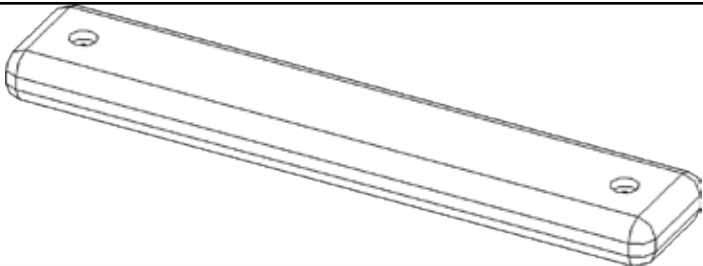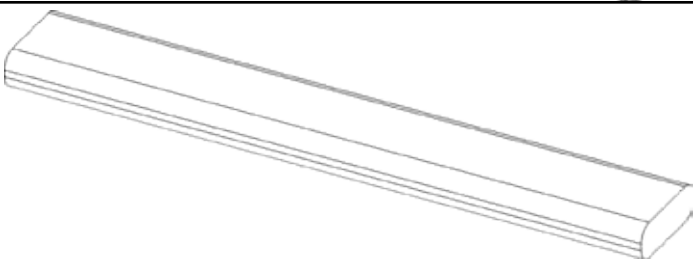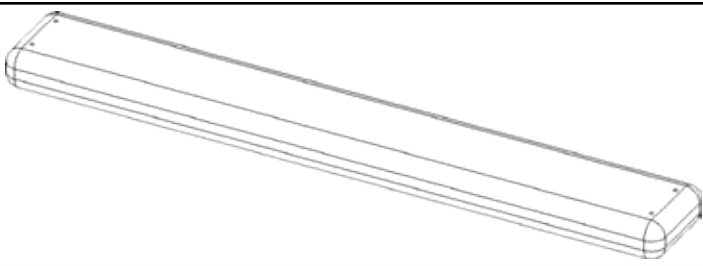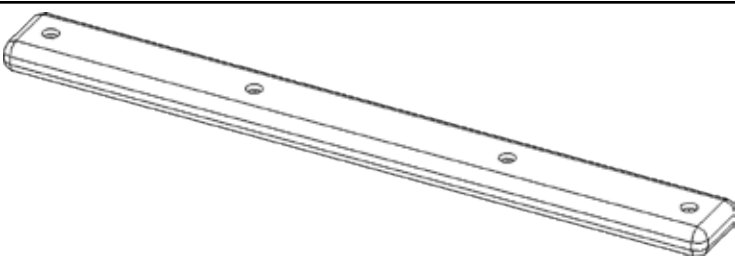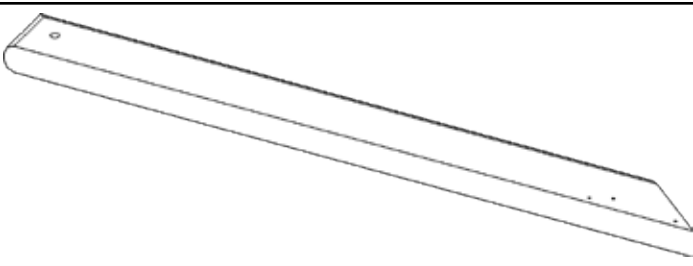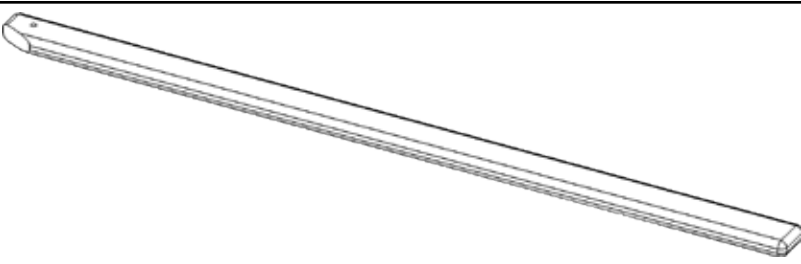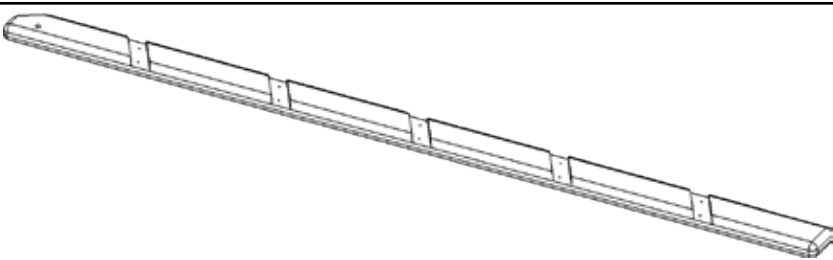Picture	Description	QTY.
	<p>601-71 18 3/16" Outside Picnic Bench Support</p>	<p>2</p>
	<p>(CC-120) 601-72 22" Ladder Step</p>	<p>5</p>
	<p>(CC-096) 601-73 23 3/4" Ladder Support</p>	<p>1</p>
	<p>601-74 32 5/8" Picnic Table Support</p>	<p>2</p>
	<p>601-75 35" Wood Roof Support</p>	<p>6</p>
	<p>601-76 65 1/8" Rockwall Support Leg</p>	<p>2</p>
	<p>601-77 69 7/16" Left Ladder Leg</p>	<p>1</p>

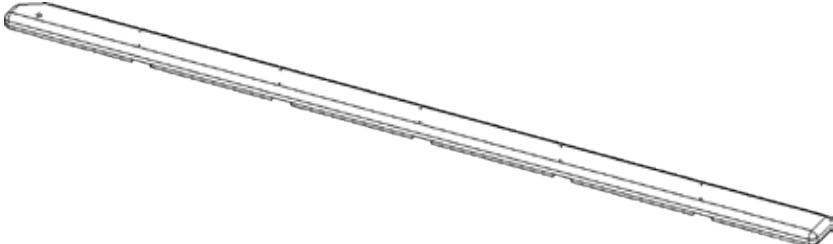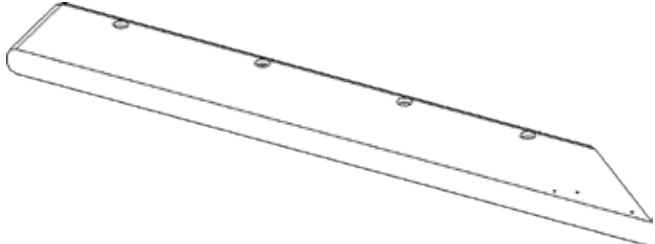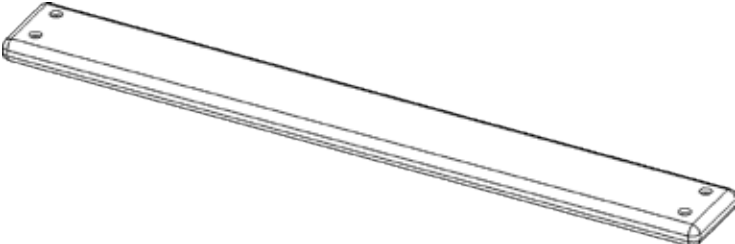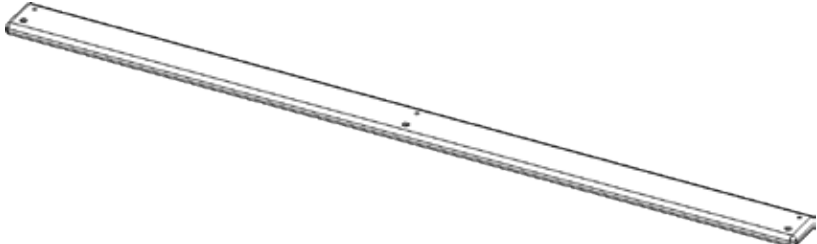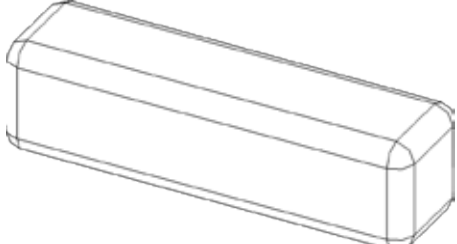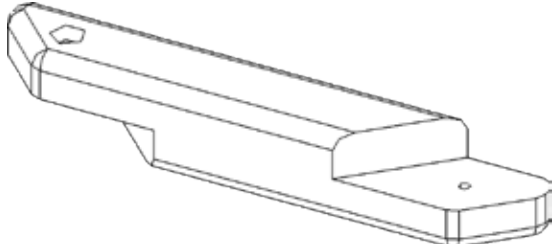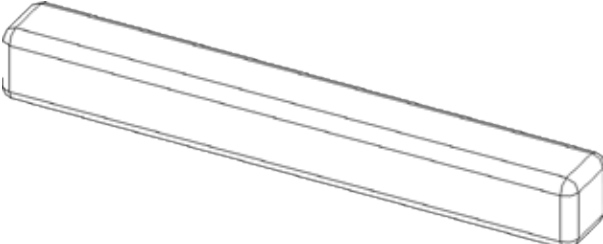Picture	Description	QTY.
	<p>601-78 69 7/16" Right Ladder Leg</p>	<p>1</p>
	<p>601-79 35" Wood Roof Extension</p>	<p>2</p>
	<p>601-80 44" Lemonade 4- Hole Facia</p>	<p>1</p>
	<p>601-81 92 5/8" Mainbeam</p>	<p>2</p>
	<p>601-82 11 1/8" Picnic Seat Leg</p>	<p>2</p>
	<p>601-83 18 3/16" Trapeze Gusset</p>	<p>1</p>
	<p>601-84 24 1/8" Picnic Table Leg</p>	<p>2</p>

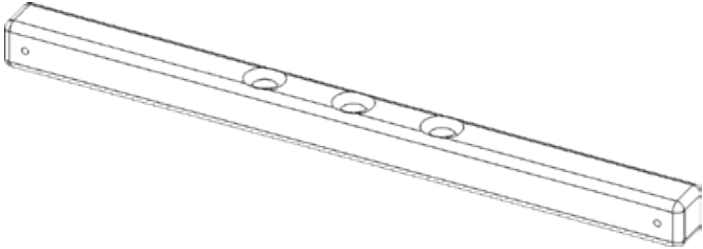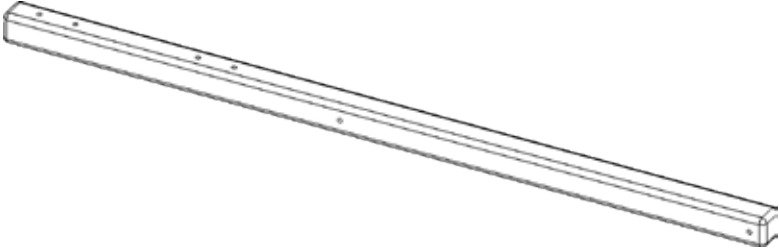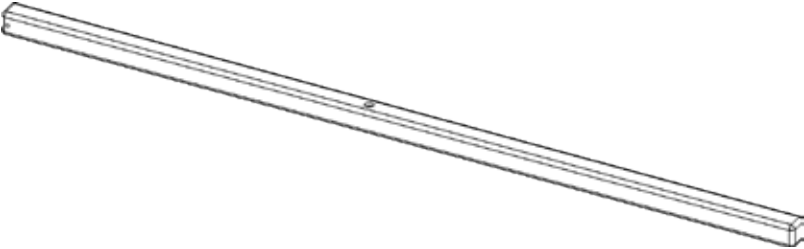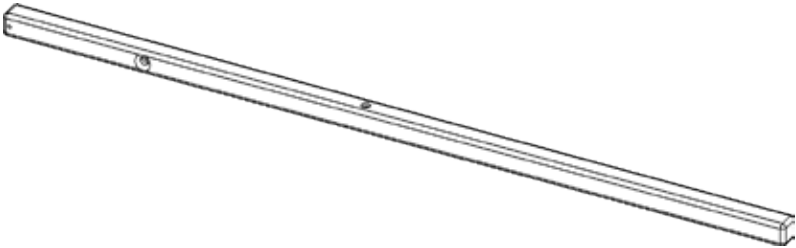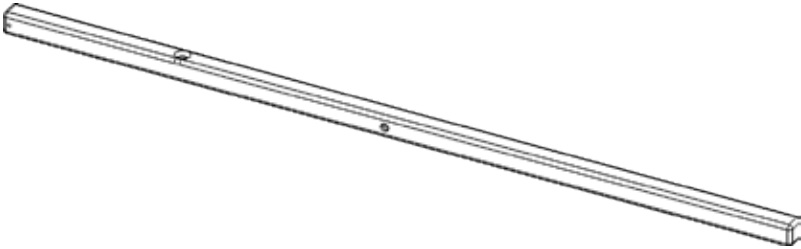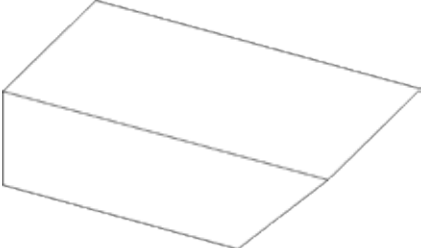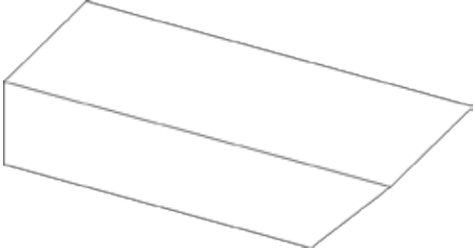Picture	Description	QTY.
	(CC-158) 601-85 44" Mainbeam	1
	601-86 76 3/8" Trapeze Arm	1
	601-87 103" Center Post	2
	601-88 103" Corner Post	2
	601-89 108 1/2" Corner Post	2
	601-90 9 11/16" Chimney Block #2	1
	601-91 13" Chimney Block #1	1

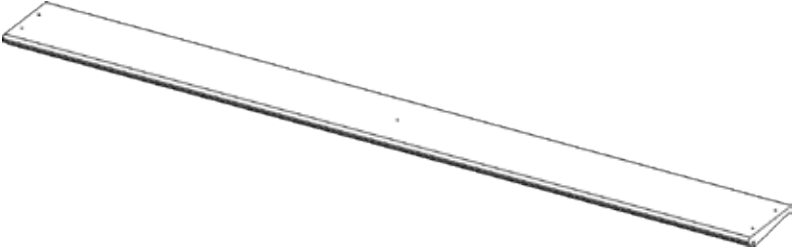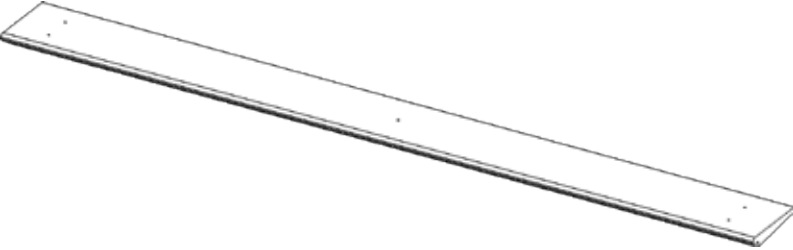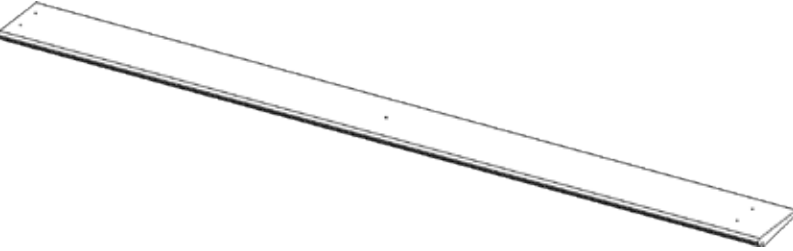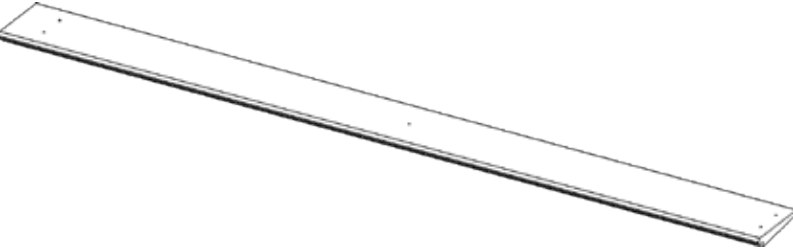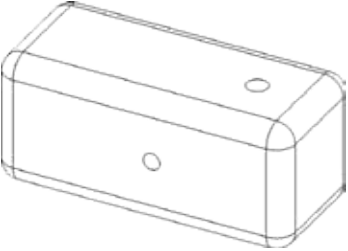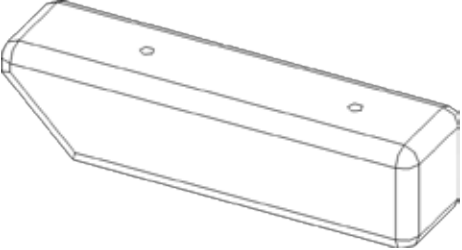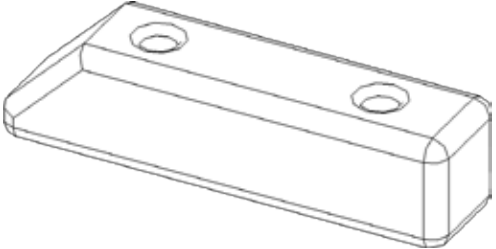Picture	Description	QTY.
	<p>601-92 45 3/4" Lemonade Woof Roof Board</p>	<p>2</p>
	<p>601-93 48 1/16" SB Wood Roof Board</p>	<p>16</p>
	<p>601-94 52 3/16" (L) Wood Roof Board- Trapeze Side</p>	<p>8</p>
	<p>601-95 52 3/16" (R) Wood Roof Board- Trapeze Side</p>	<p>8</p>
	<p>(CC-240) 601-96 7 7/8" Center A-Frame Block</p>	<p>1</p>
	<p>(CC-243) 601-97 13 3/8" A-Frame Block</p>	<p>1</p>
	<p>(CC-244) 601-98 13 3/8" A-Frame Block Sunked</p>	<p>1</p>

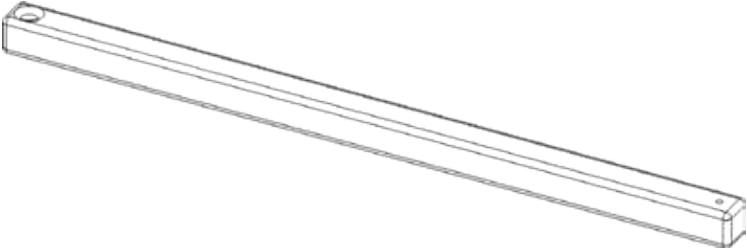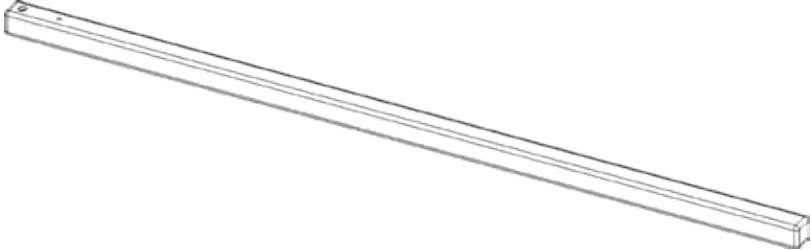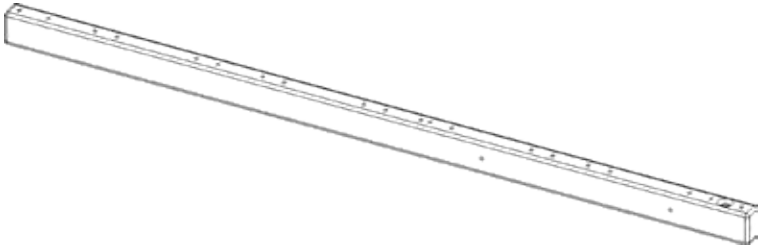Picture	Description	QTY.
	(CC-155) 601-99 70" A-Frame Crossmember	1
	(CC-156) 601-100 113" A-Frame Ladder Leg	2
	(CC-185) 601-101 125" Universal Swingbeam	1

601-HWR-BAG- RAINFOREST COTTAGE BASE HARDWARE

INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)


A-1
3/8" Acorn Nut Plated
QTY. 14




A-2
3/8" Hex Nut
QTY. 4




A-3
3/8" x 1 1/2" Hex Bolt
QTY. 4




A-6
1/4" x 1 1/2" Hex Lag Screw
QTY. 10



A-4
3/8" x 4 1/2" Hex Bolt
QTY. 16

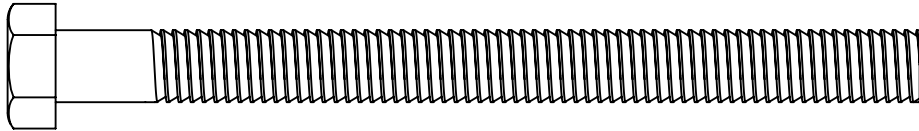


A-7
1/4" x 2" Hex Lag Screw
QTY. 12




A-9
3/8" Nylon Insert Locknut
QTY. 4




A-5
3/8" x 6" Hex Bolt
QTY. 4

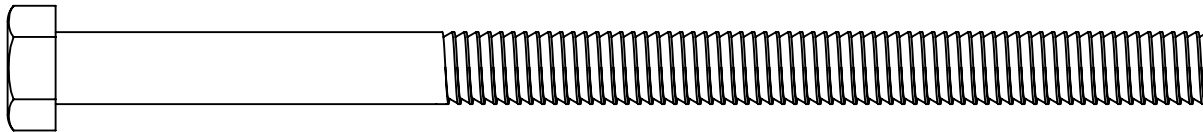


A-10
3/8" Split Lockwasher
QTY. 8

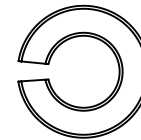

A-11
3/8" USS Flatwasher
QTY. 24

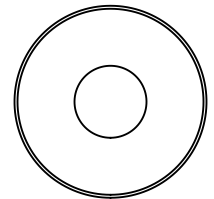

A-8
3/8" x 3 1/2" Hex Lag Screw
QTY. 2

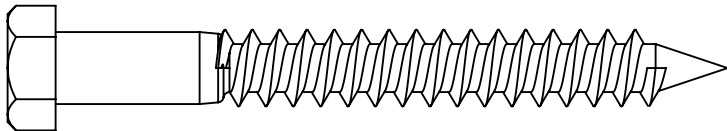


MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT

USE THE RULER TO MEASURE YOUR BOLTS AND SCREWS. HARDWARE VIEWS SHOWN ABOVE ARE 1:1 SCALE AND CAN BE USED TO MATCH HARDWARE SIZES.

601-HWR-BAG- RAINFOREST COTTAGE BASE HARDWARE

INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)


A-12
3/8" Bolt Cup
QTY. 14

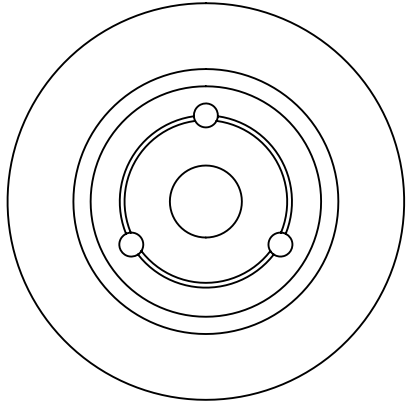

A-13
#2 & 3 Drive Bit
QTY. 1




A-14
8 x 80mm Spring Clip
QTY. 2

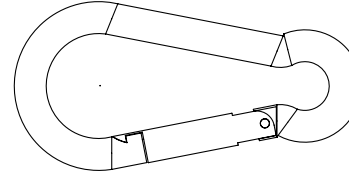

Bag B
1 1/2" Coated Deck Screw
QTY. 32



Bag C
1 5/8" Coated Deck Screw
QTY. 722




Bag D
2" Coated Deck Screw
QTY. 72




Bag E
2 1/2" Coated Deck Screw
QTY. 138




Bag F
1/4" x 3" Hex Lag Screw
QTY. 154




Bag G
#14 x 1" Pan Phillips T/S
QTY. 32




Bag H
1/4" x 1 1/4" Pan Phillips M/S
QTY. 25




Bag I
1/4" T-Nut
QTY. 25

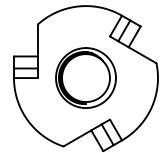

Bag J
3/8" T-Nut
QTY. 14





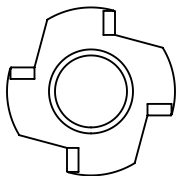




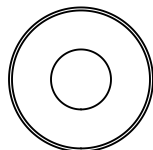






Bag K
1/4" USS Flatwasher
QTY. 236

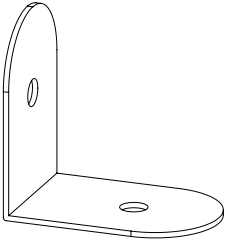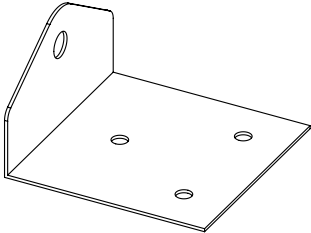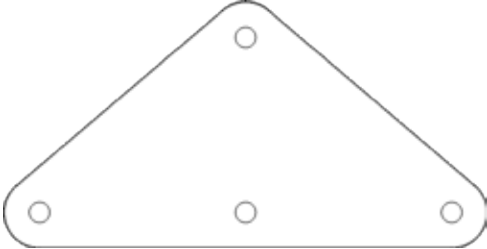
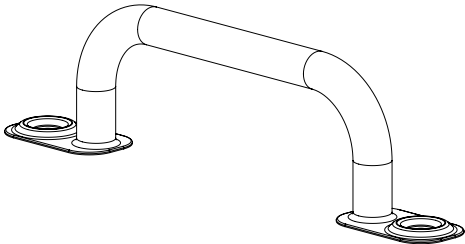
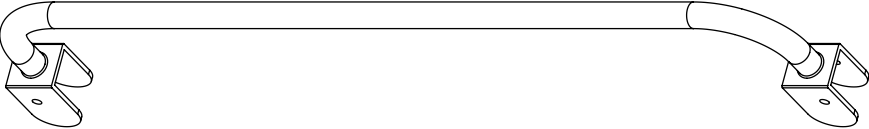


MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT

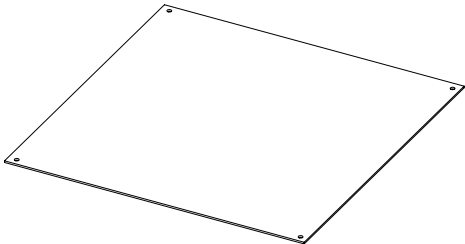USE THE RULER TO MEASURE YOUR BOLTS AND SCREWS. HARDWARE VIEWS SHOWN ABOVE ARE 1:1 SCALE AND CAN BE USED TO MATCH HARDWARE SIZES.

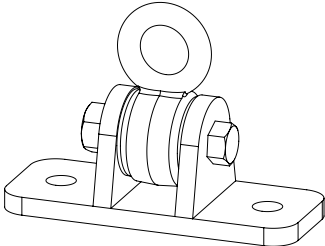Picture	Description	QTY.
	601-A 90 Degree Bracket	9
	601-B Ladder/ Rockwall Bracket	4
	601-C Swingbeam Tri-Plate	1
	601-D Playgrip Safety Handle	4
	601-E Playgrip U-Mount Ladder Handle	2
	601-F 14' Yellow Rope	2
	601-G 16" Trapeze Bar w/ Rings	1

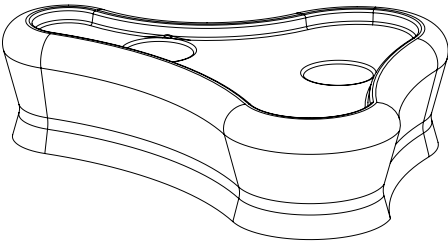Picture	Description	QTY.
	601-H 22" x 22" Chalkboard	1
	601-I Disc Swing	1
	601-J Tic Tac Toe	1
	601-K Ductile Iron Swing Hanger	6
	601-L Spiral Ground Anchors	4
	601-M 56" Chained Belt Swing	2
	601-N Rockwall Rocks	11

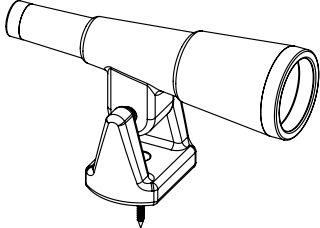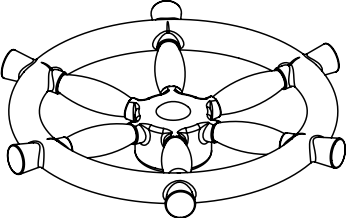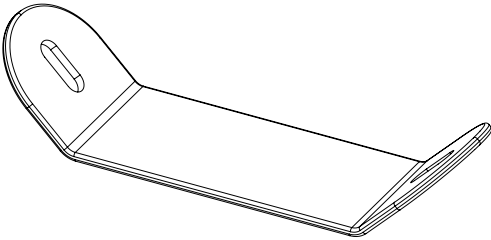Picture	Description	QTY.
	601-O Telescope	1
	601-P 12" Ships' Wheel	1
	601-Q 45 Degree Swingbeam Bracket	2





Ladder Assembly

PARTS NEEDED

601-78- 69 7/16" Right Ladder Leg-	(1)
601-77- 69 7/16" Left Ladder Leg-	(1)
601-72- 22" Ladder Step-	(5)
601-B- Ladder/ Rockwall Bracket-	(2)

HARDWARE NEEDED

E- 2 1/2" Coated Deck Screw-	(20)
A-3- 3/8" x 1 1/2" Hex Bolt-	(2)
A-11- 3/8" USS Flatwasher-	(2)
J- 3/8" 4- Prong T-Nut-	(2)

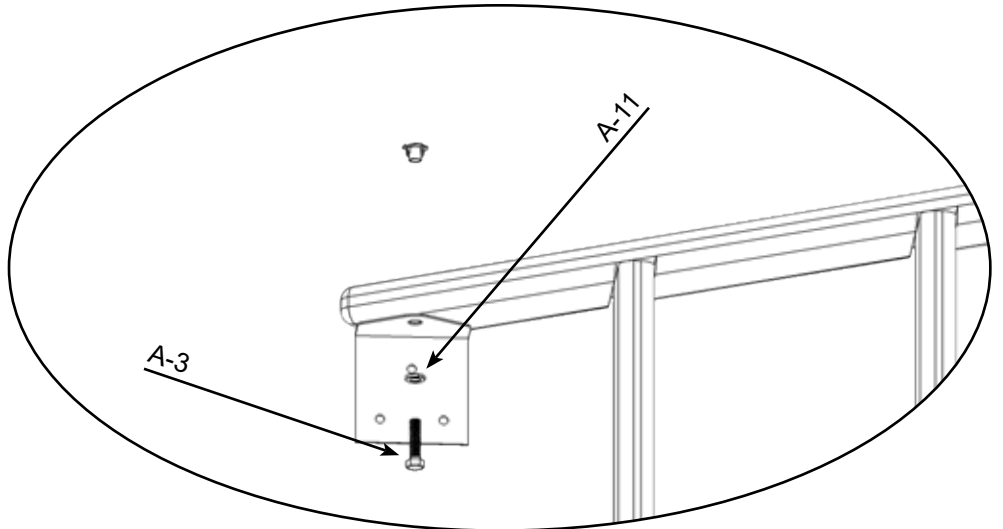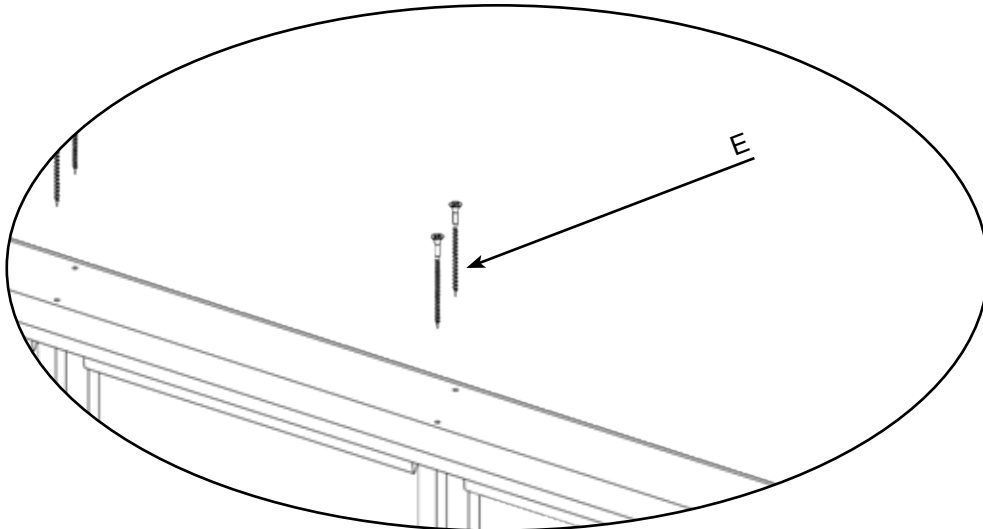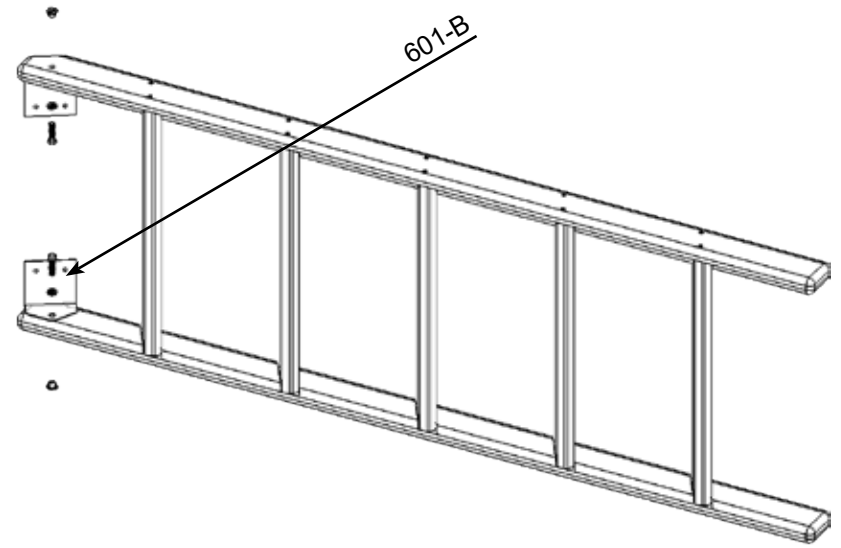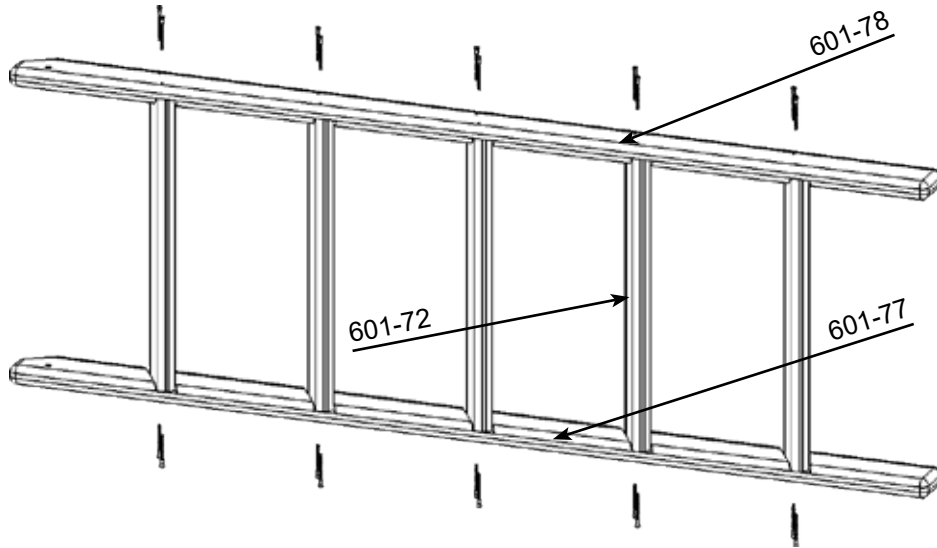

Ladder Assembly





PARTS NEEDED

601-73- 23 3/4" Ladder Support- (1)
601-E- U-Mount Ladder Handles- (2)

HARDWARE NEEDED

E- 2 1/2" Coated Deck Screw- (4)
G- #14 x 1" Pan Phillips T/S- (8)
K- 1/4" USS Flatwasher- (8)

MAKE SURE LADDER SUPPORT IS ON BOTTOM OF LADDER

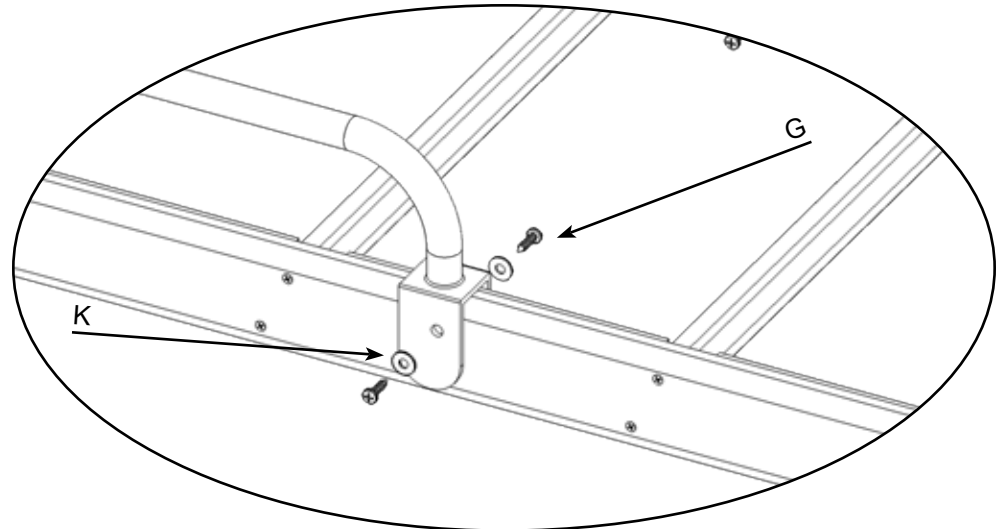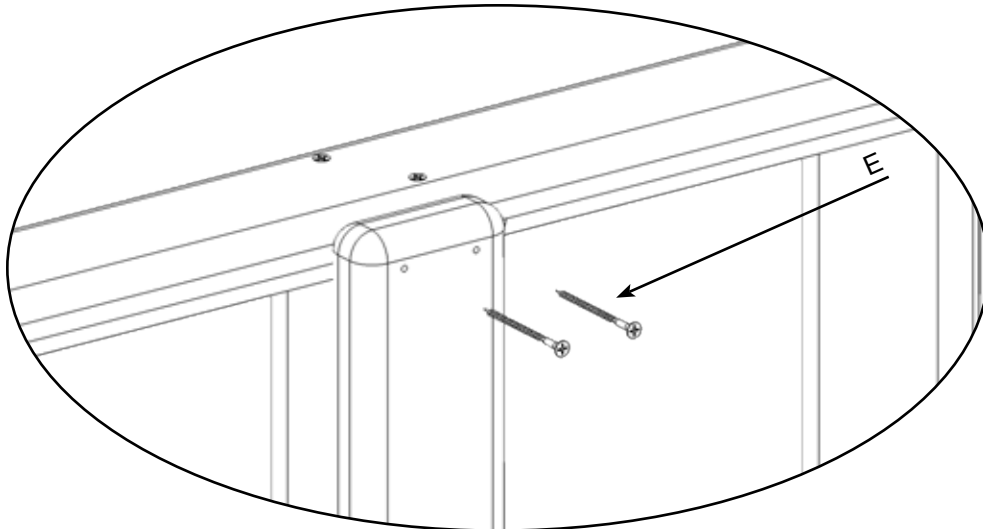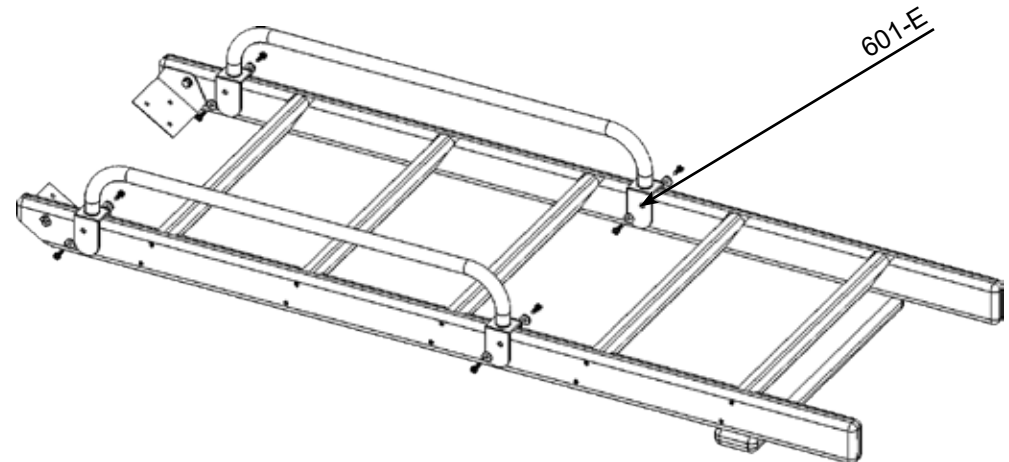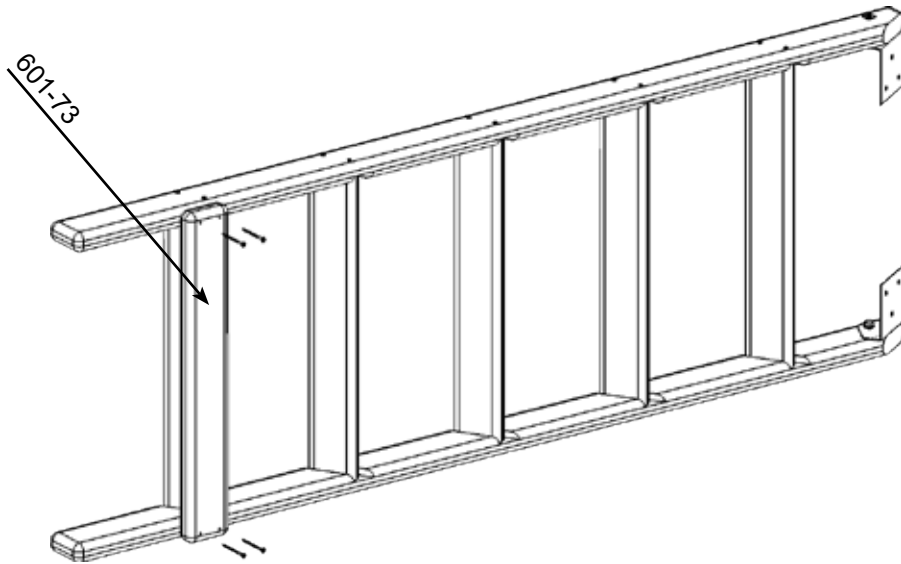




Rockwall Assembly

PARTS NEEDED

601-55- 28" 2- Rock Rockwall Board-	(3)
601-54- 28" 1- Rock Rockwall Board-	(4)
601-57- 28" Rockwall Board w/ Rope Hole-	(1)
601-76- 65 1/8" Rockwall Support Leg-	(2)

HARDWARE NEEDED



H- 1/4" x 1 1/4" Pan Phillips M/S-	(22)
K- 1/4" USS Flatwasher-	(22)
I- 1/4" T-Nut-	(22)
J- 3/8" T-Nut-	(2)
A-11- 3/8" USS Flatwasher-	(2)
A-3- 3/8" x 1 1/2" Hex Nut-	(2)

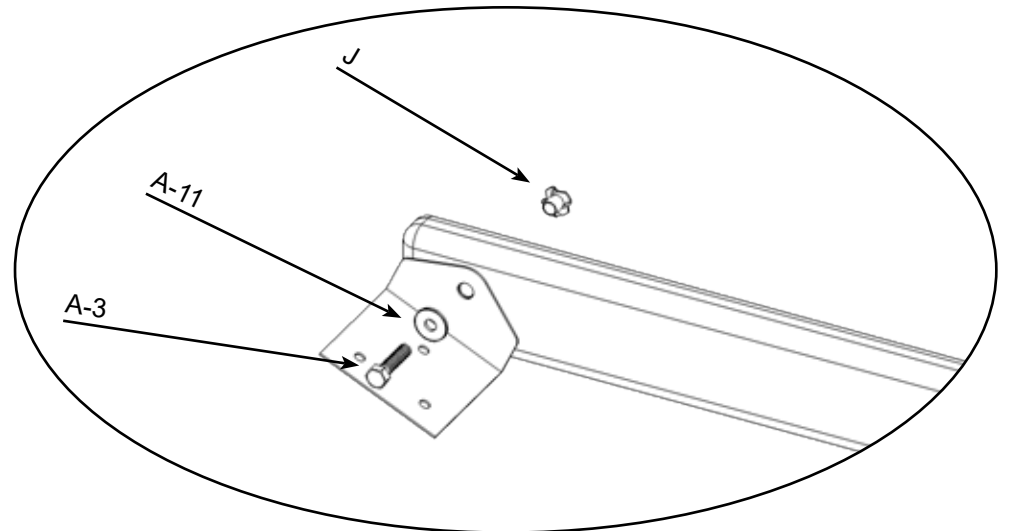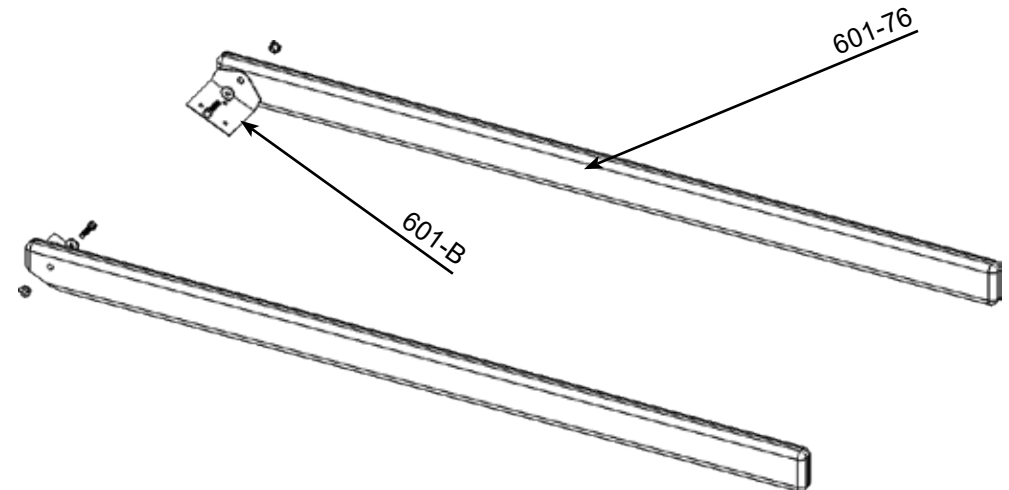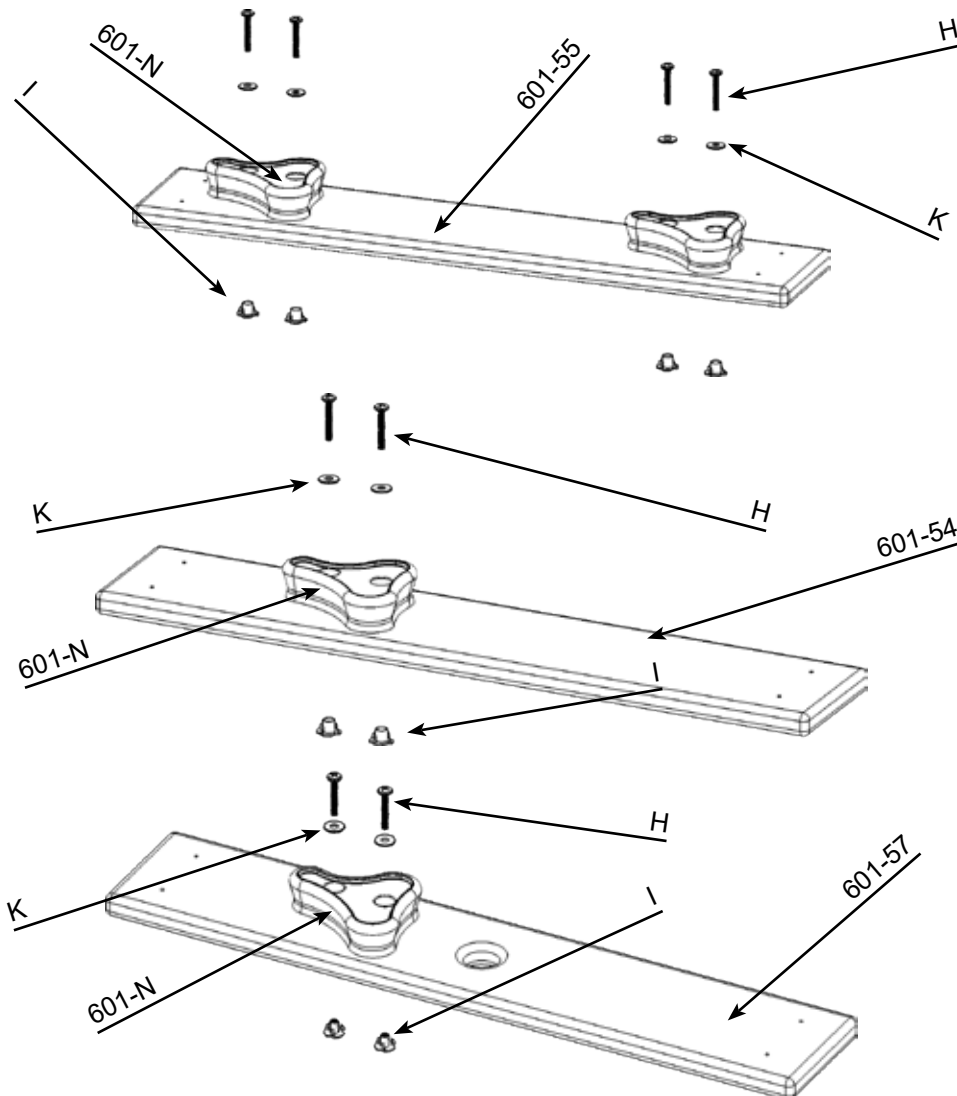

Rockwall Assembly

PARTS NEEDED


601-55- 28" 2- Rock Rockwall Board-	(3)	601-54- 28" 1- Rock Rockwall Board-	(4)
601-57- 28" Rockwall Board w/ Rope Hole-	(1)	601-76- 64 1/8" Rockwall Support Leg-	(2)
601-56- 28" Blank Rockwall Board-	(4)	601-38- 16" Tic Tac Toe Board-	(2)
601-J- Tic Tac Toe-	(1)		

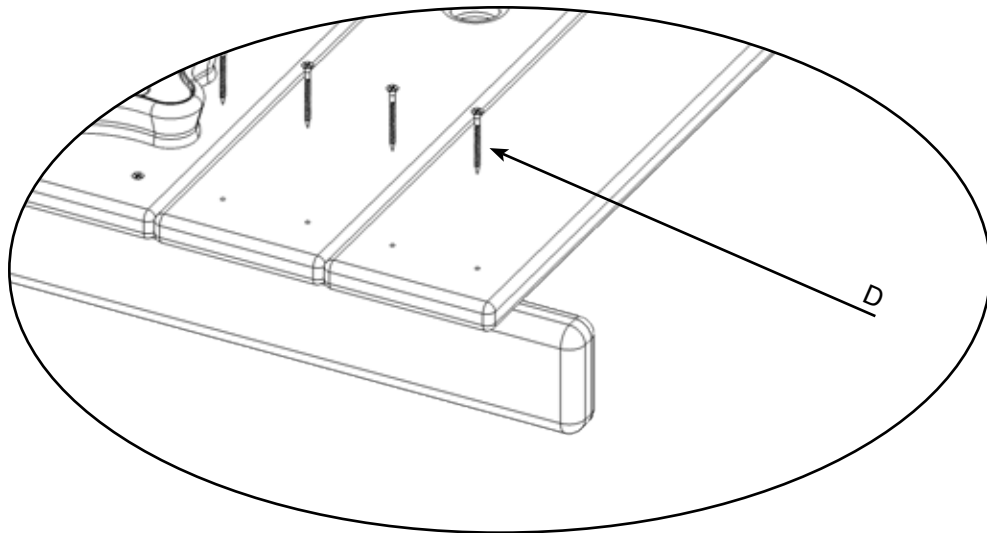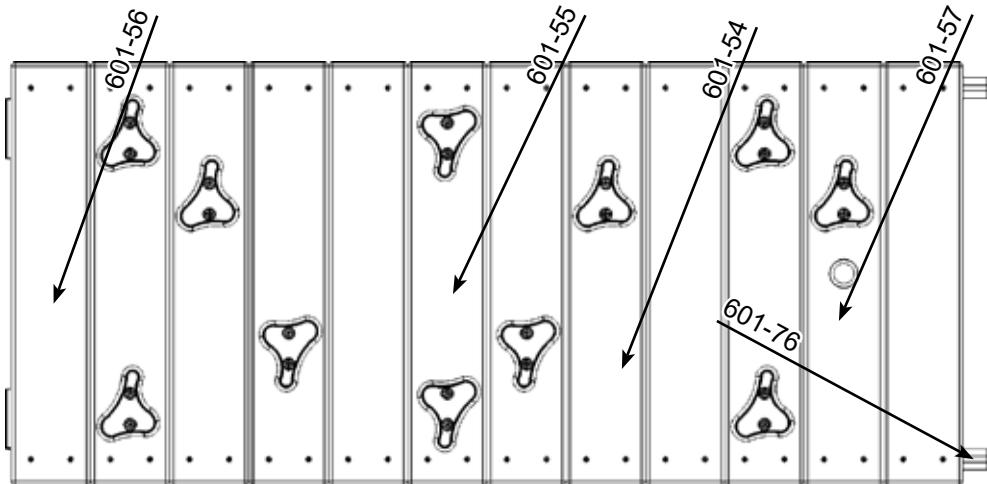

Tic Tac Toe Assembly

HARDWARE NEEDED

D- 2" Coated Deck Screw-	(48)
--------------------------	------

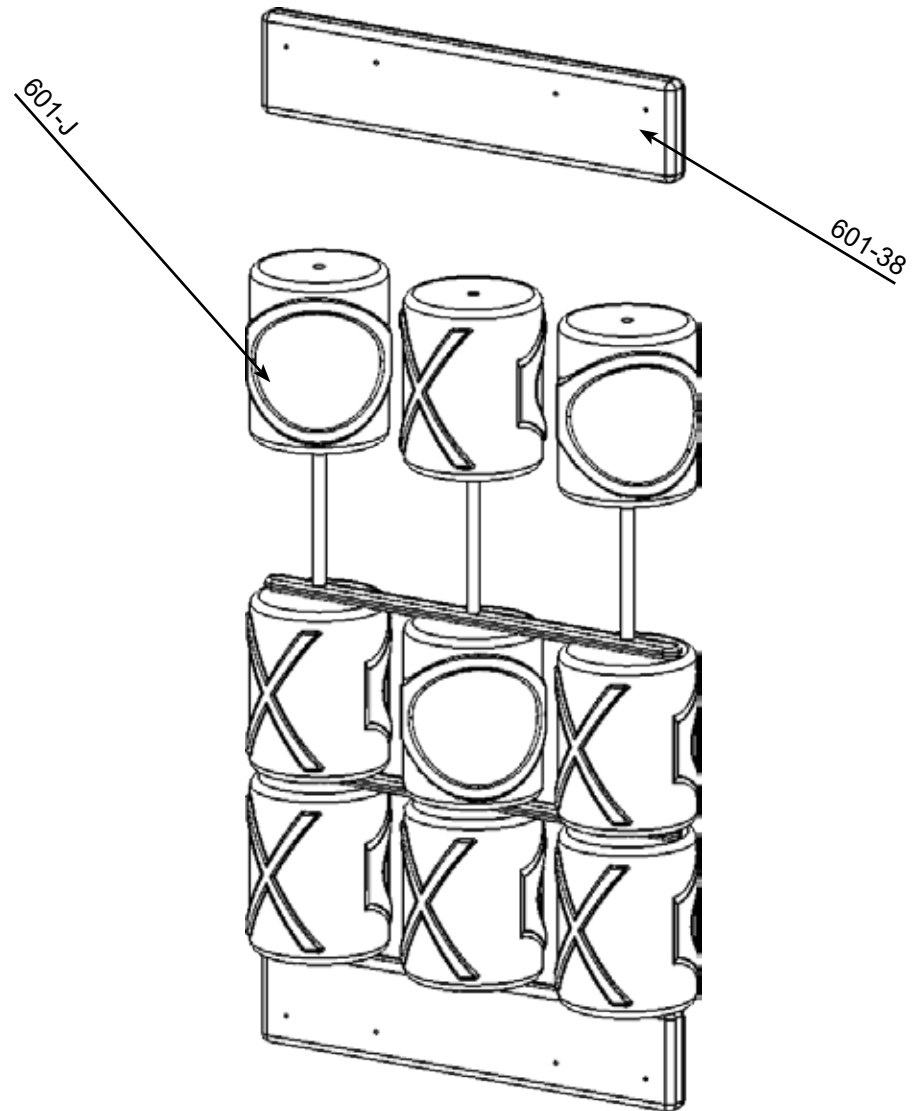


Wood Roof Fan

PARTS NEEDED

601-2- 7 5/8" Wood Roof Fan Board #2-	(4)
601-3- 13 1/16" Wood Roof Fan Board #3-	(2)
601-6- 25 13/16" Wood Roof Fan Bottom-	(2)
601-68- 8 5/16" Wood Roof Fan Plate-	(2)
601-96- 7 5/8" A-Frame Block-	(1)
601-97- 12 7/8" A-Frame Block-	(1)
601-98- 12 7/8" A-Frame Block Sunked-	(1)


Make 2 Fan Assemblies

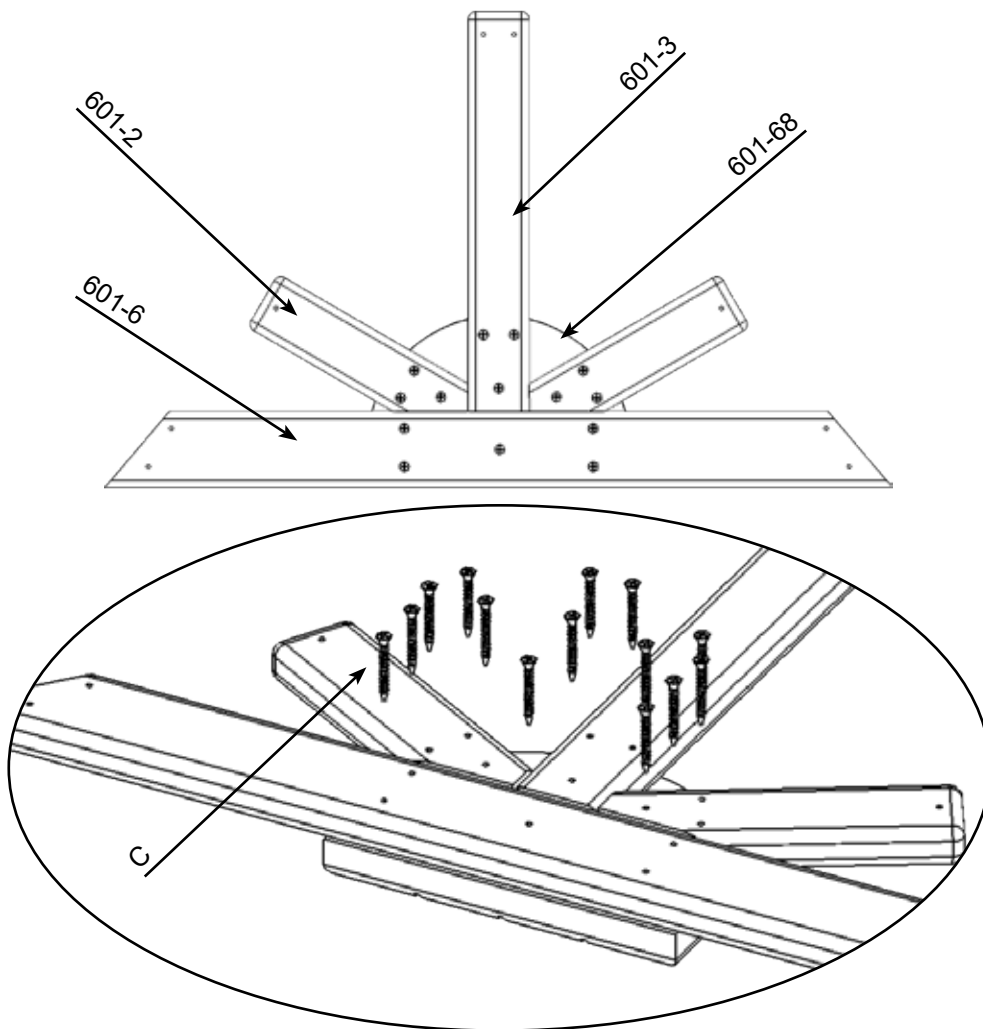

A-Frame Blocks

HARDWARE NEEDED

C- 1 5/8" Coated Deck Screw-	(28)	SB-9- 3/8" x 10" Hex Bolt-	(1)
SB-20- 3/8" Bolt Cup-	(1)	SB-17- 3/8" USS Flatwasher-	(1)
SB-15- 3/8" Split Lockwasher-	(1)	SB-6- 3/8" Hex Nut-	(1)
SB-1- 3/8" Acorn Nut Plated-	(1)		


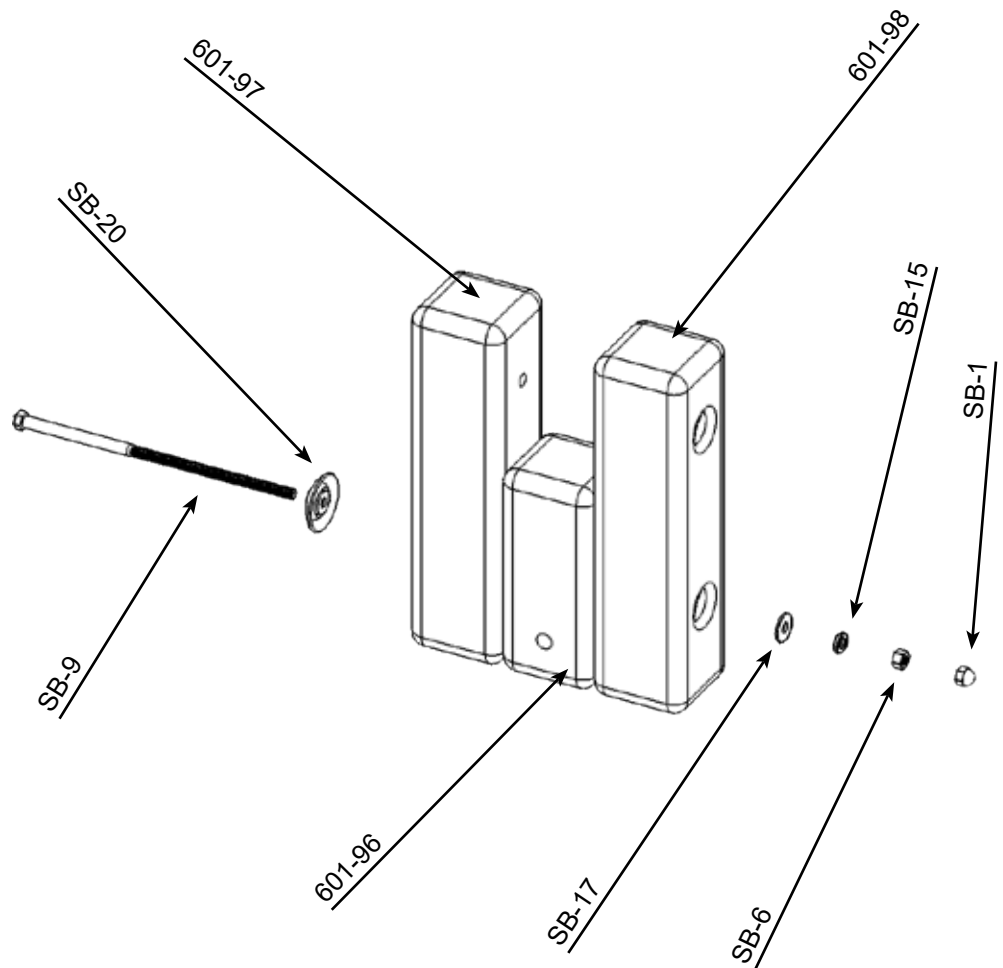


Beam Assembly

PARTS NEEDED

601-101- 125" Universal Swingbeam- (1)
 601-K- Ductile Iron Swing Hanger- (4)



SB-8- 3/8" x 7" Hex Bolt- (8)
 SB-17- 3/8" USS Flatwasher- (9)
 SB-13- 3/8" Nylon Insert Locknut- (8)
 SB-6- 3/8" Hex Nut- (1)

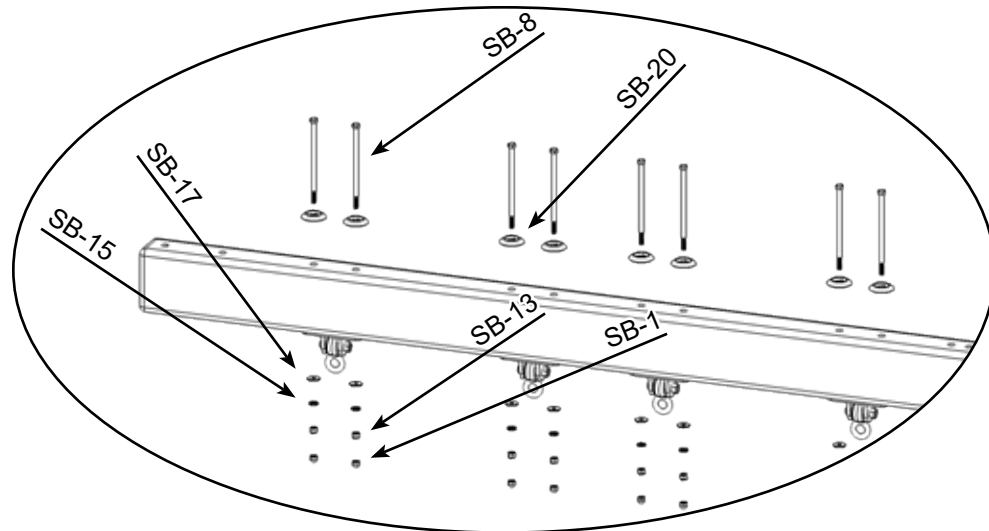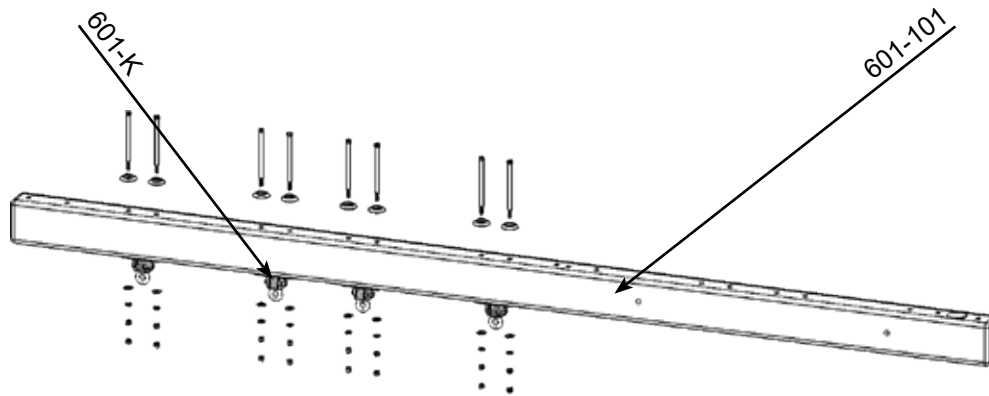

A-Frame Assembly

HARDWARE NEEDED

SB-20- 3/8" Bolt Cup- (9)
 SB-15- 3/8" Split Lockwasher- (9)
 SB-1- 3/8" Acorn Nut Plated- (9)
 SB-9- 3/8" x 10" Hex Bolt- (1)

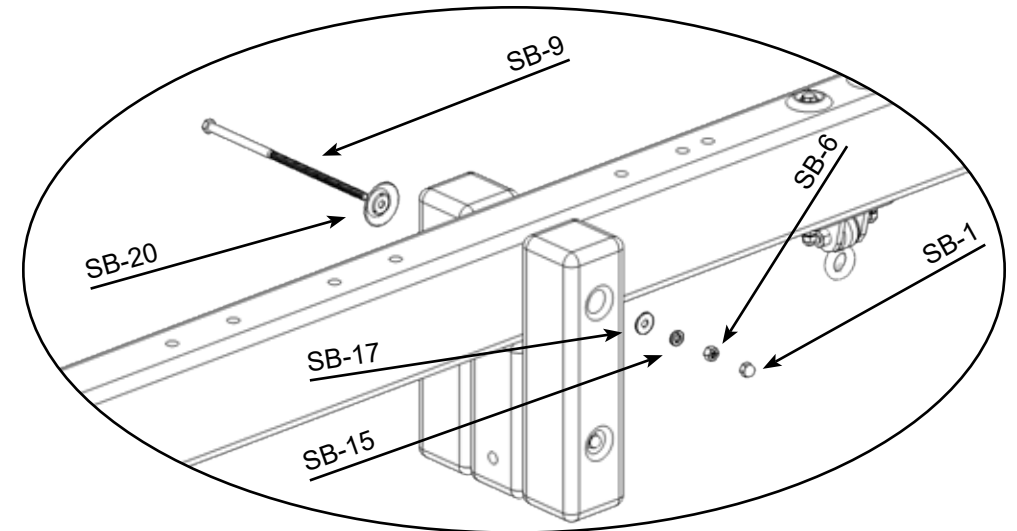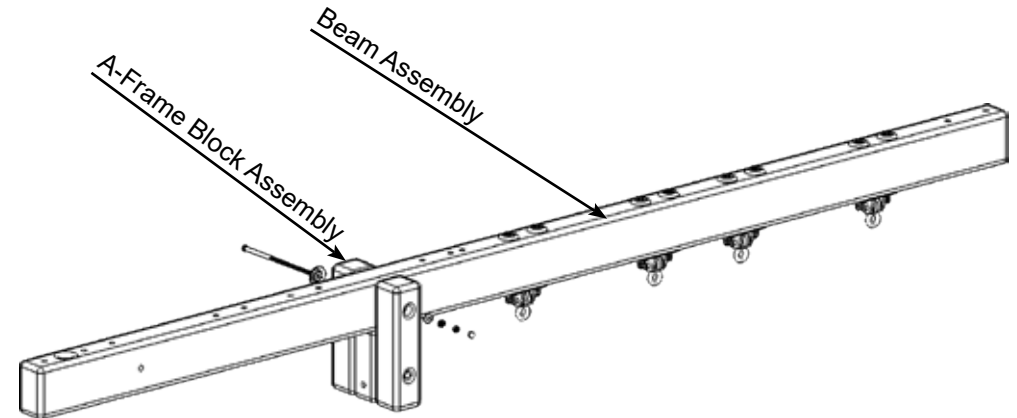

A-Frame Assembly




PARTS NEEDED

A-Frame- (1)
 601-100- 113" A-Frame Leg- (2)
 601-Q- 45 Degree Swingbeam Bracket- (2)

SB-10- 1/2" x 11 1/2" Hex Bolt- (1)
 SB-16- 1/2" Split Lockwasher- (3)
 SB-2- 1/2" Acorn Nut Plated- (3)
 SB-19- 3/4" USS Flatwasher- (2)

HARDWARE NEEDED

SB-18- 1/2" USS Flatwasher- (4)
 SB-7- 1/2" Hex Nut- (3)
 SB-4- 1/2" x 7" Carriage Bolt- (2)

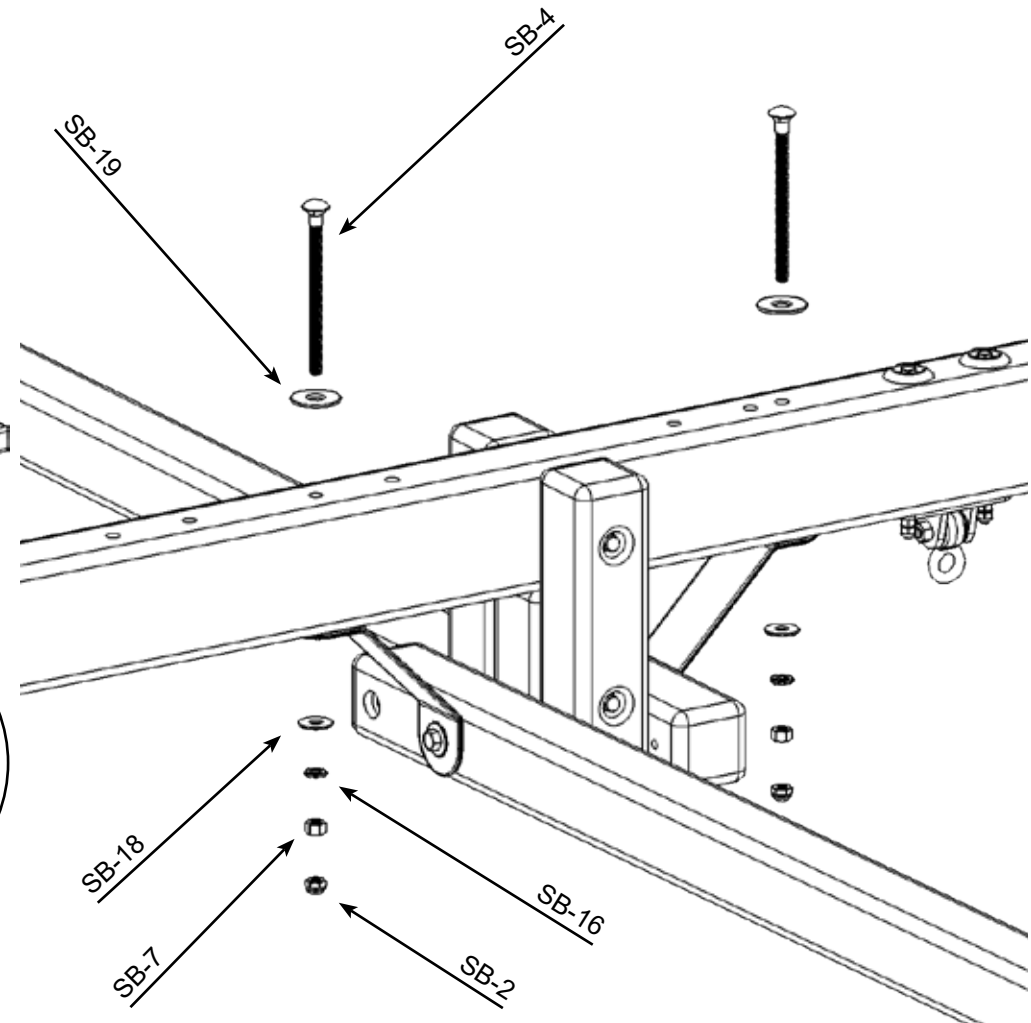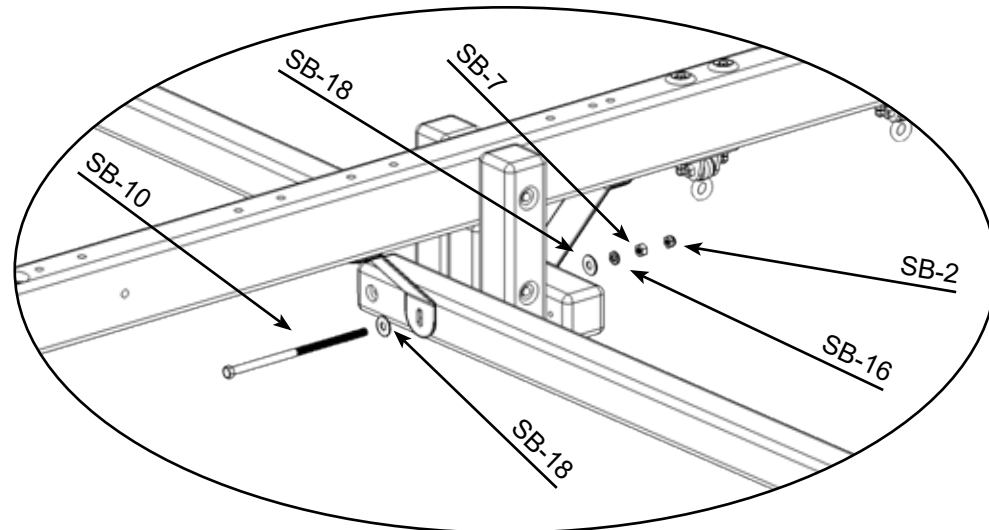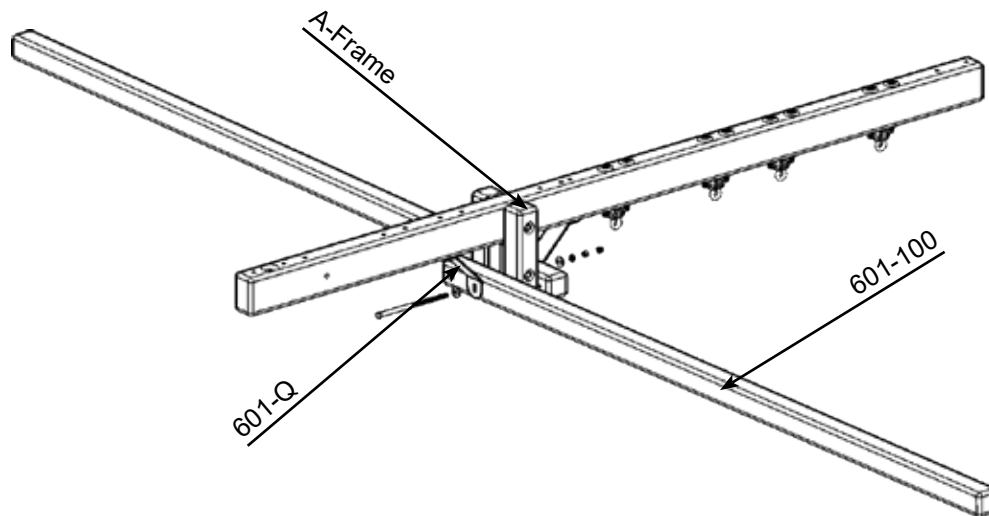


Chimney Blocks

PARTS NEEDED

601-4 5 3/4" Chimney Block #4-	(2)
601-5- 7" Chimney Block #3-	(2)
601-91- 13" Chimney Block #1-	(1)
601-90- Chimney Block #2-	(1)

HARDWARE NEEDED

E- 2 1/2" Coated Deck Screw-	(8)
------------------------------	-----

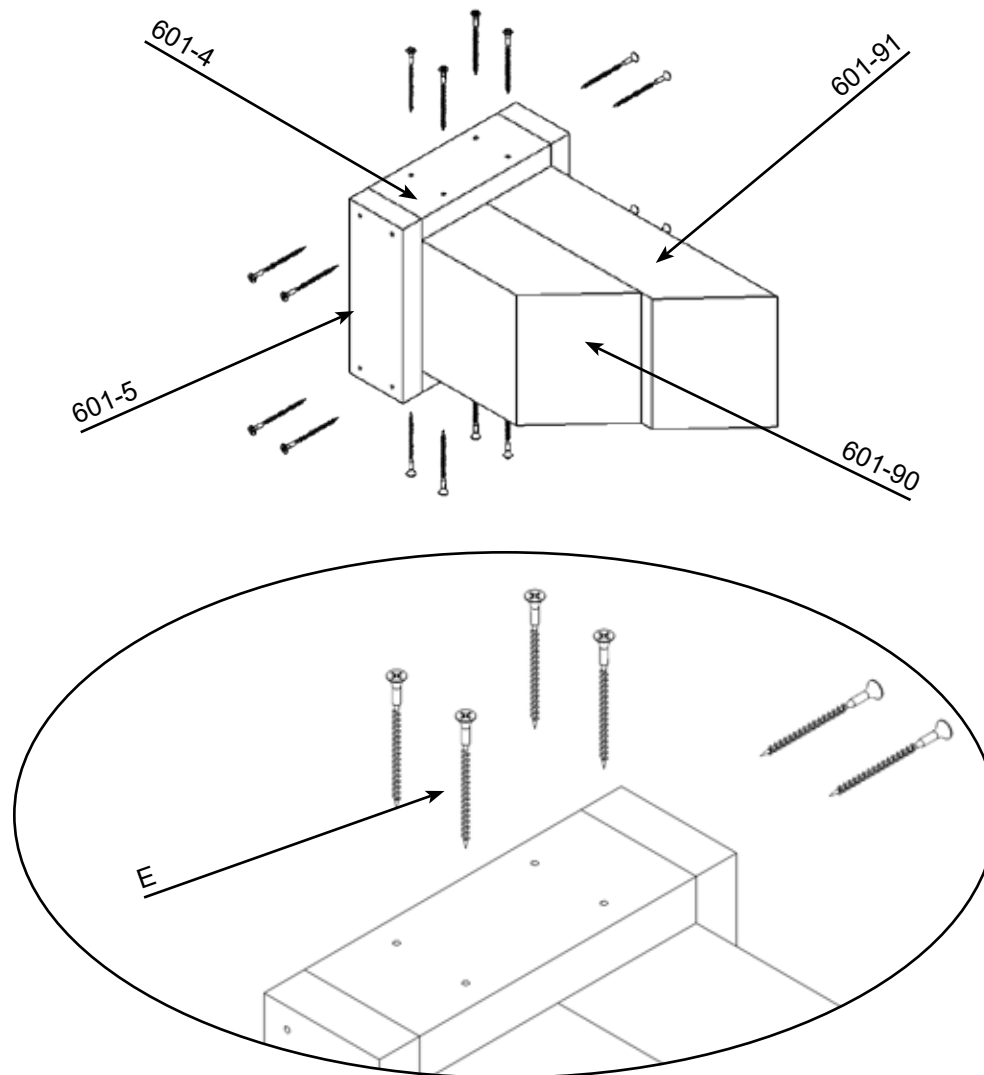

Swingbeam Side Wall






PARTS NEEDED

601-85- 44" Swingbeam Top Joist-	(1)
601-89- 108 1/2" Corner Post-	(2)
601-43- 44" Slim 4- Hole Facia-	(3)
601-62- 44" 6- Hole Facia-	(1)
601-61- 44" 4- Hole Facia-	(1)

A-5- 3/8" x 6" Hex Bolt-	(2)
A-11- 3/8" USS Flatwasher-	(2)
A-2- 3/8" Hex Nut-	(2)
F- 1/4" x 3" Hex Lag Screw-	(20)

HARDWARE NEEDED

A-12- 3/8" Bolt Cup-	(2)
A-10- 3/8" Split Lockwasher-	(2)
A-1- 3/8" Acorn Nut Plated-	(2)
K- 1/4" USS Flatwasher-	(20)

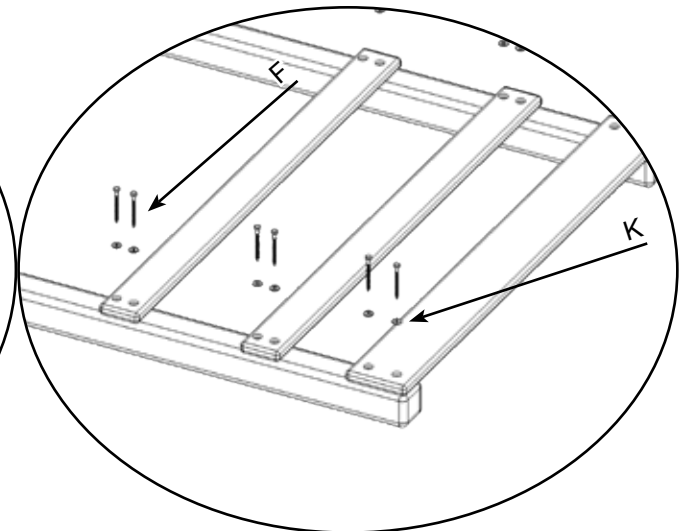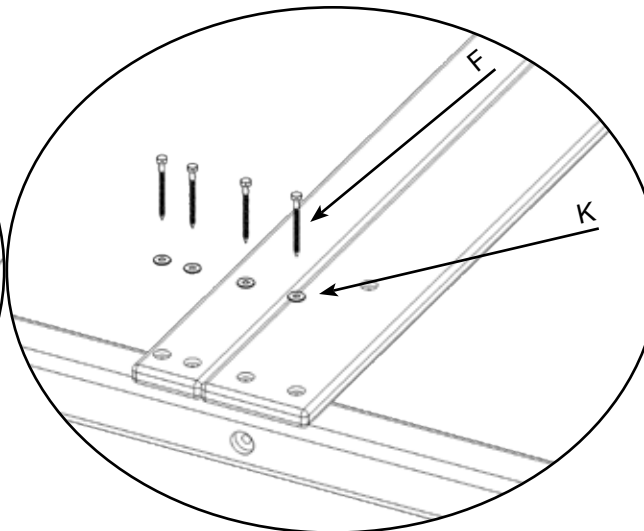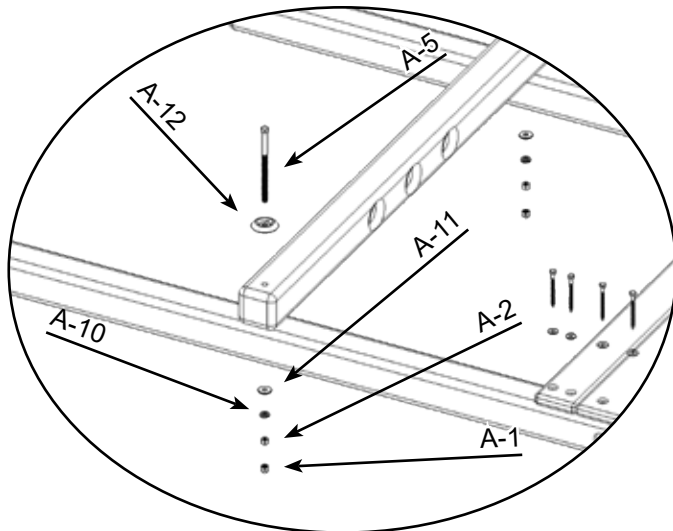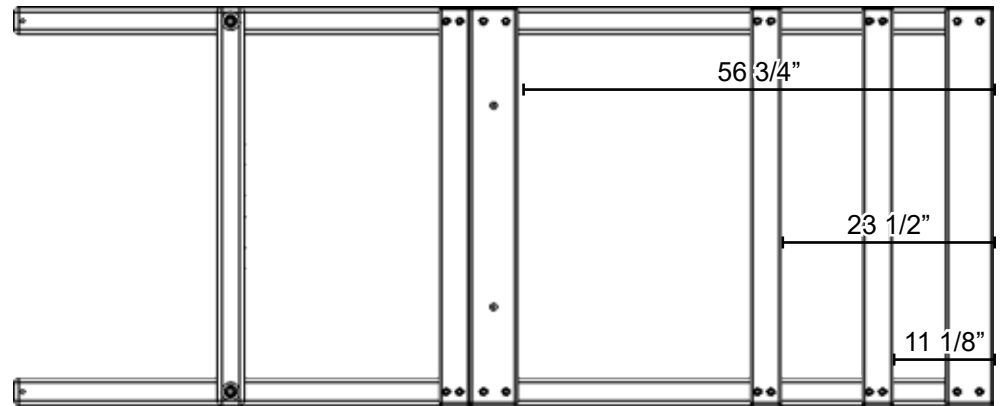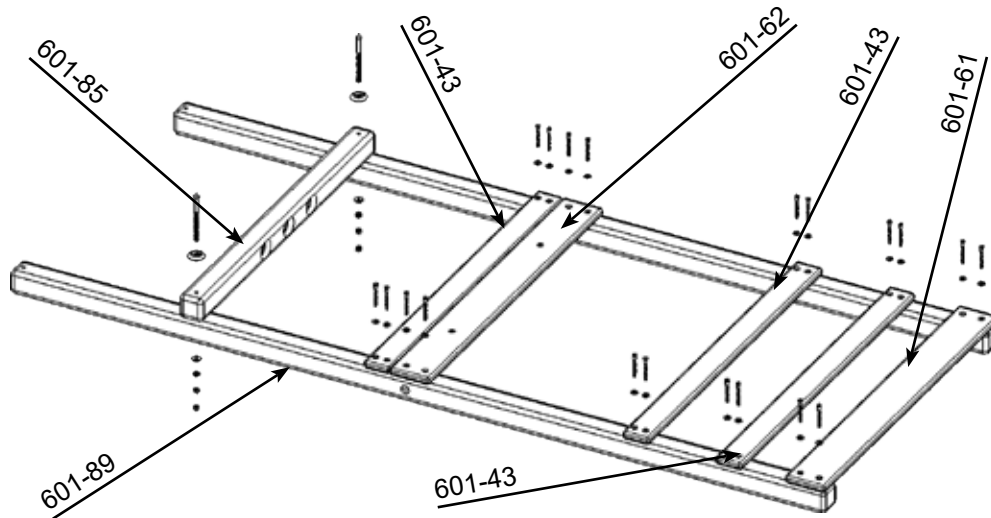

Trapeze Side Wall






PARTS NEEDED

601-86- 76 3/8" Trapeze Arm-	(1)
601-43- 44" Slim 4- Hole Facia-	(1)
601-61- 44" 4- Hole Facia-	(2)
601-88- 103" Corner Post-	(2)

A-5- 3/8" x 6" Hex Bolt-	(2)
A-11- 3/8" USS Flatwasher-	(2)
A-2- 3/8" Hex Nut-	(2)
F- 1/4" x 3" Hex Lag Screw-	(12)

HARDWARE NEEDED

A-12- 3/8" Bolt Cup-	(2)
A-10- 3/8" Split Lockwasher-	(2)
A-1- 3/8" Acorn Nut Plated-	(2)
K- 1/4" USS Flatwasher-	(12)

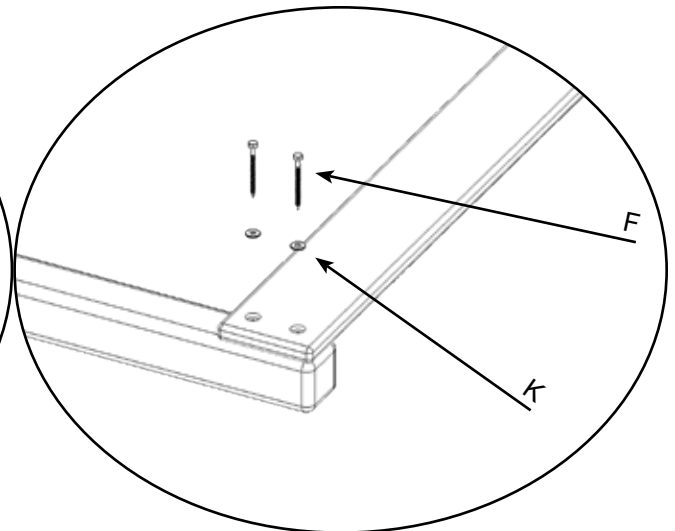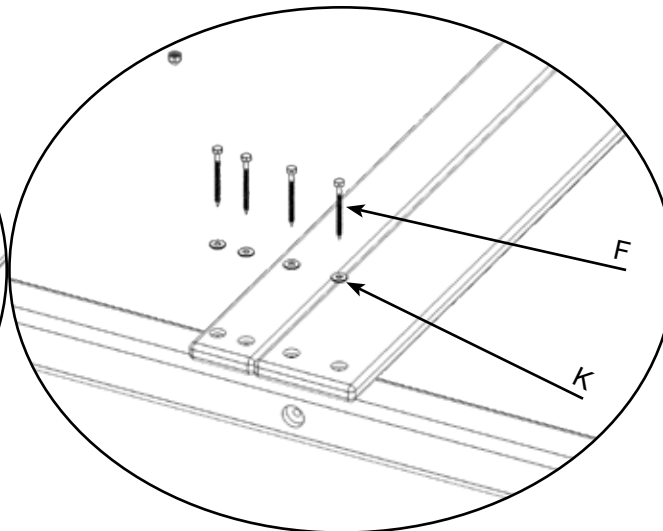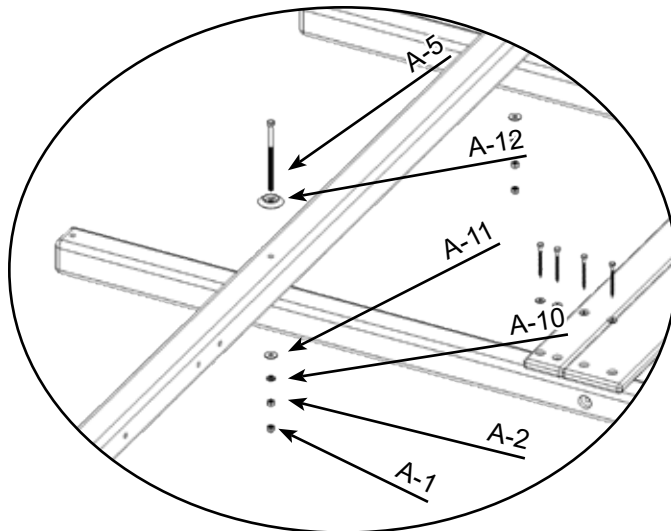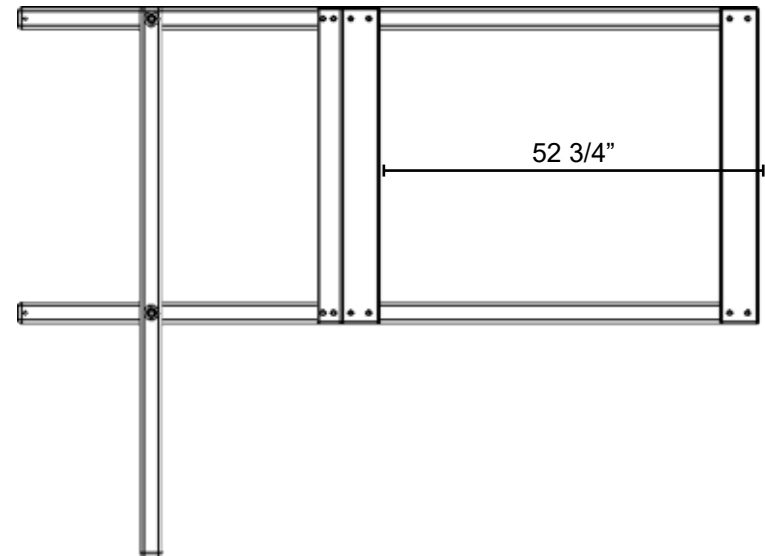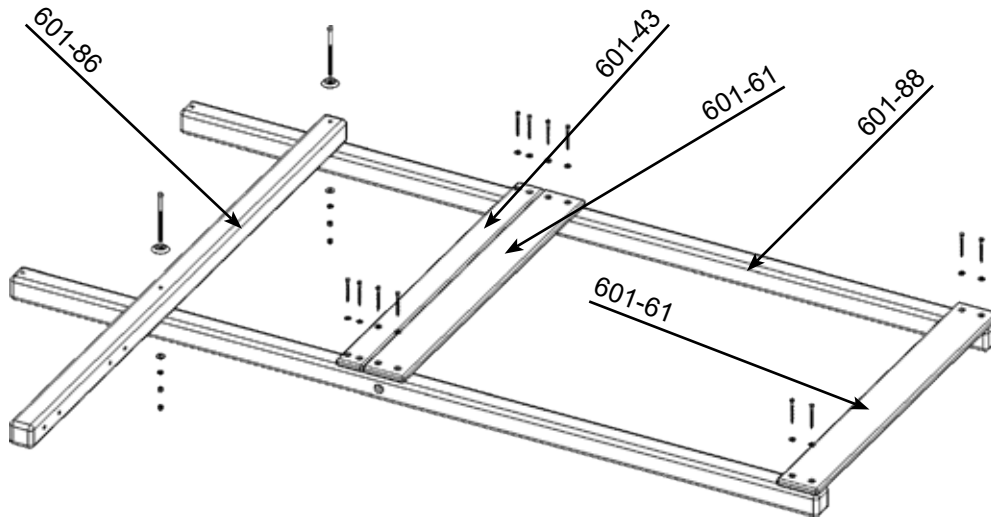





Trapeze Side Wall

PARTS NEEDED

601-83- 18 3/16" Trapeze Gusset- (1)
601-K- Ductile Iron Swing Hanger- (2)

HARDWARE NEEDED

A-8- 3/8" x 3 1/2" Hex Lag Screw-	(2)	A-11- 3/8" USS Flatwasher-	(6)
A-4- 3/8" x 4 1/2" Hex Bolt-	(4)	A-12- 3/8" Bolt Cup-	(4)
A-10- 3/8" Split Lockwasher-	(4)	A-9- 3/8" Nylon Insert Lockwasher-	(4)
A-1- 3/8" Acorn Nut Plated-	(4)		

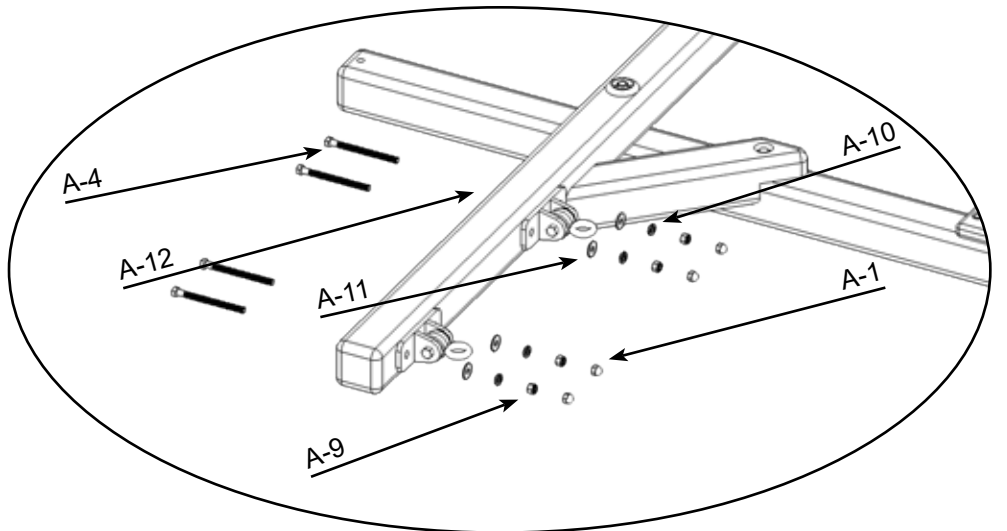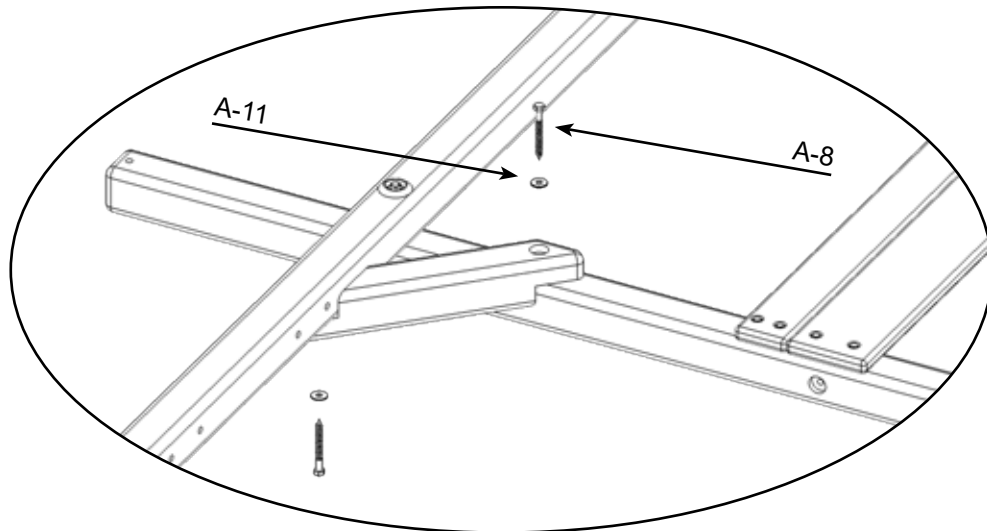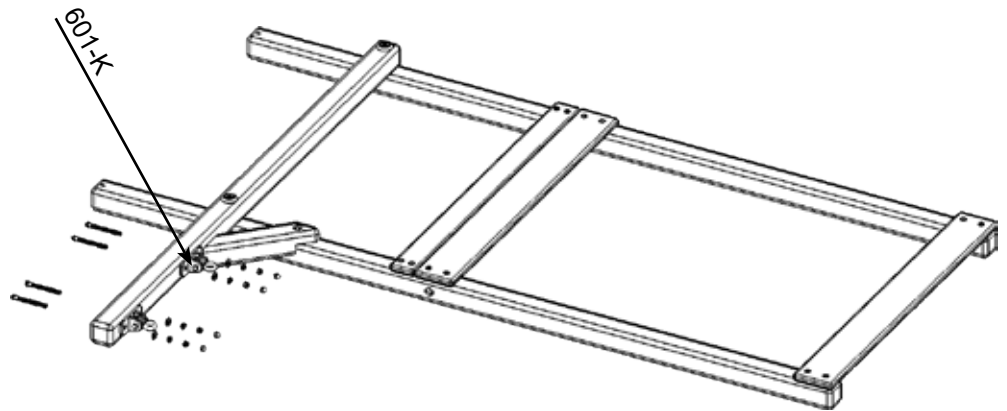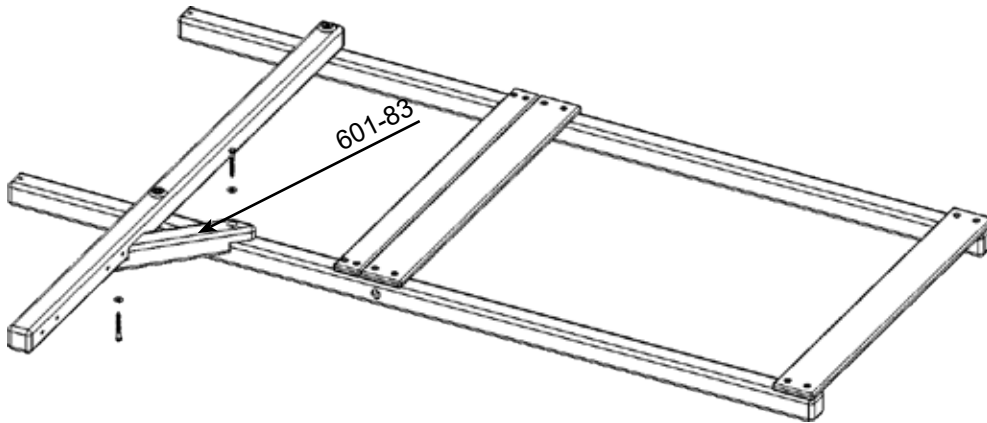

Main Assembly





PARTS NEEDED

Trapeze Wall-	(1)
Swingbeam Wall-	(1)
601-67- 92 5/8" Rockwall Side Runner-	(1)
601-66- 92 5/8" Ladder Side Runner-	(1)
607-81- 92 5/8" Mainbeam-	(2)

K- 1/4" USS Flatwasher-	(12)
A-4- 3/8" x 4 1/2" Hex Bolt-	(4)
J- 3/8" T-Nut-	(4)

HARDWARE NEEDED

F- 1/4" x 3" Hex Lag Screw-	(12)
A-11- 3/8" USS Flatwasher-	(4)
A-1- 3/8" Acorn Nut Plated-	(4)

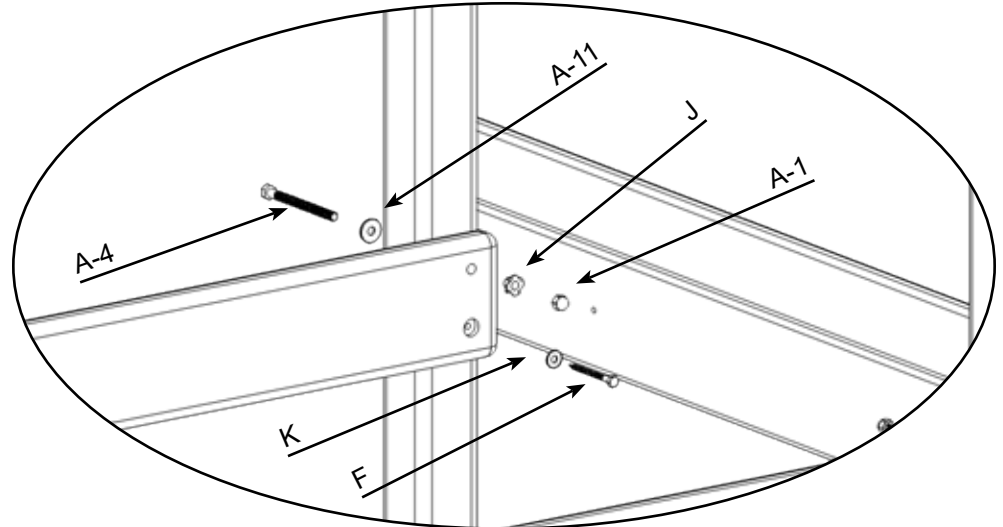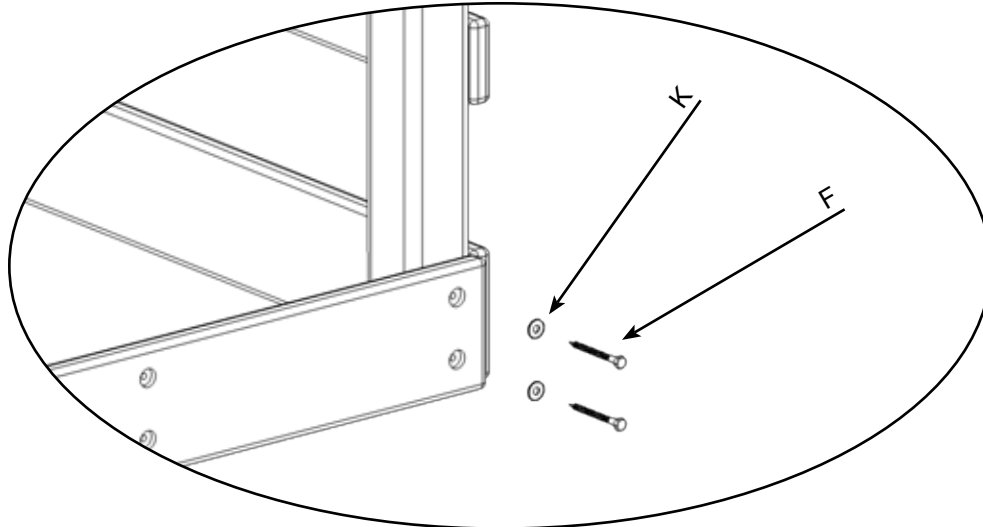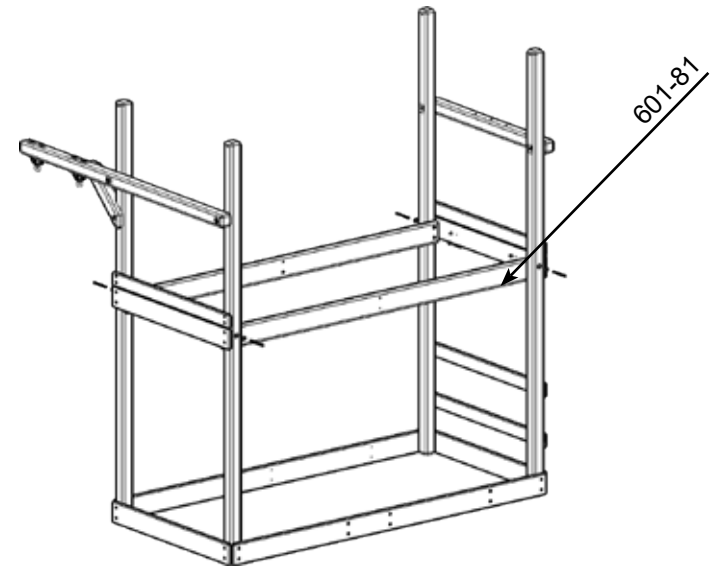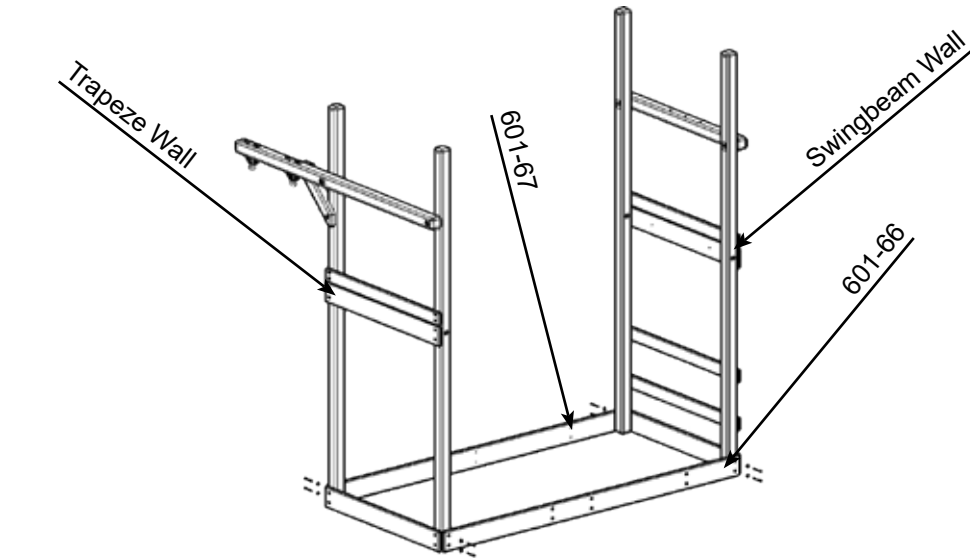

Main Assembly






PARTS NEEDED

601-87- 103" Center Post- (2)
601-65- 92 5/8" 10- Hole Facia- (2)

A-4- 3/8" x 4 1/2" Hex Bolt- (2)
J- 3/8" T-Nut- (2)
K- 1/4" USS Flatwasher- (14)

HARDWARE NEEDED

A-11- 3/8" USS Flatwasher- (2)
A-1- 3/8" Acorn Nut Plated- (2)
F- 1/4" x 3" Hex Lag Screw- (14)

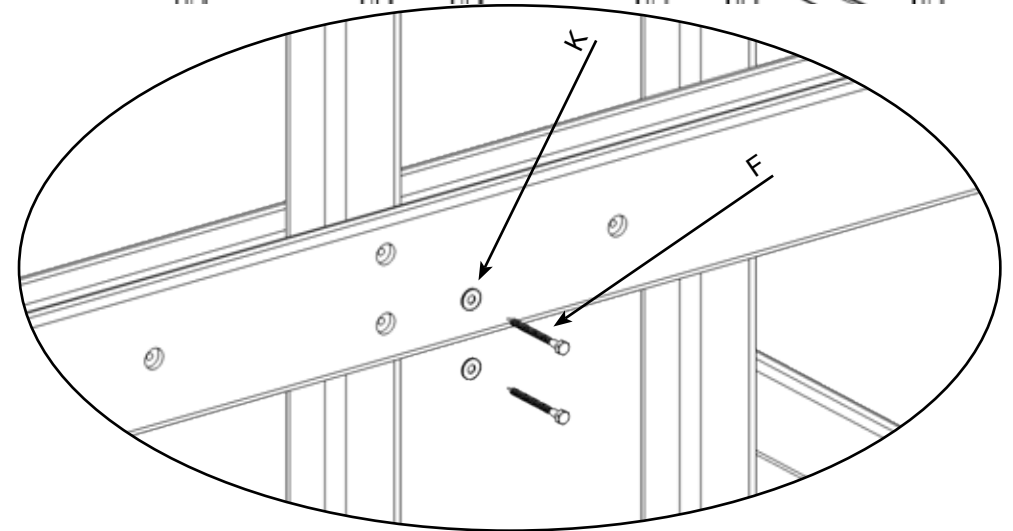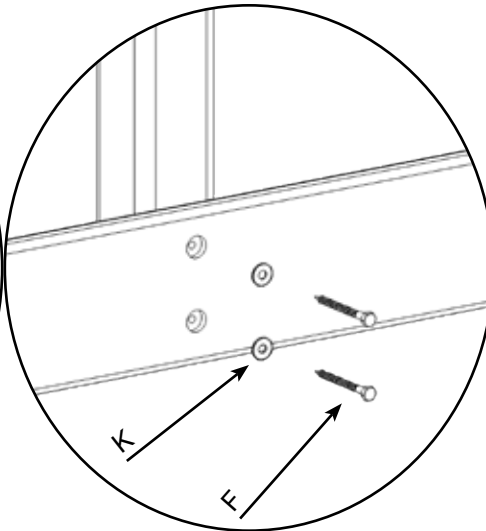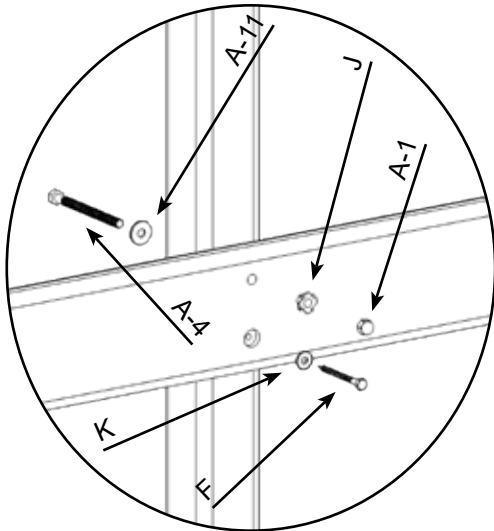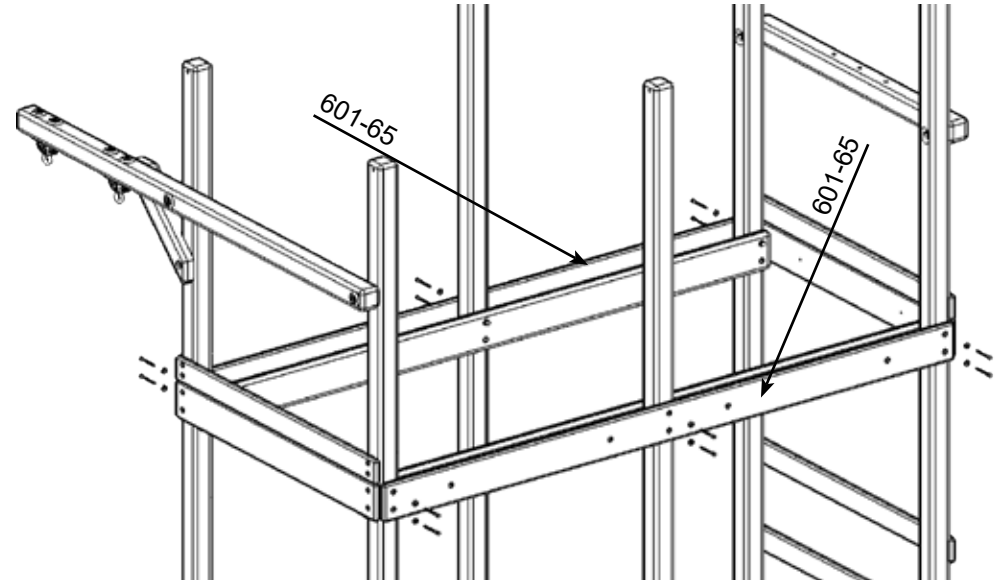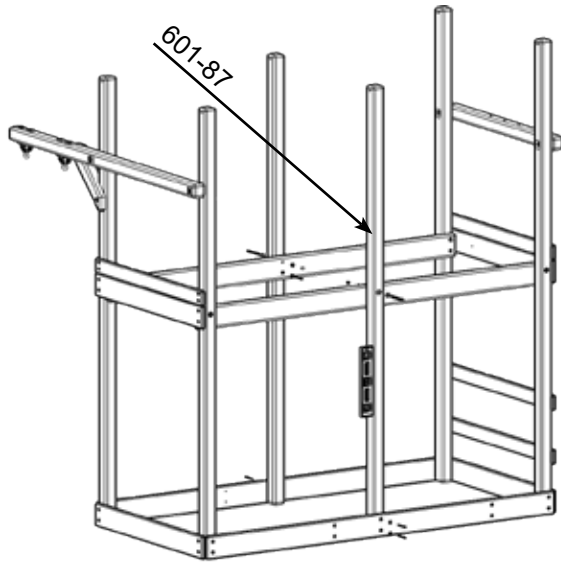





Main Assembly

PARTS NEEDED

601-84- 24 1/8" Picnic Table Leg-	(2)
601-71- 18 3/16" Outside Picnic Bench Support-	(2)
601-34- 37 15/16" Picnic Seat Board-	(1)
601-42- 44" Picnic Seat Board-	(1)
601-63- 44" Picnic Seat Board-	(1)

HARDWARE NEEDED

K- 1/4" USS Flatwasher-	(4)
F- 1/4" x 3" Hex Lag Screw-	(4)
E- 2 1/2" Coated Deck Screw-	(12)

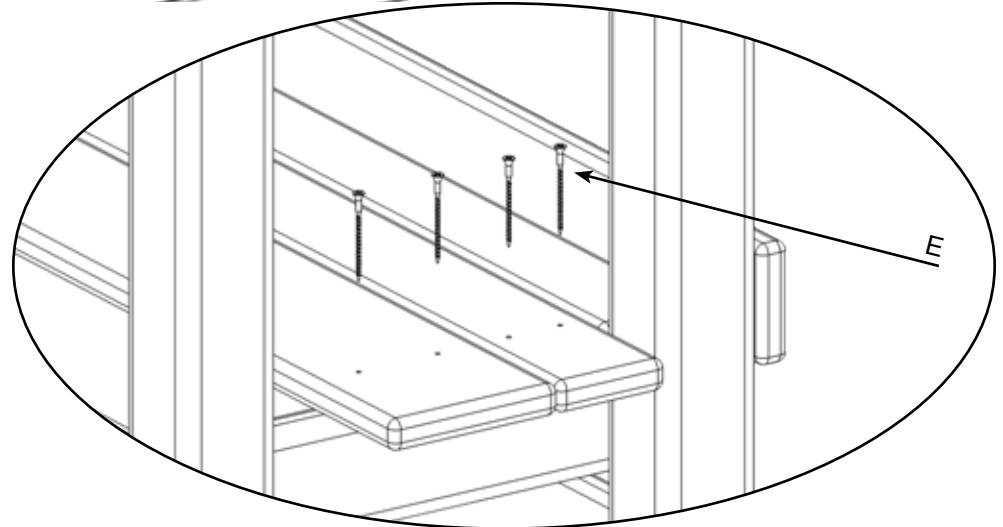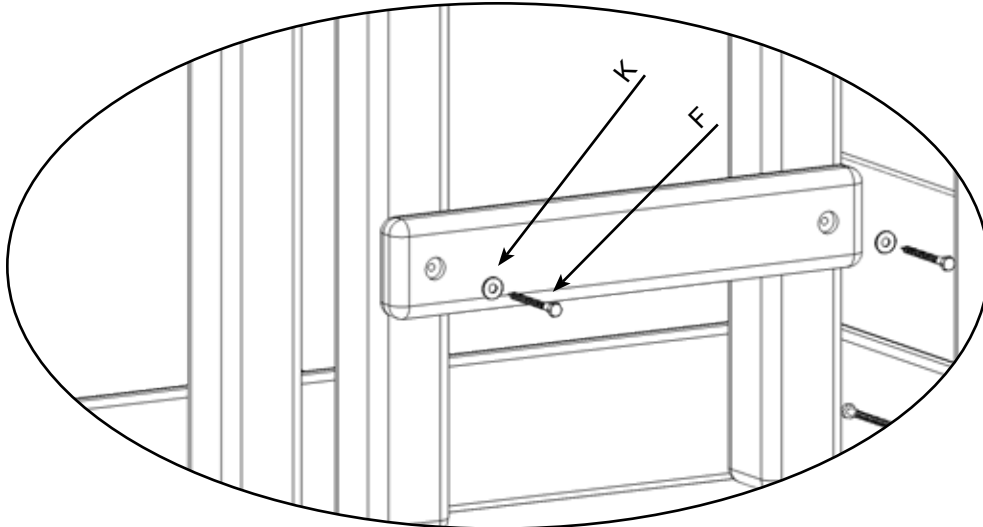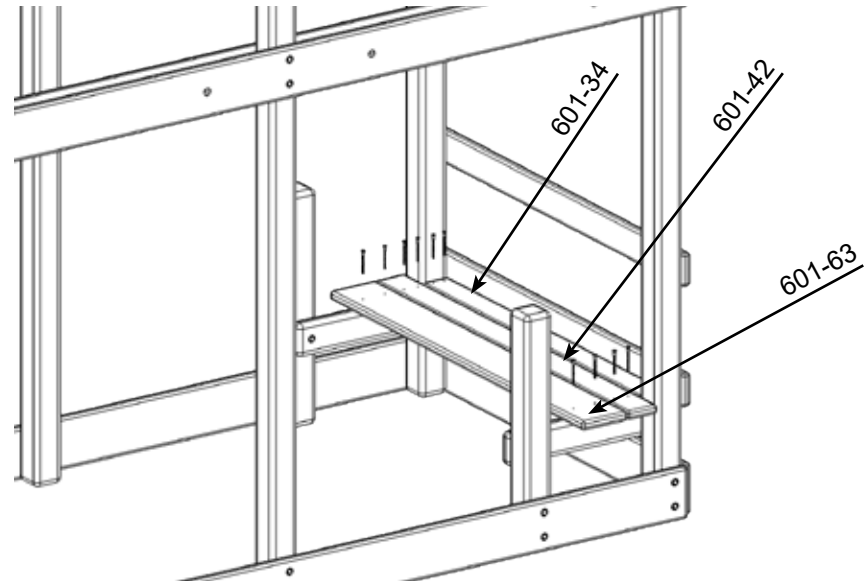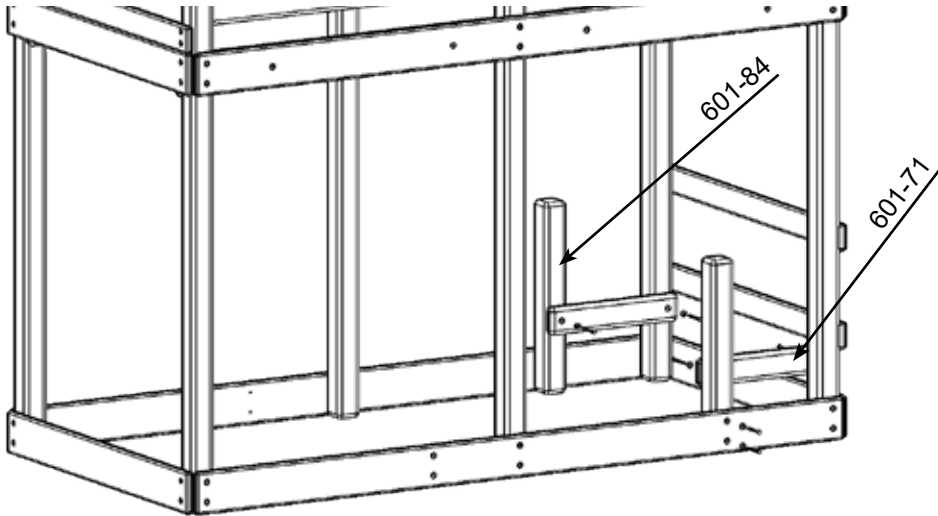





Main Assembly

PARTS NEEDED

601-74- 32 5/8" Picnic Table Support- (2)
601-50- 44" Picnic Table Board- (6)

HARDWARE NEEDED

K- 1/4" USS Flatwasher- (4)
F- 1/4" x 3" Hex Lag Screw- (4)
E- 2 1/2" Coated Deck Screw- (24)

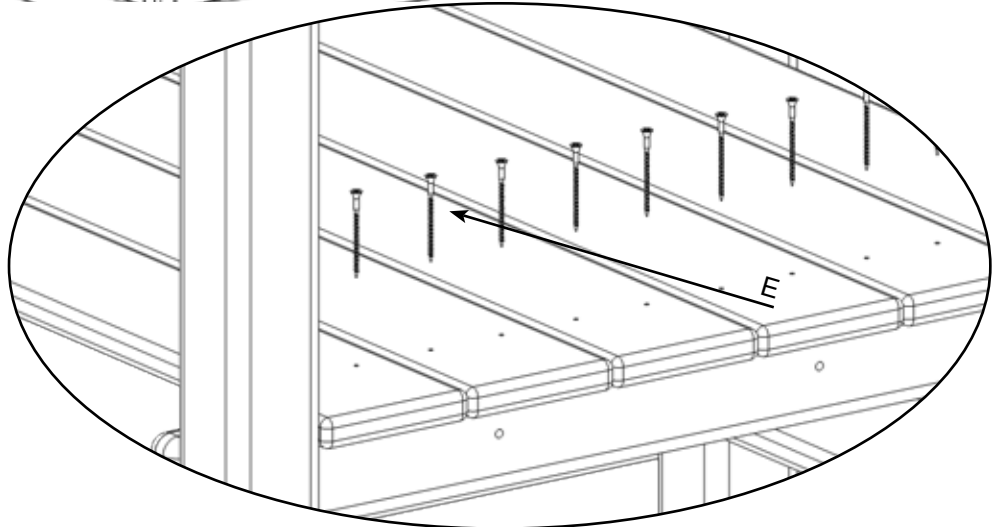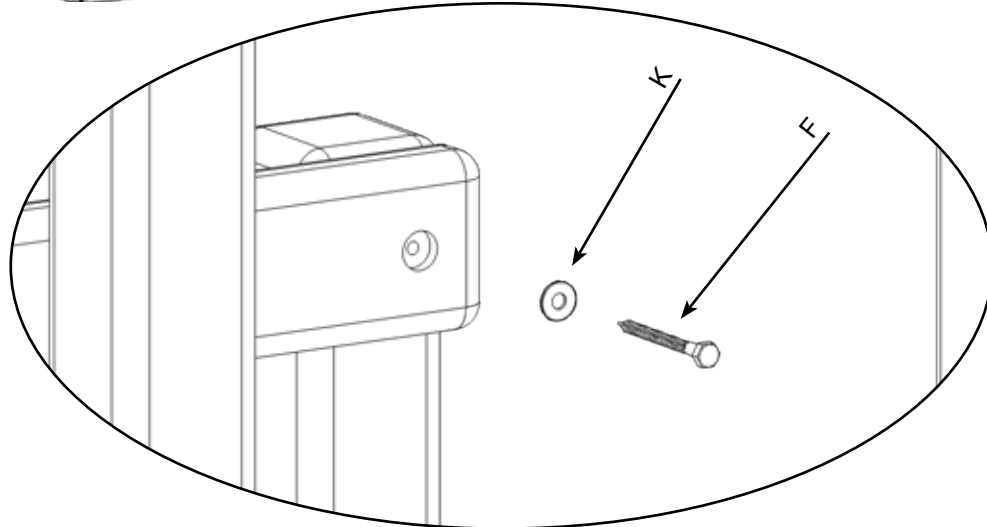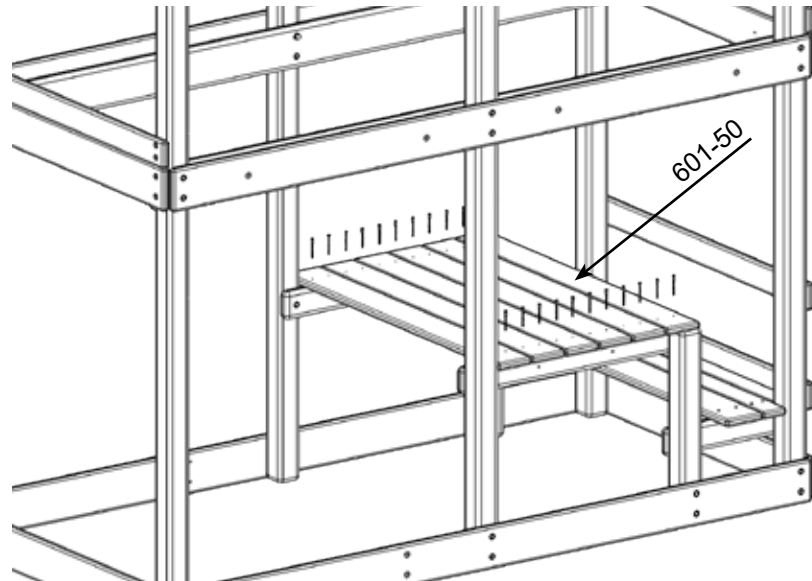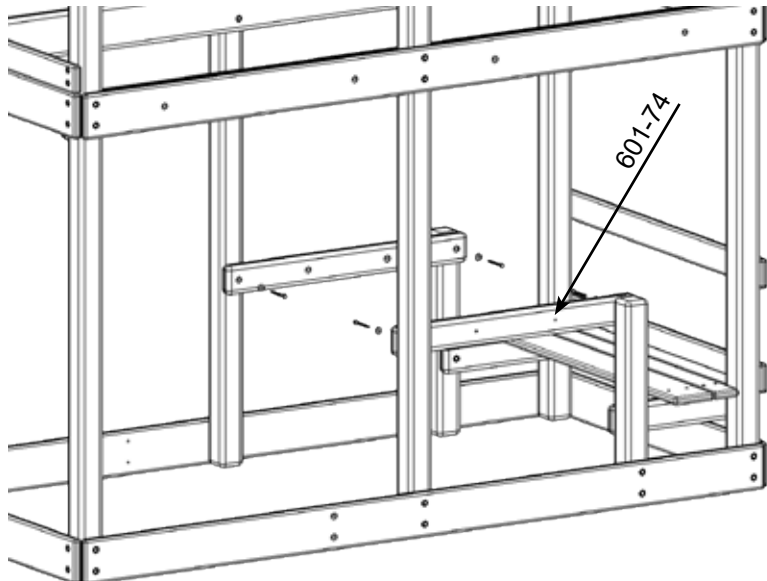





Main Assembly

PARTS NEEDED

601-70- 17" Gusset-	(4)
601-69- 15 3/8" Picnic Seat Bench Support-	(2)
601-82- 11 1/8" Picnic Seat Leg-	(2)

HARDWARE NEEDED

K- 1/4" USS Flatwasher-	(16)
F- 1/4" x 3" Hex Lag Screw-	(12)
A-7- 1/4" x 2" Hex Lag Screw-	(4)

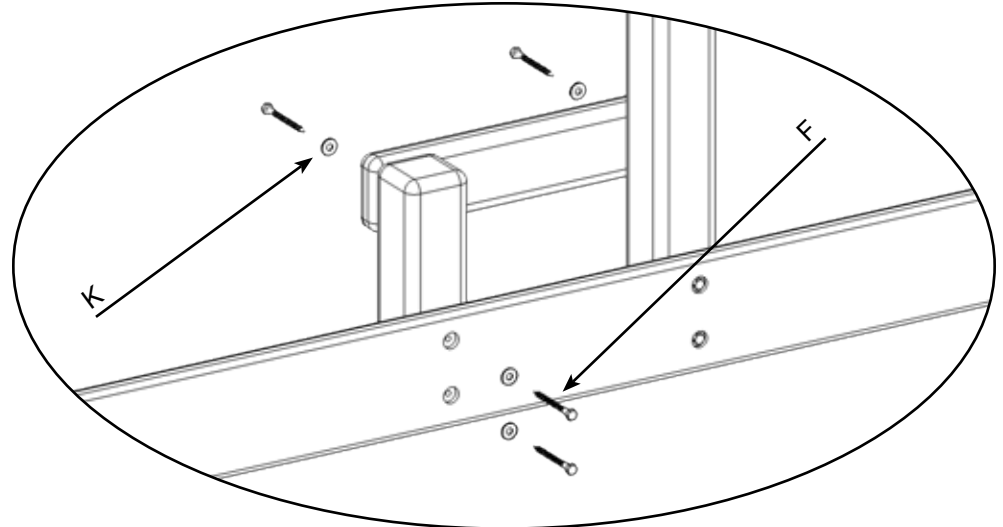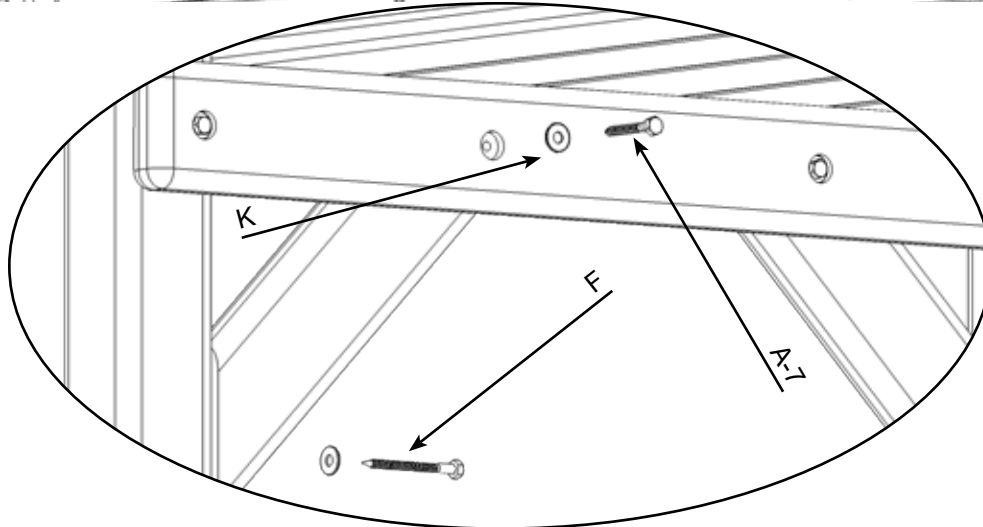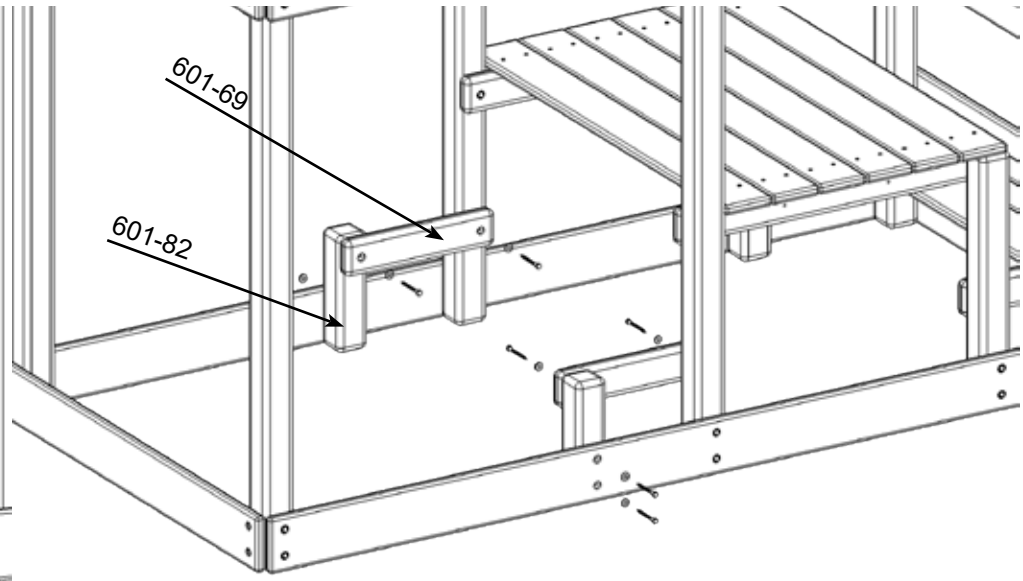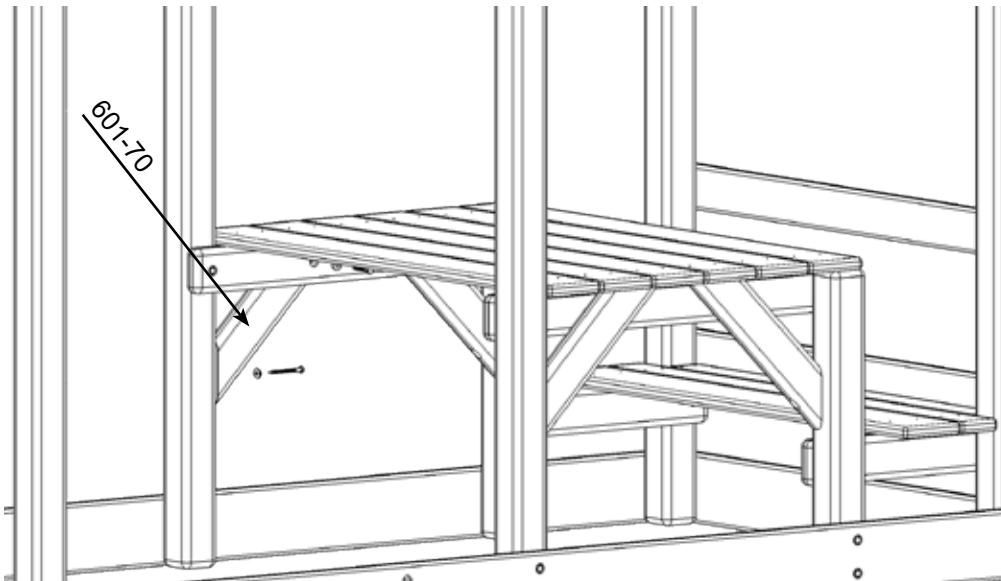





Main Assembly

PARTS NEEDED

601-63- 44" Picnic Seat Board-	(1)
601-42- 44" Picnic Seat Board-	(2)
601-34- 37 15/16" Picnic Seat Board-	(3)

HARDWARE NEEDED

E- 2 1/2" Coated Deck Screw-	(24)
------------------------------	------

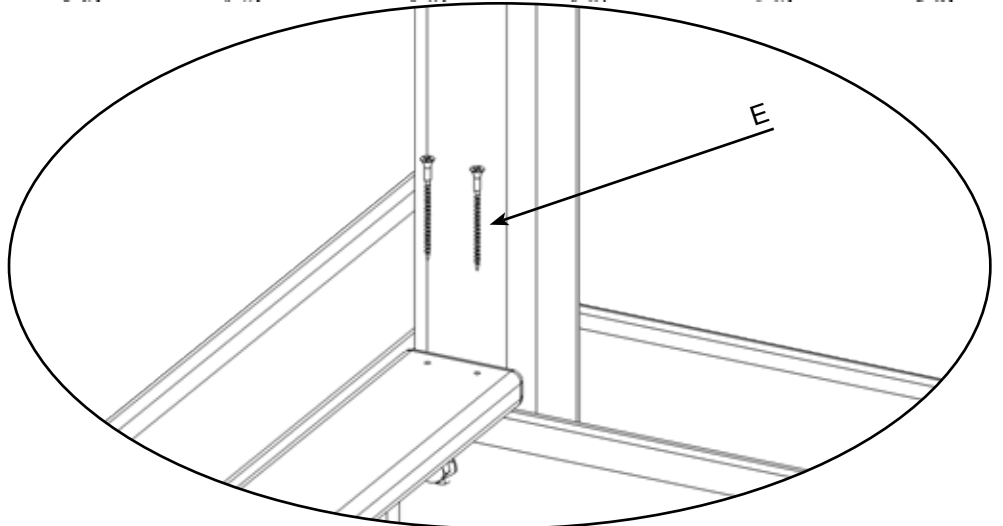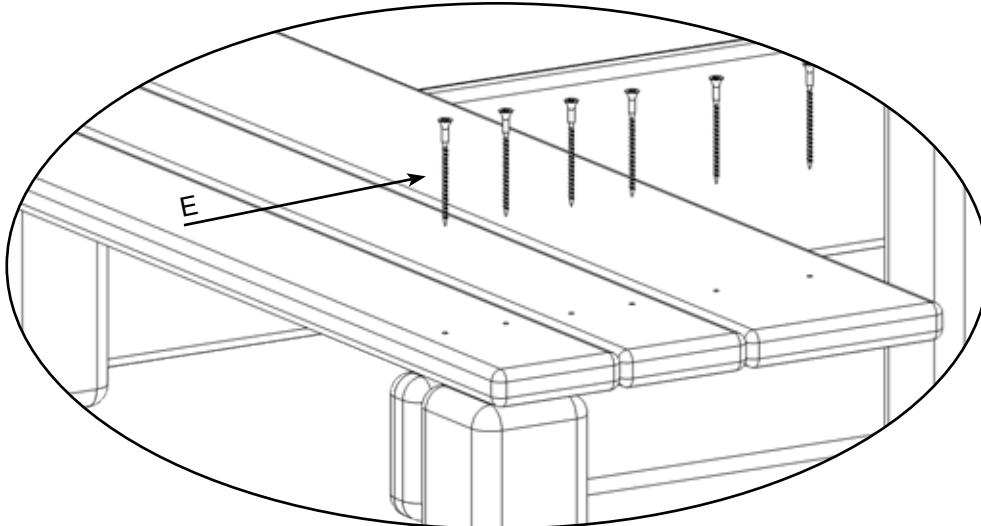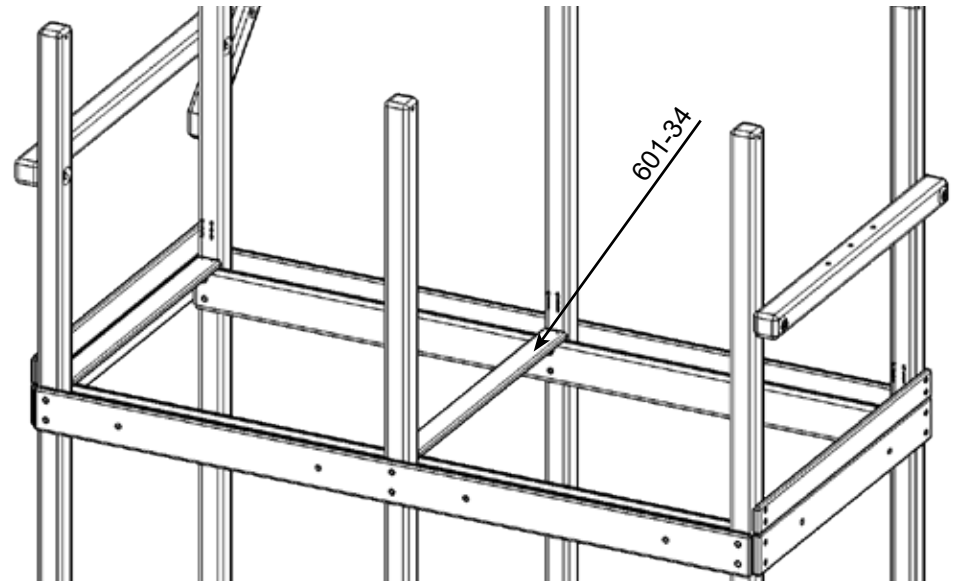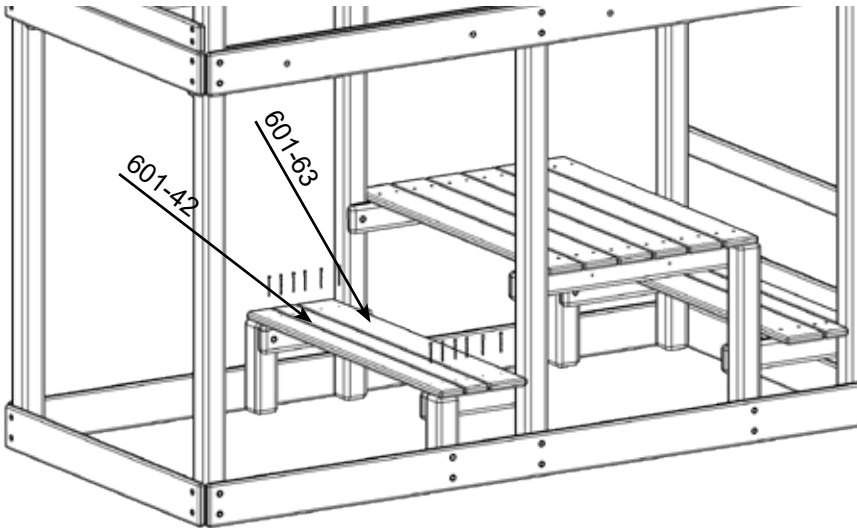





Main Assembly

PARTS NEEDED

601-53- 44" Deck Board-	(16)
601-64- 92 5/8" Deck Support-	(1)

HARDWARE NEEDED

E- 2 1/2" Coated Deck Screw-	(64)
C- 1 5/8" Coated Deck Screw-	(19)

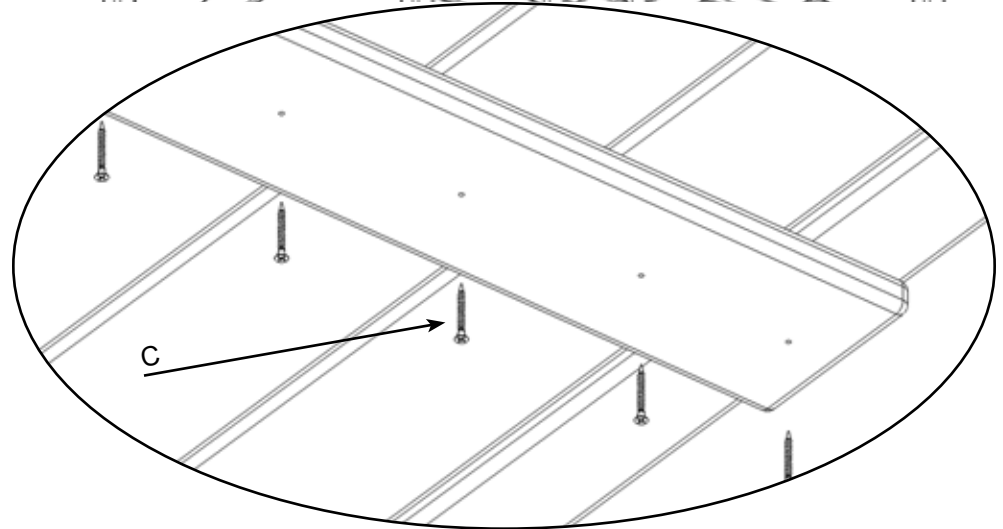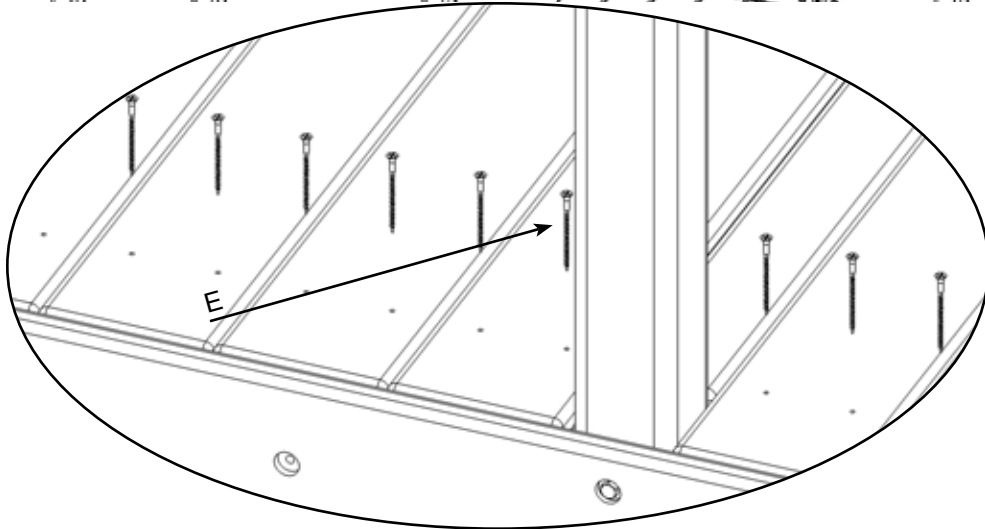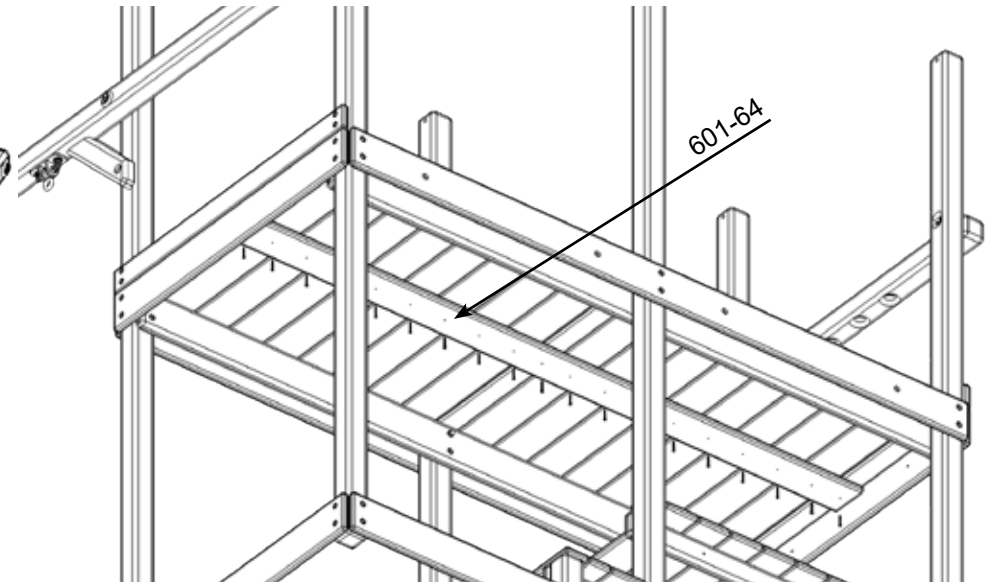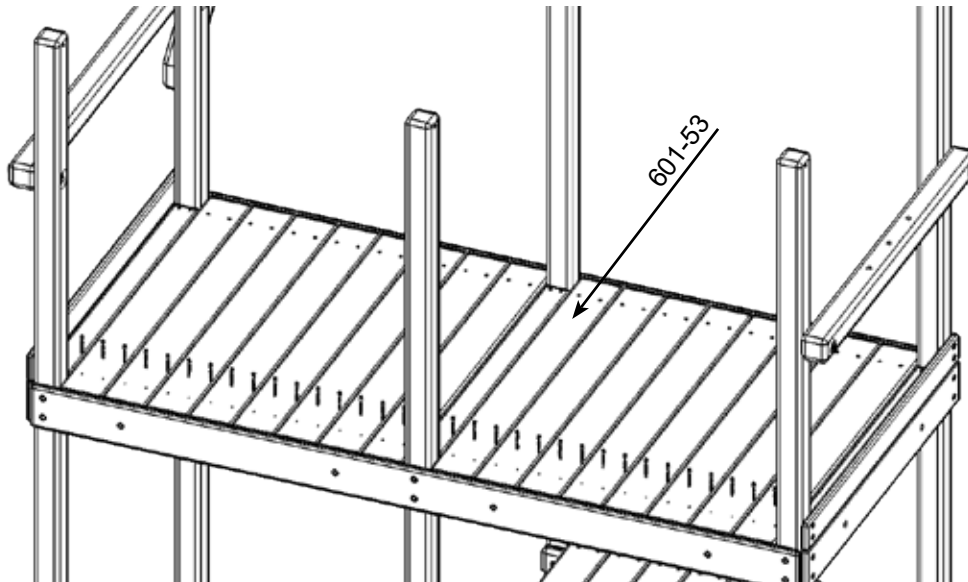





Main Assembly

PARTS NEEDED

601-A- 90 Degree Bracket- (2)
601-70- 17" Gusset- (8)

HARDWARE NEEDED

K- 1/4" USS Flatwasher- (20)
G- #14 x 1" Pan Phillips T/S- (4)
A-6- 1/4" x 1 1/4" Hex Lag Screw- (8)
F- 1/4" x 3" Hex Lag Screw- (8)

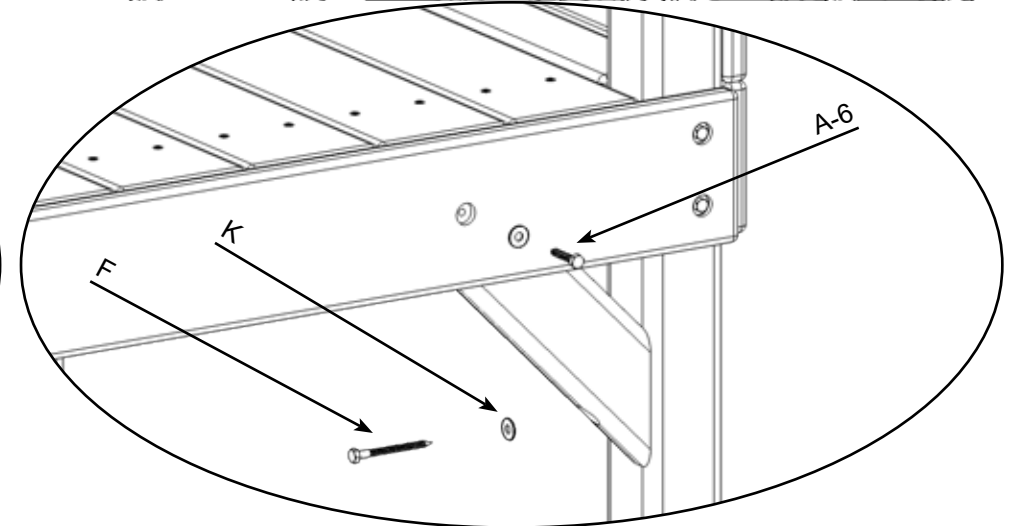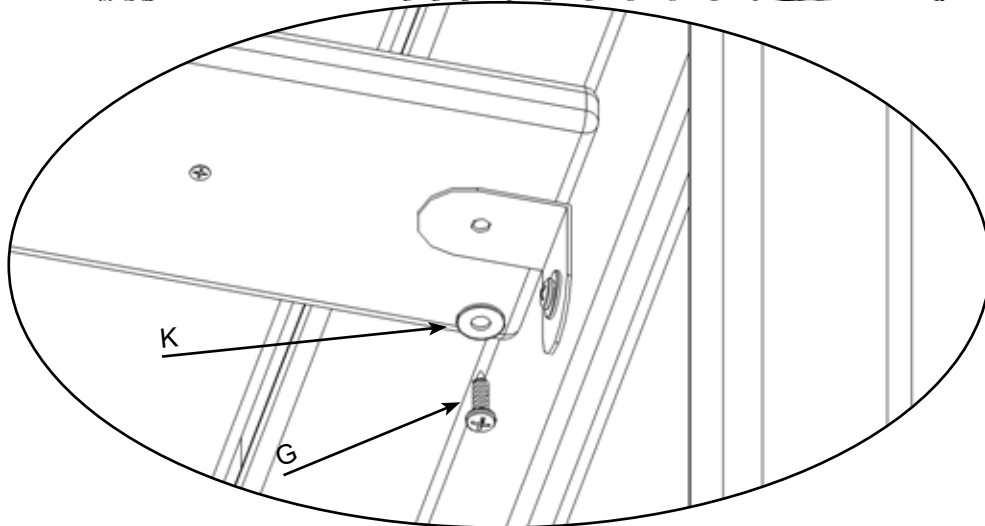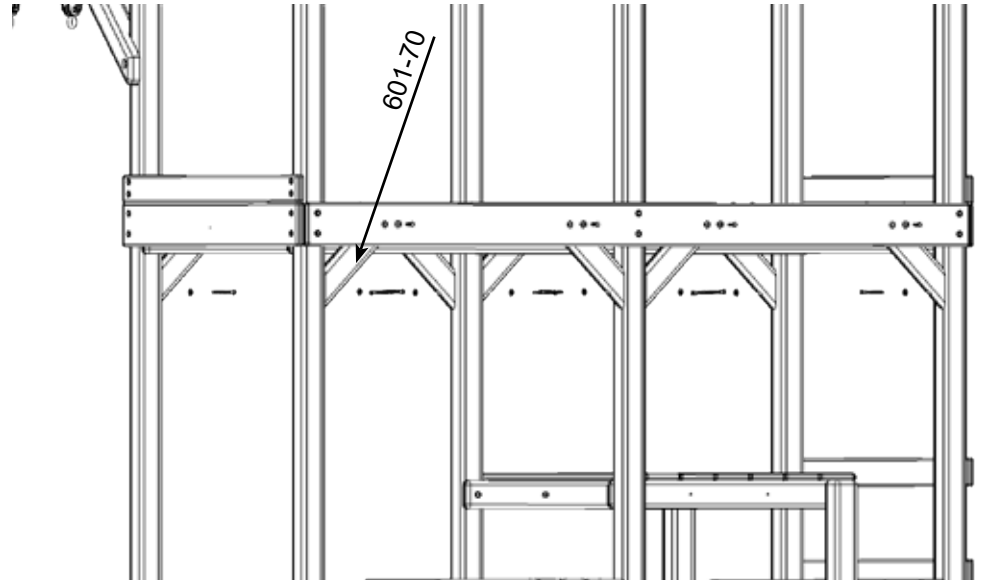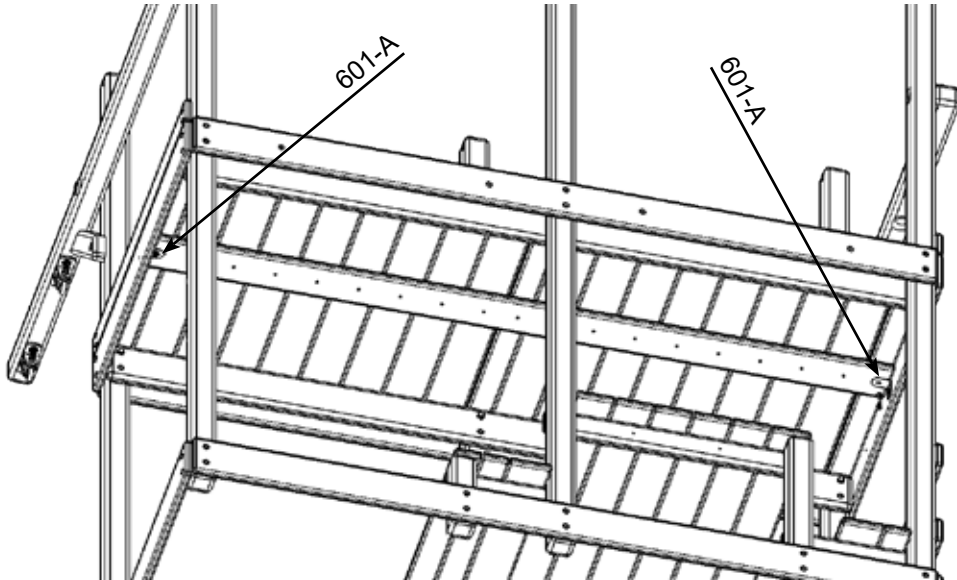





Main Assembly

PARTS NEEDED

601-36- 12" Short 2- Hole Facia- (3)
601-45- 56 13/16" Ladder Side Rail Support Facia- (1)

HARDWARE NEEDED

K- 1/4" USS Flatwasher- (10)
F- 1/4" x 3" Hex Lag Screw- (10)

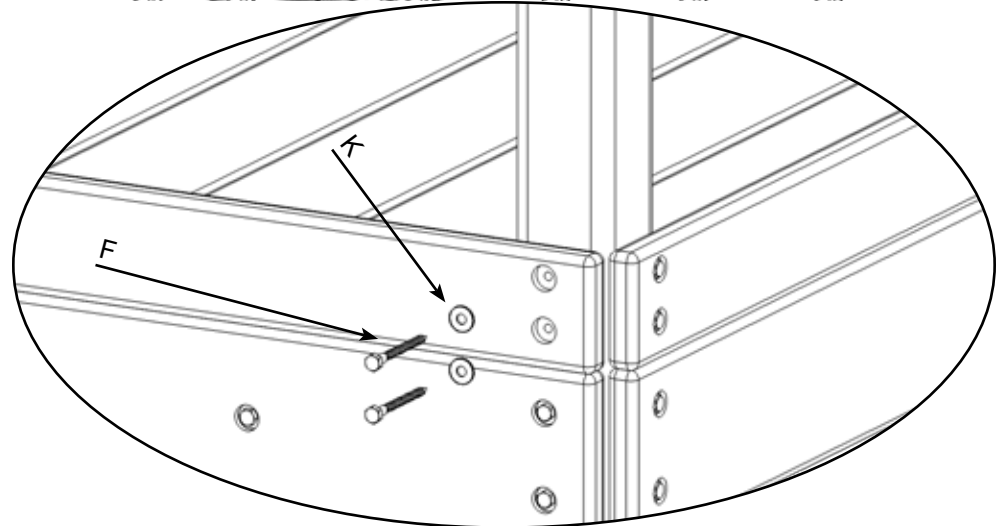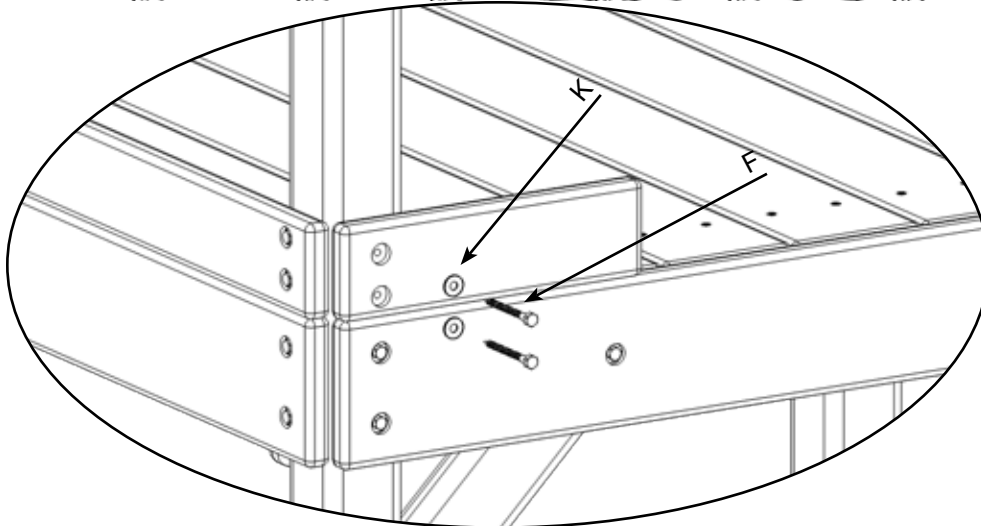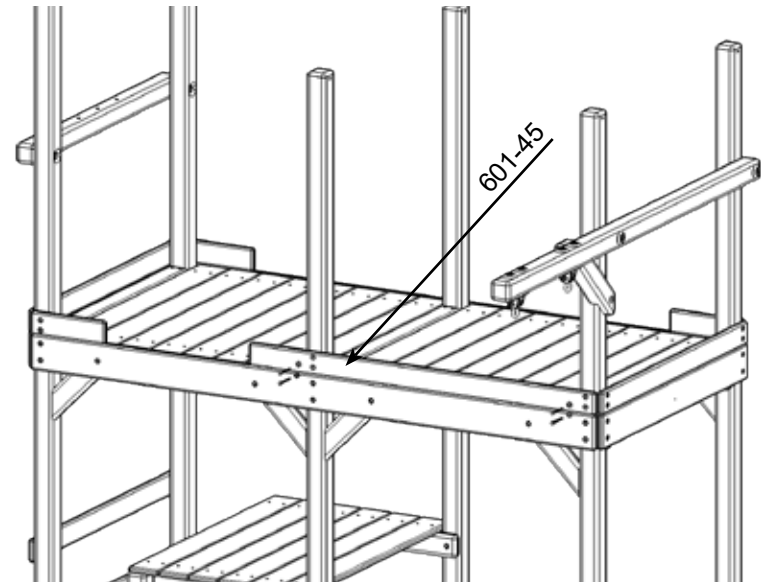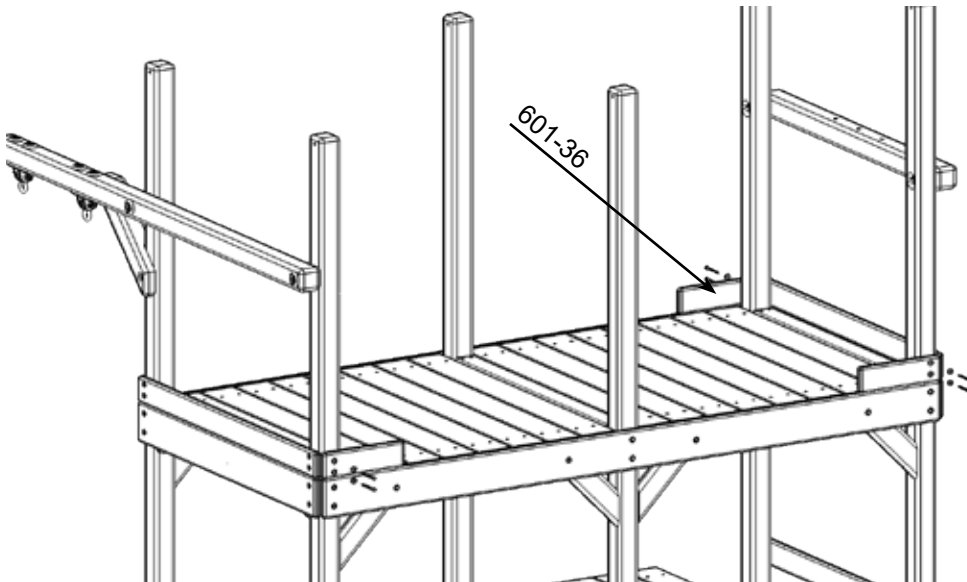





Main Assembly

PARTS NEEDED

601-39- 21" Center Support Facia- (1)
Rockwall Assembly- (1)

HARDWARE NEEDED

K- 1/4" USS Flatwasher- (8)
F- 1/4" x 3" Hex Lag Screw- (2)
G- #14 x 1" Pan Phillips T/S- (6)

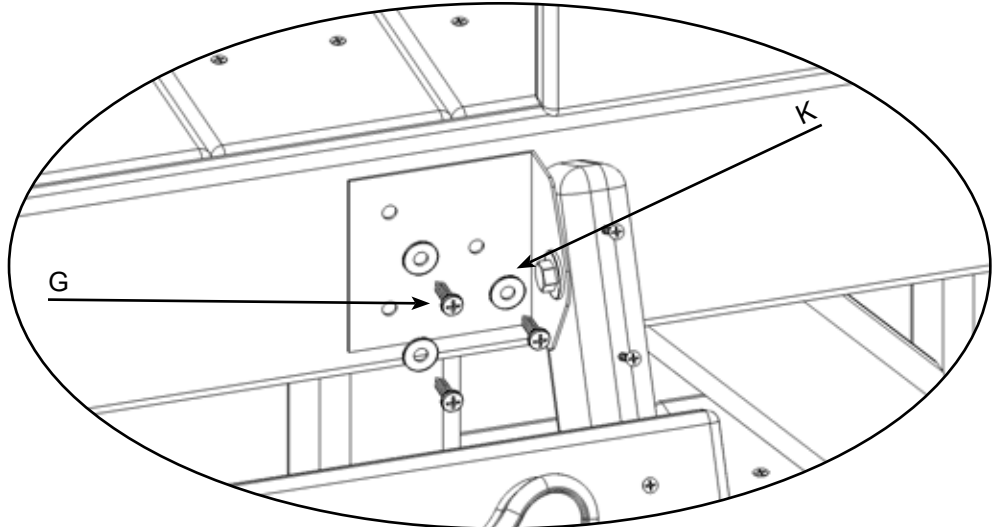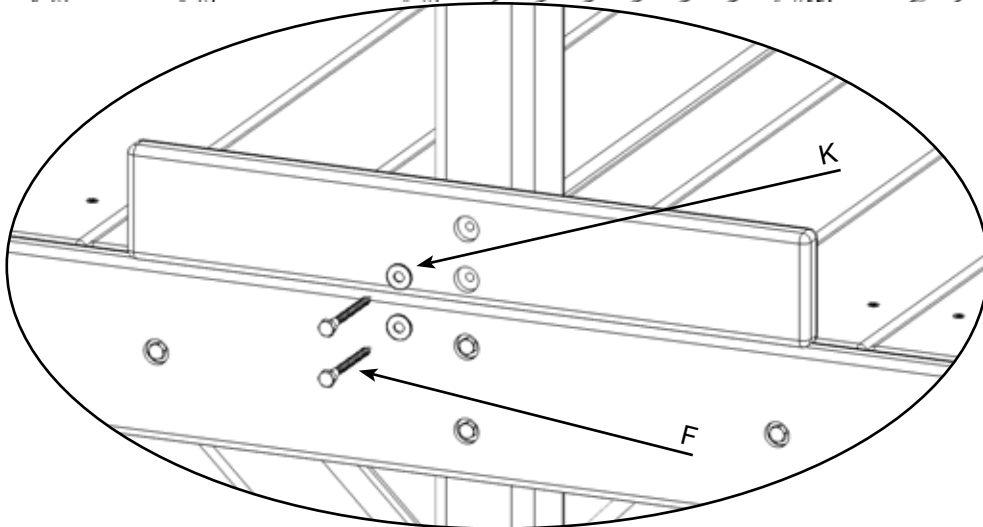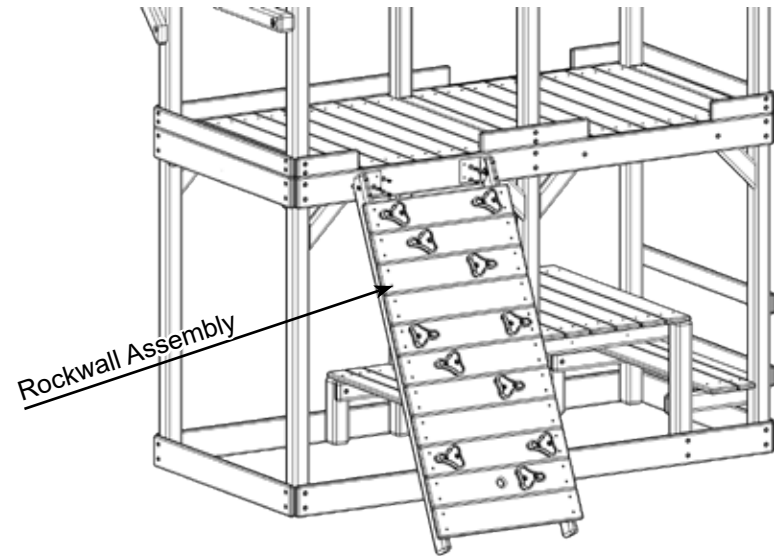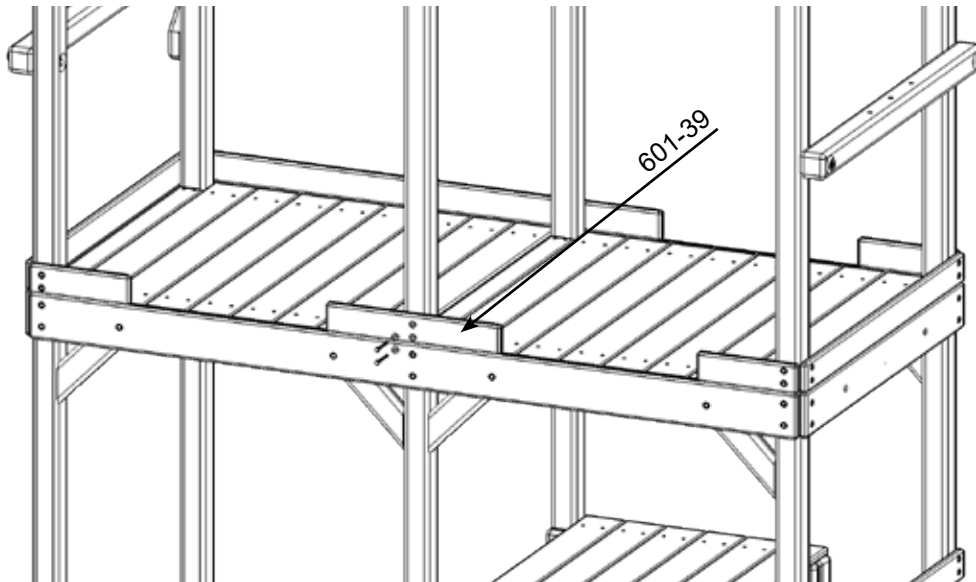

Main Assembly



PARTS NEEDED

Ladder Assembly- (1)
Slide- (1)



HARDWARE NEEDED

K- 1/4" USS Flatwasher- (9)
G- #14 x 1" Pan Phillips T/S- (6)
H- 1/4" x 1 1/4" Pan Phillips M/S- (3)
I- 1/4" T-Nut- (3)

MAKE SURE LADDER SUPPORT IS ON BOTTOM OF LADDER

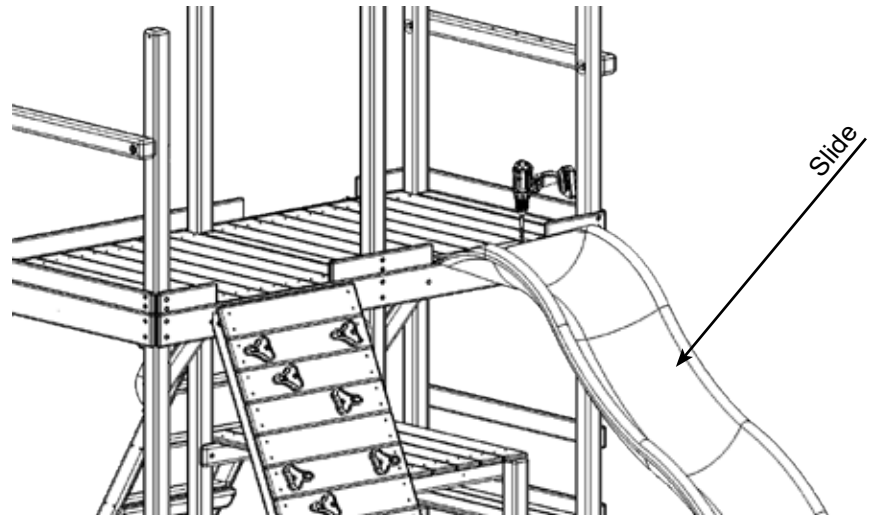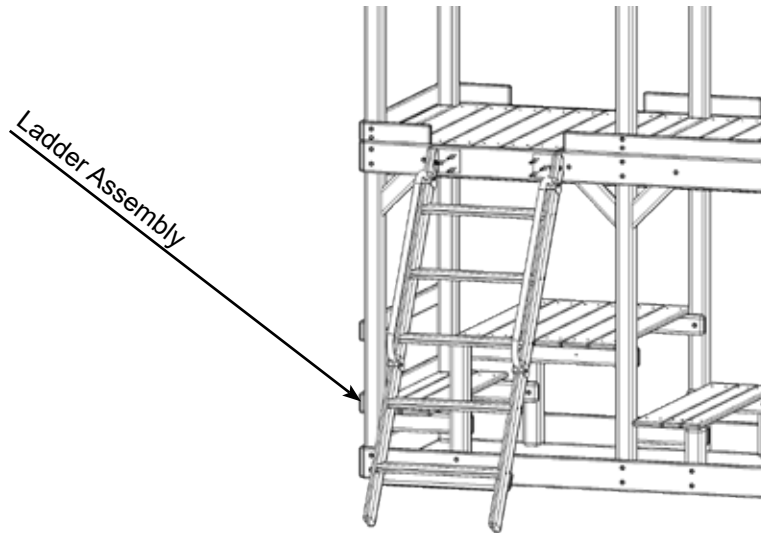

USING A 5/16" DRILL BIT DRILL HOLES FOR SLIDE

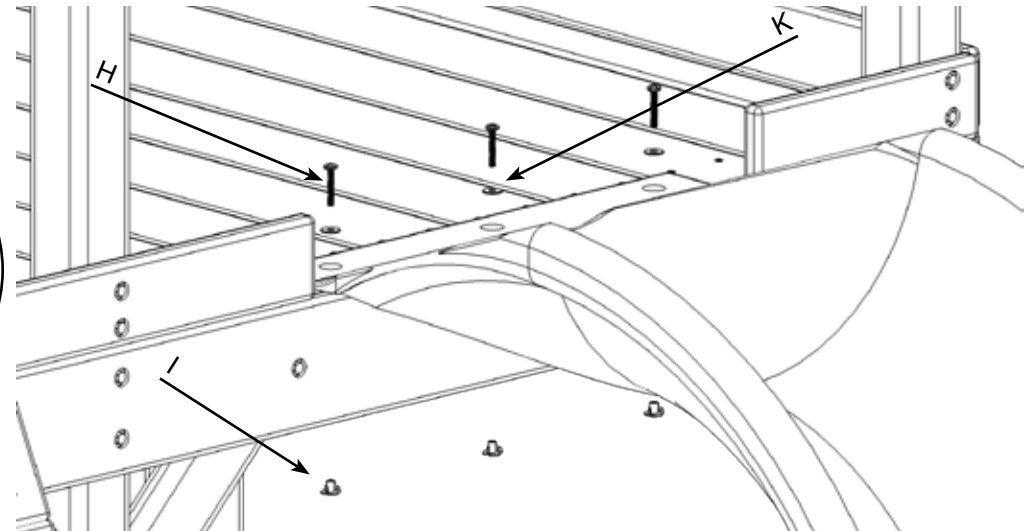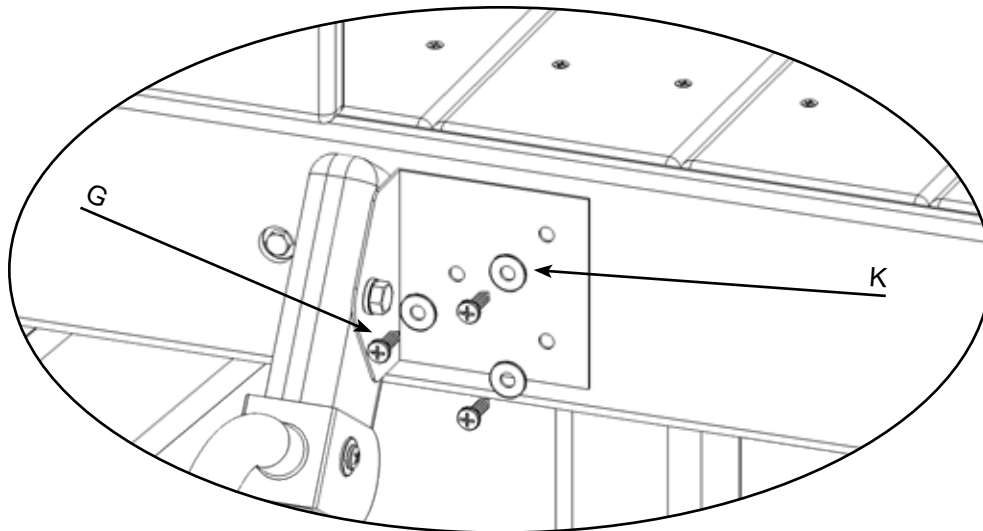




Main Assembly

PARTS NEEDED

601-46- 92 5/8" Rope Hole Facia- (1)
601-F- 14' Yellow Rope- (1)

HARDWARE NEEDED

K- 1/4" USS Flatwasher- (6)
F- 1/4" x 3" Hex Lag Screw- (6)

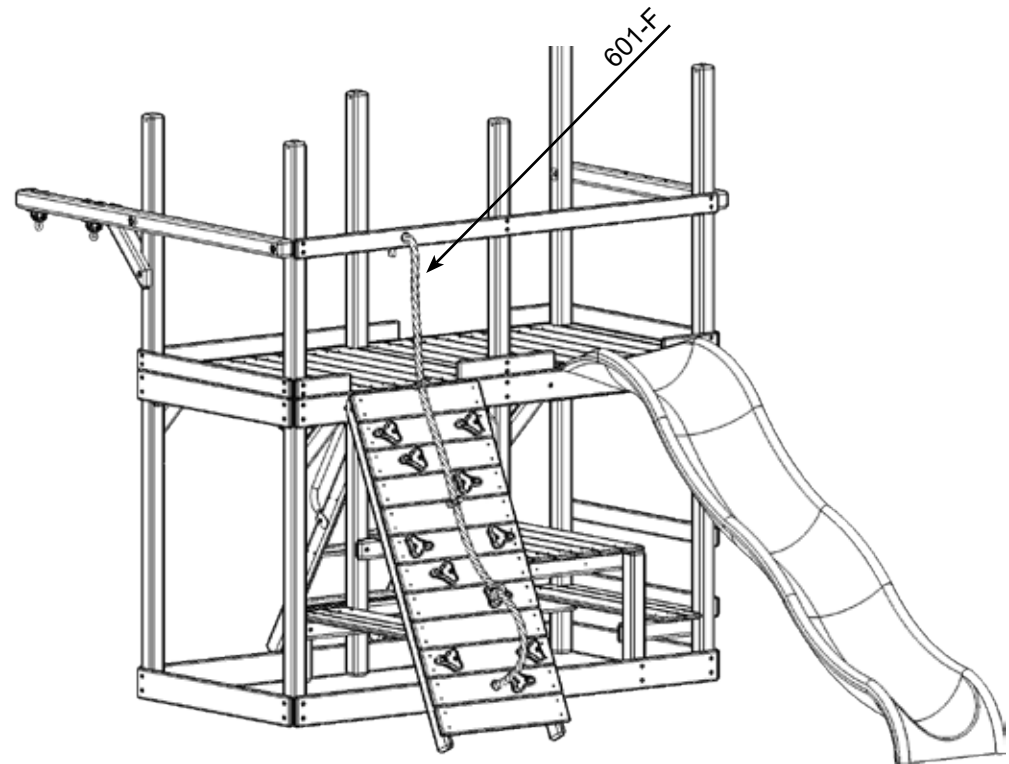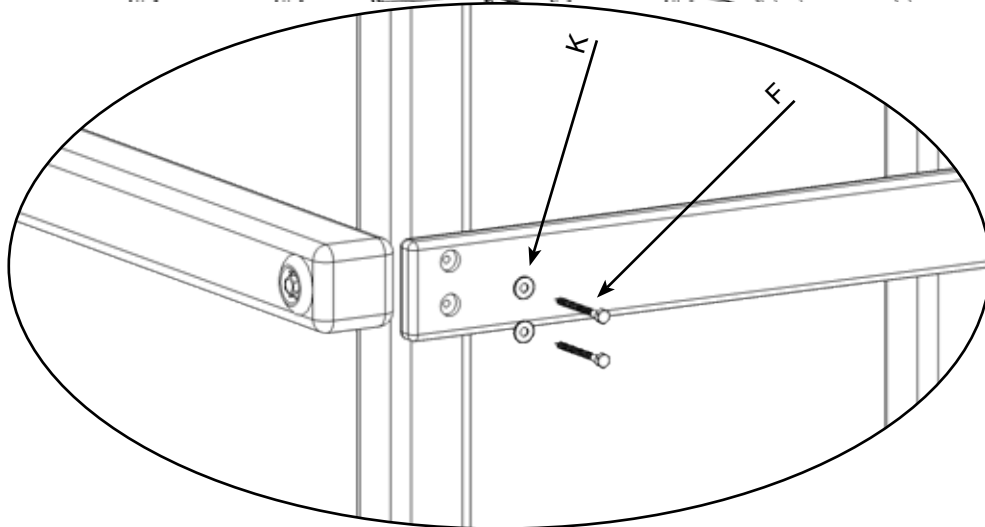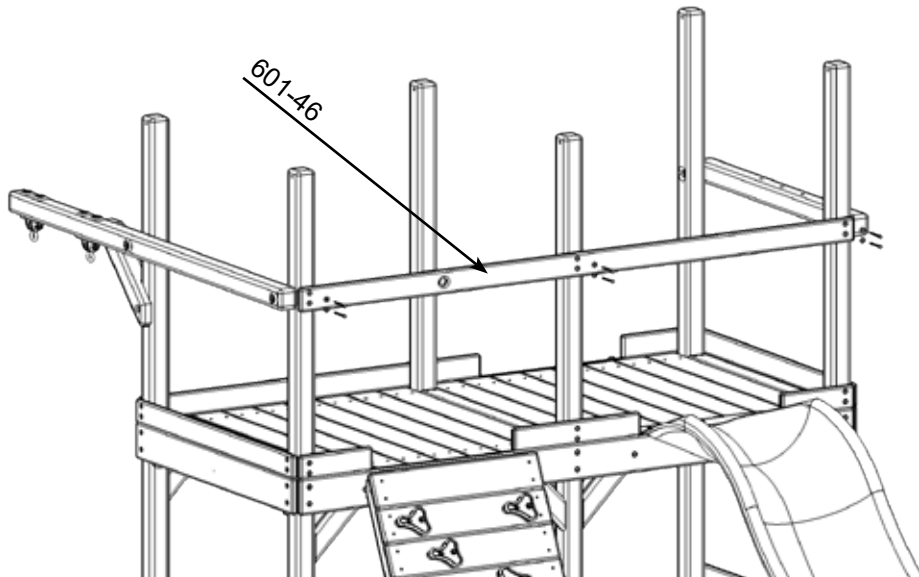

SLIDE 601-F THROUGH 601-17 AND TIE A KNOT HOLDING IT IN PLACE. WORK YOUR WAY DOWN TYING A KNOT EVERY 2 TO 3 FEET UNTIL YOU STRING THE ROPE THROUGH 601-28 AND TIE A KNOT SECURING THE ROPE TO THE ROCKWALL.

Main Assembly






PARTS NEEDED

601-47- 92 5/8" Upper 6-Hole Facia- (1)
 601-75- 35" Wood Roof Support- (4)

K- 1/4" USS Flatwasher- (6)
 A-4- 3/8" x 4 1/2" Hex Bolt- (4)
 J- T-Nut- (4)
 E- 2 1/2" Coated Deck Screw- (4)

HARDWARE NEEDED

F- 1/4" x 3" Hex Lag Screw- (6)
 A-12- 3/8" Bolt Cup- (4)
 A-1- 3/8" Acorn Nut Plated- (4)

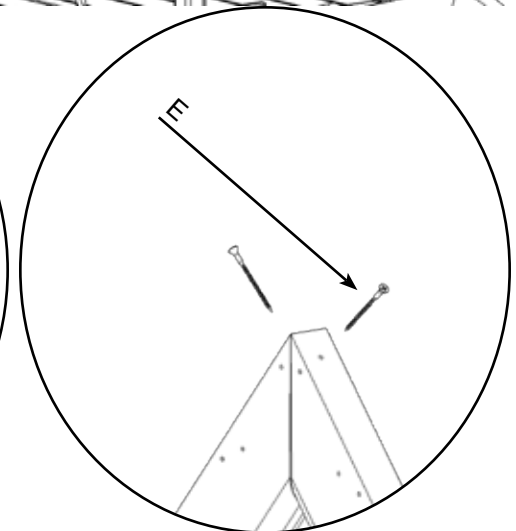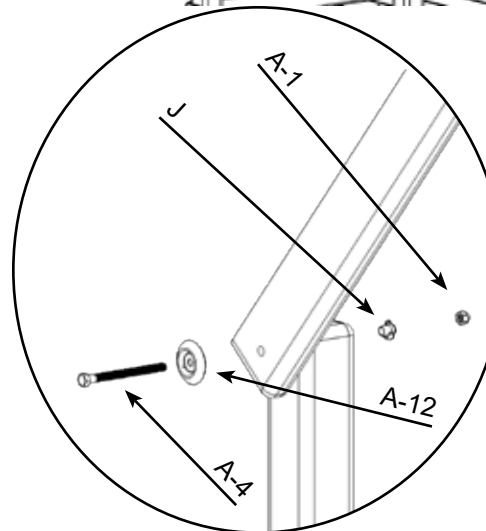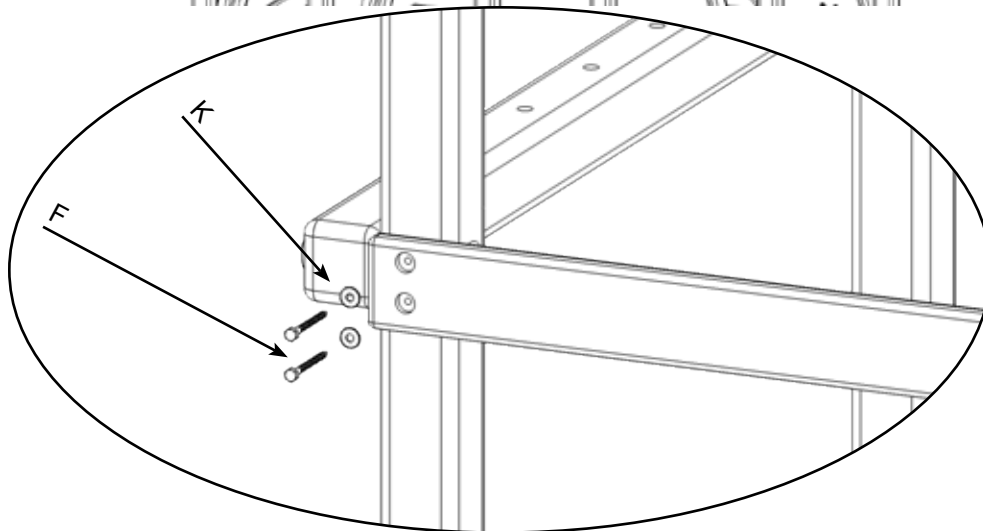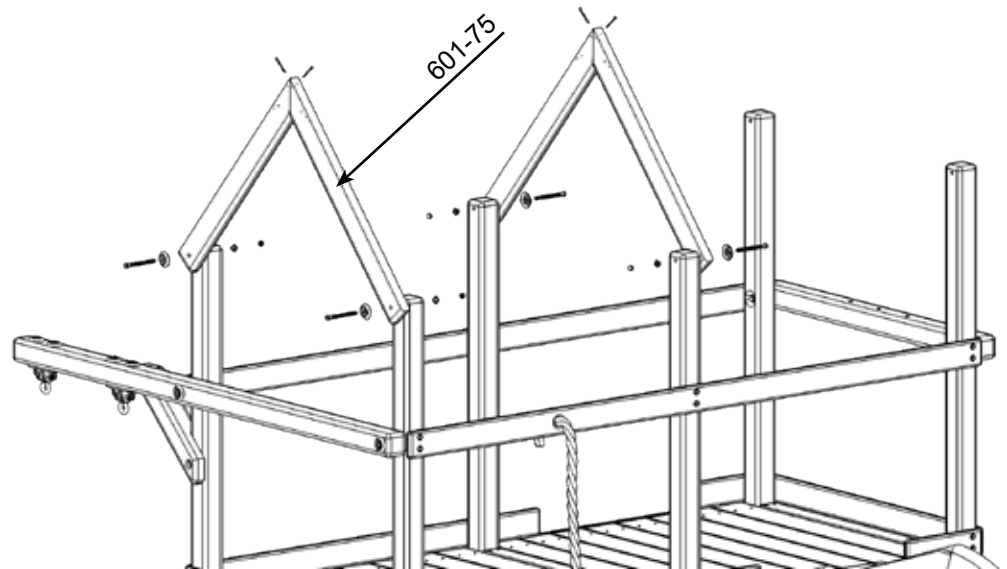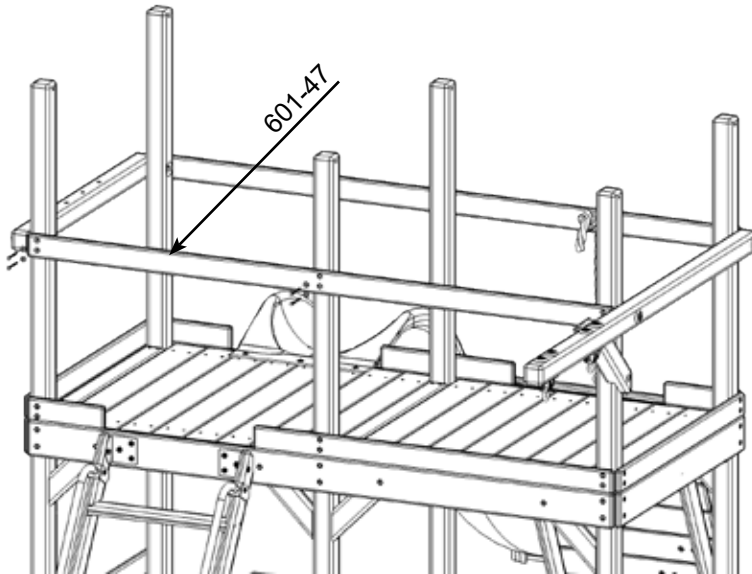





Main Assembly

PARTS NEEDED

601-51- 8 3/8" Wood Roof Peak-	(1)
Fan Assembly-	(1)

HARDWARE NEEDED

D- 2" Coated Deck Screw-	(6)
C- 1 5/8" Coated Deck Screw-	(10)

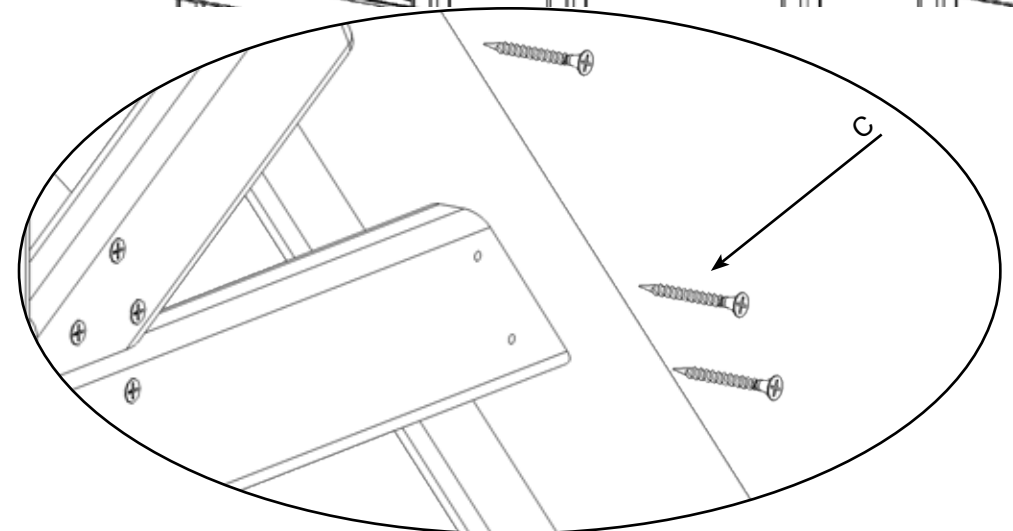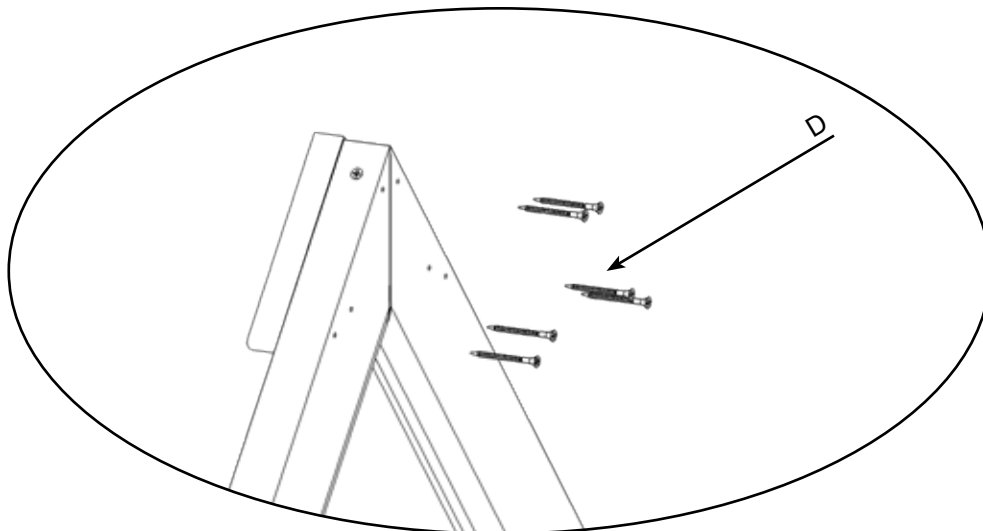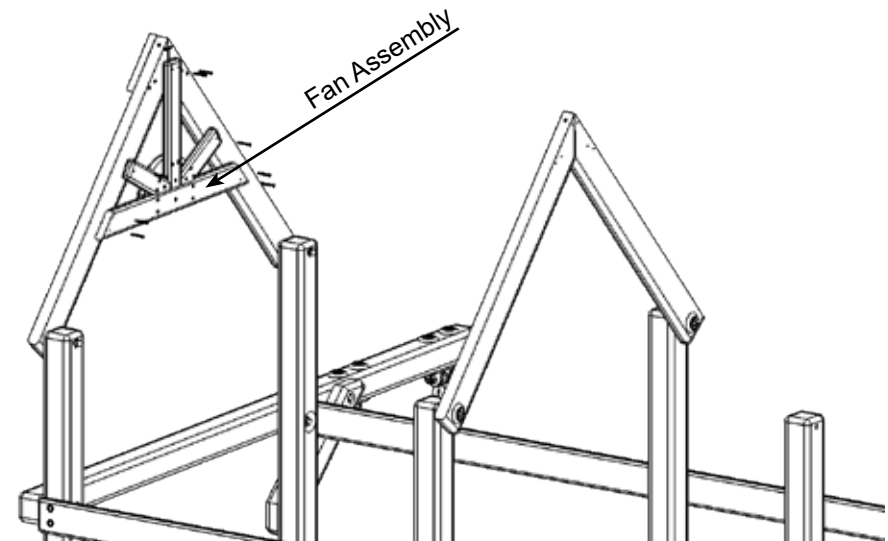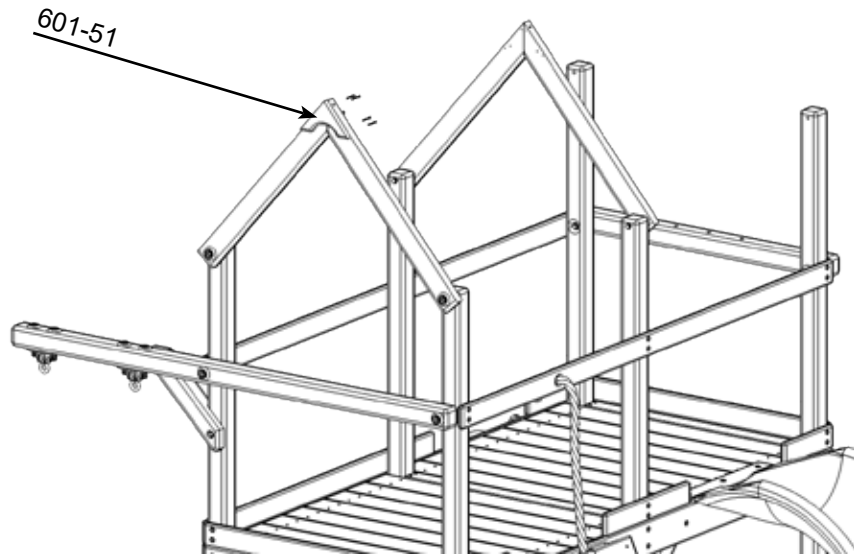





Main Assembly

PARTS NEEDED

601-94- 52 3/16" (L) Wood Roof Board- Trapeze Side- (4)
601-95- 52 3/16" (R) Wood Roof Board- Trapeze Side- (4)

HARDWARE NEEDED

C- 1 5/8" Coated Deck Screw- (32)

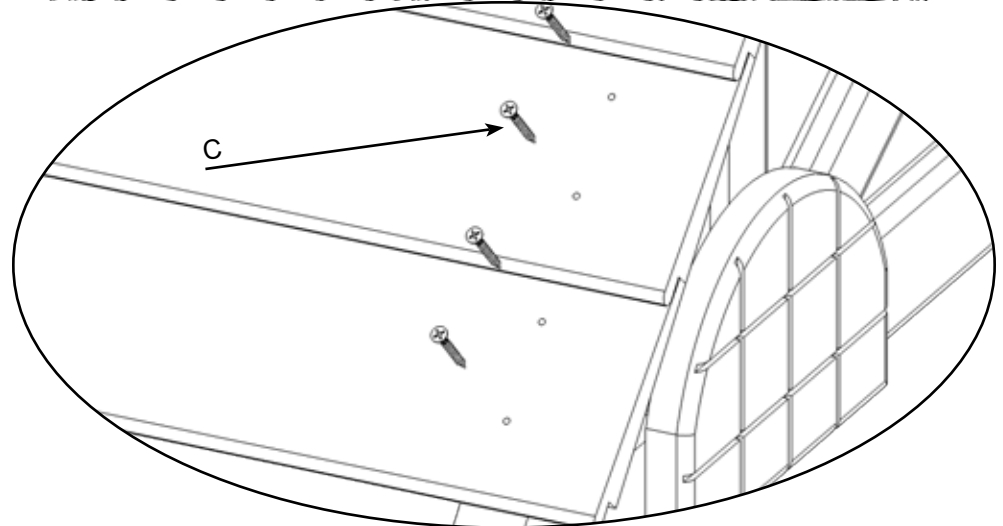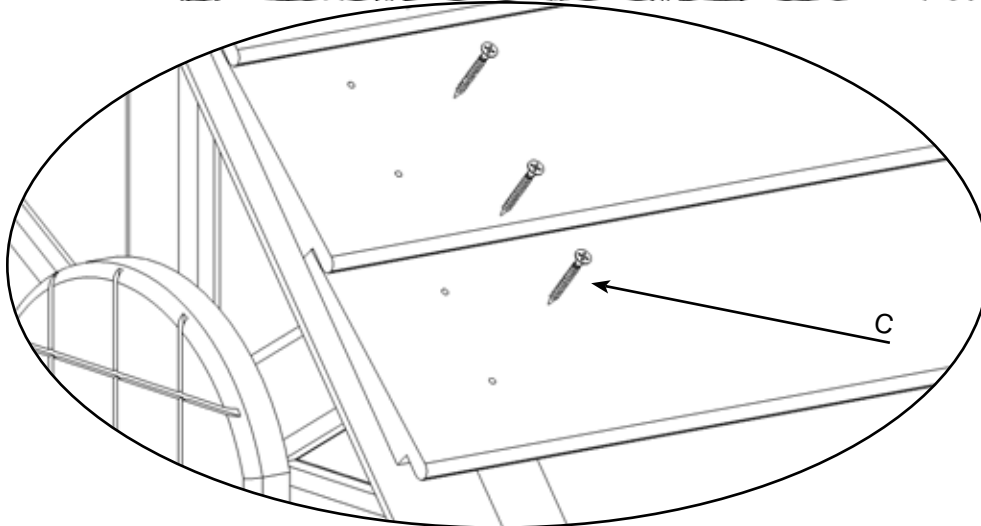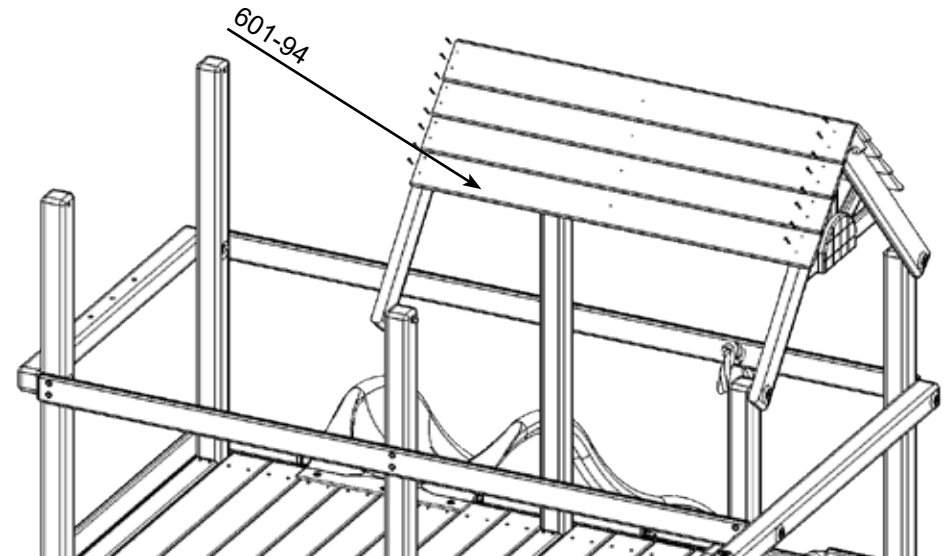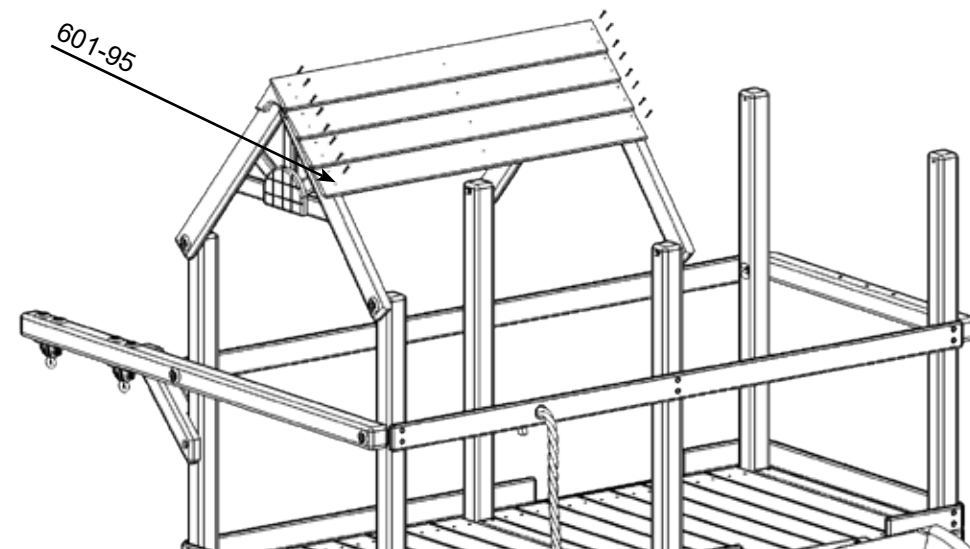





Main Assembly

PARTS NEEDED

601-41- 33 3/4" Wood Roof Center Support- (2)
601-8- 52 3/16" Wood Roof Topper- (1)
601-49- 52 3/16" Wood Roof Topper- (1)

HARDWARE NEEDED

B- 1 1/2" Coated Deck Screw- (8)
E- 2 1/2" Coated Deck Screw- (8)

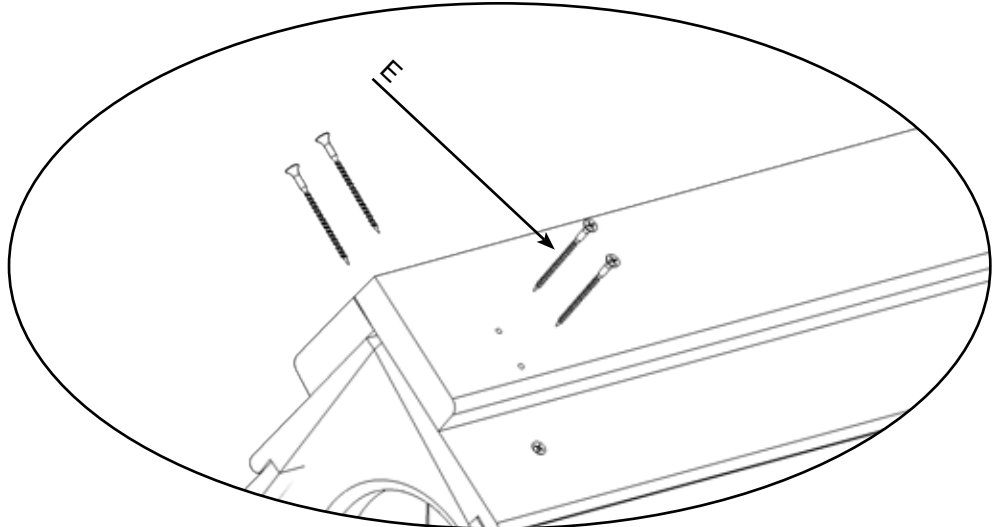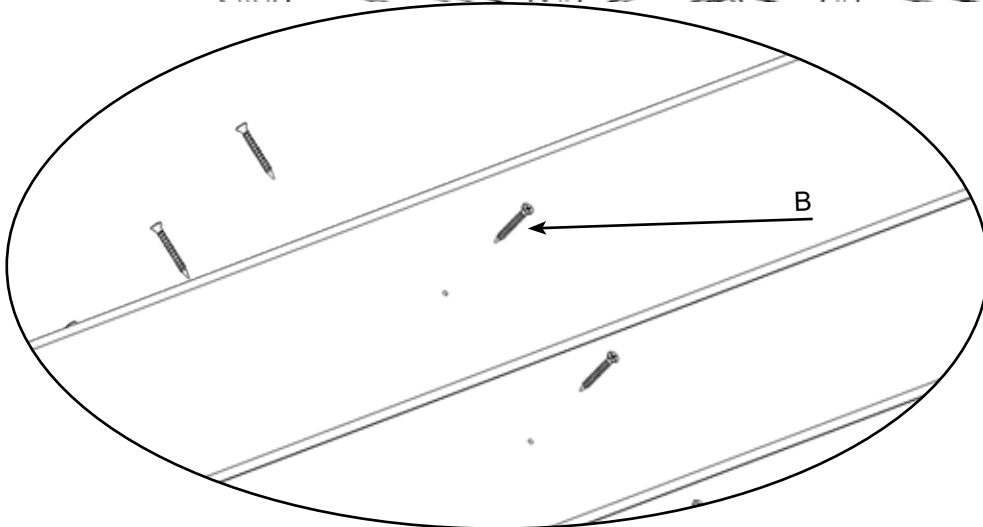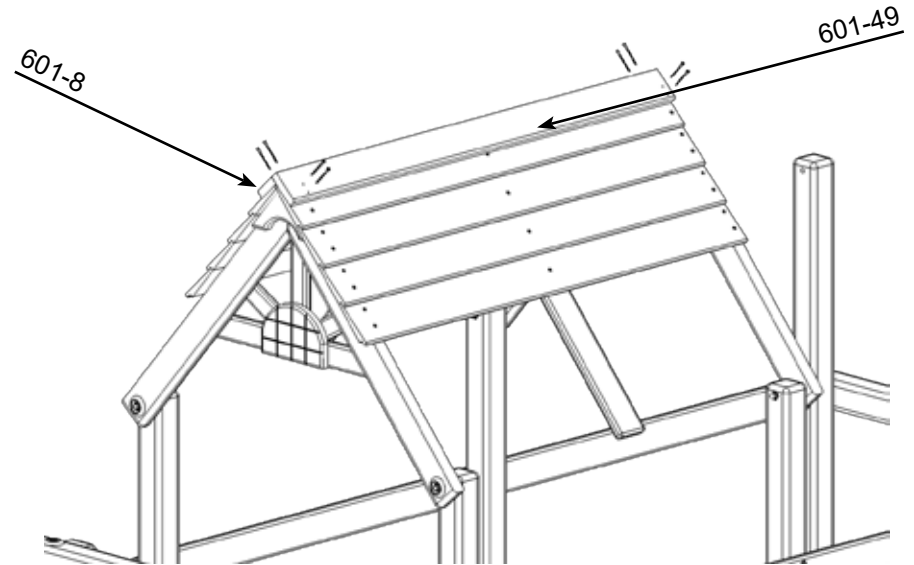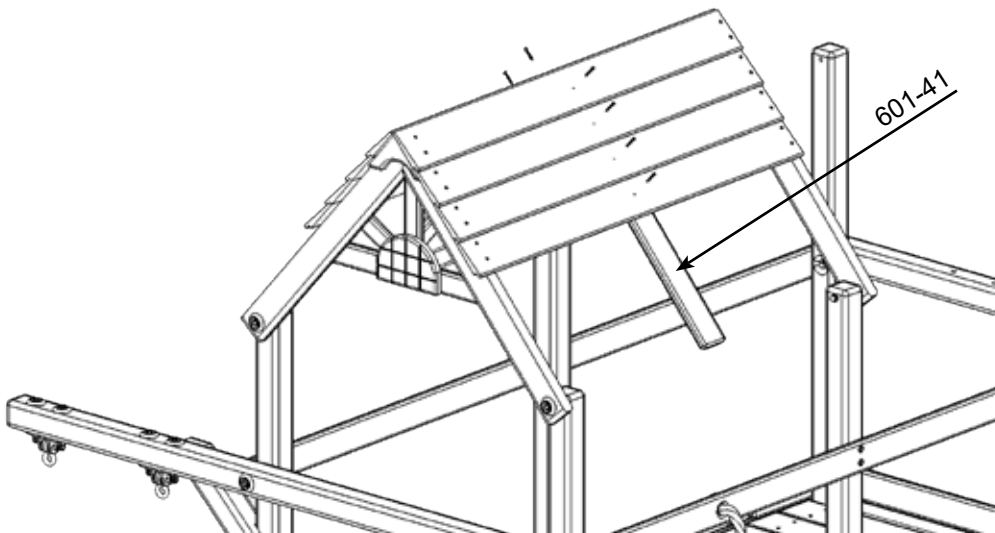







Main Assembly

PARTS NEEDED

601-94- 52 3/16" (L) Wood Roof Board- Trapeze Side- (4)
601-95- 52 3/16" (R) Wood Roof Board- Trpaeze Side- (4)

HARDWARE NEEDED

C- 1 5/8" Coated Deck Screw- (32)
B- 1 1/2" Coated Deck Screw- (8)

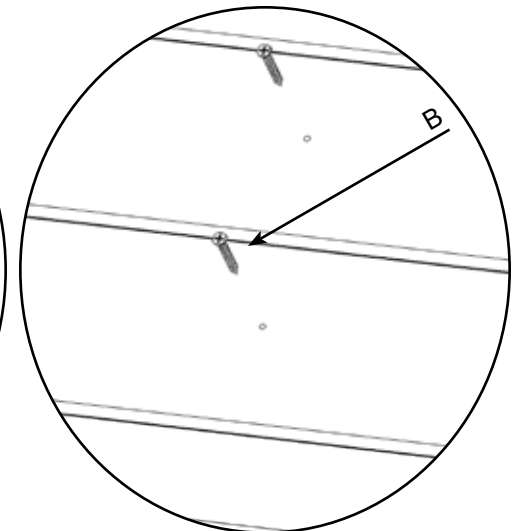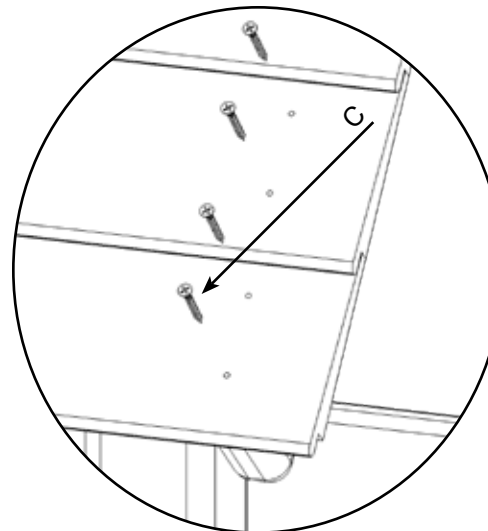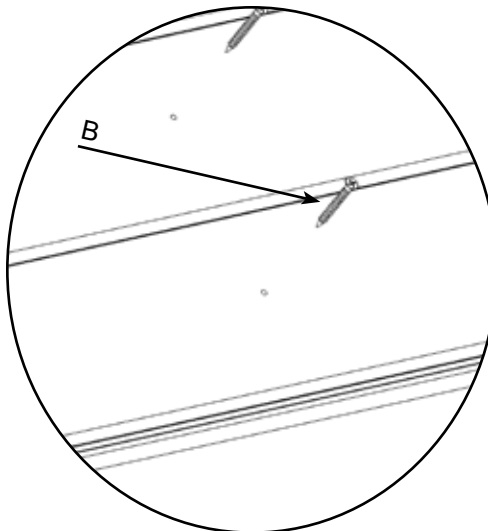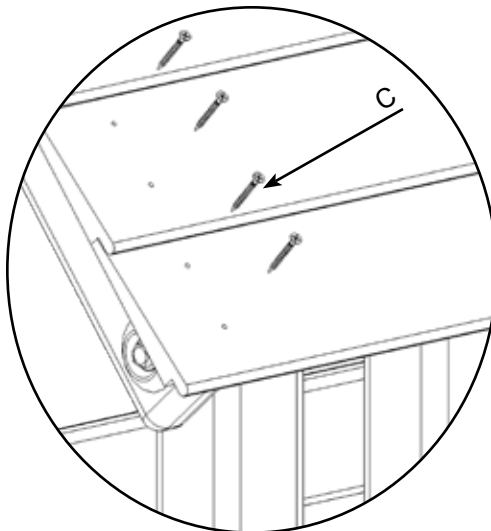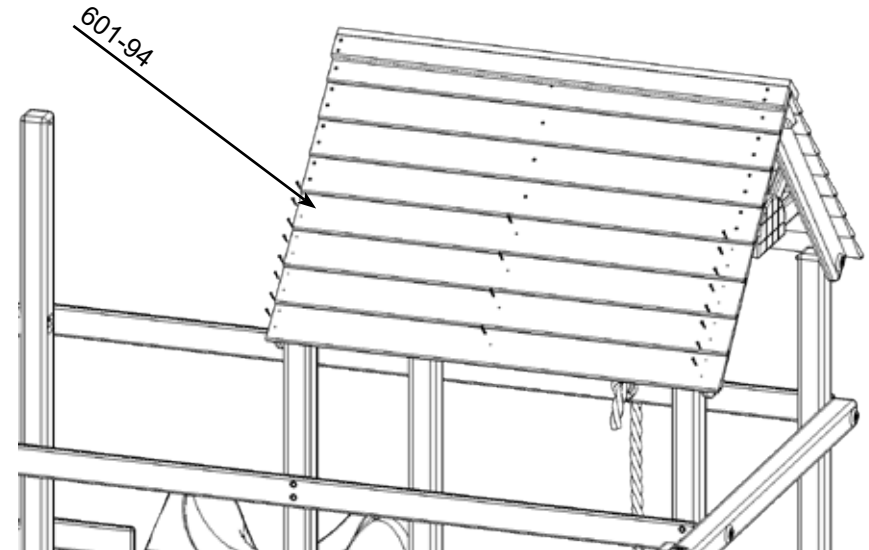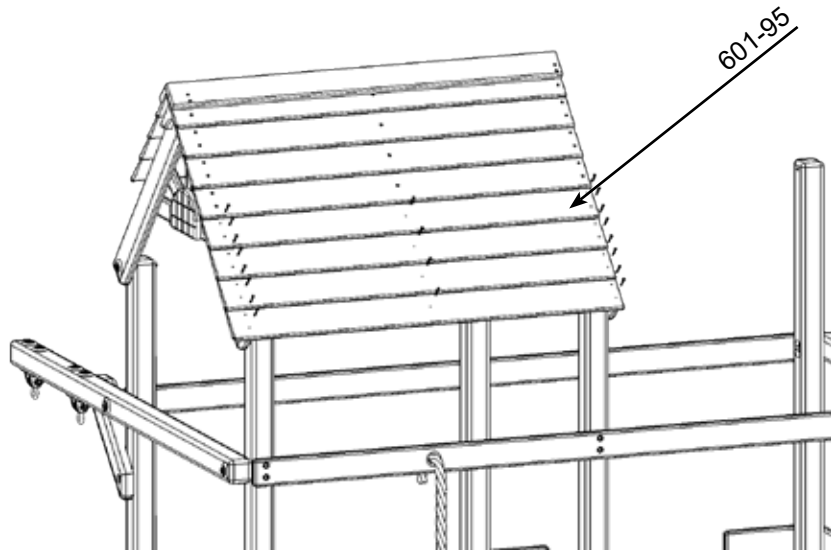

Main Assembly






PARTS NEEDED

601-43- 35" Wood Roof Support- (2)
 601-51- 8 3/8" Wood Roof Peak- (1)

A-4- 3/8" x 4 1/2" Hex Bolt- (2)
 J- 3/8" T-Nut- (2)
 E- 2 1/2" Coated Deck Screw- (2)

HARDWARE NEEDED

A-12- 3/8" Bolt Cup- (2)
 A-1- 3/8" Acorn Nut Plated- (2)
 D- 2" Coated Deck Screw- (6)

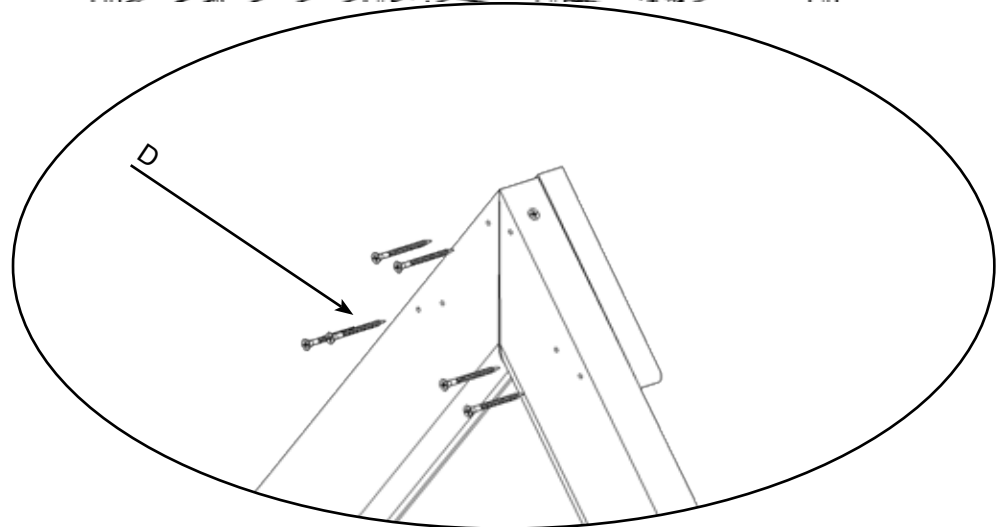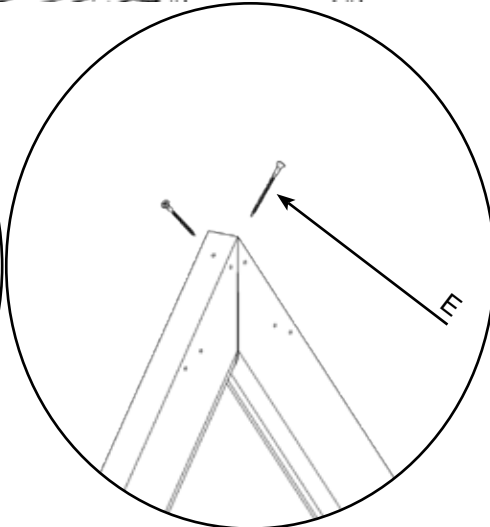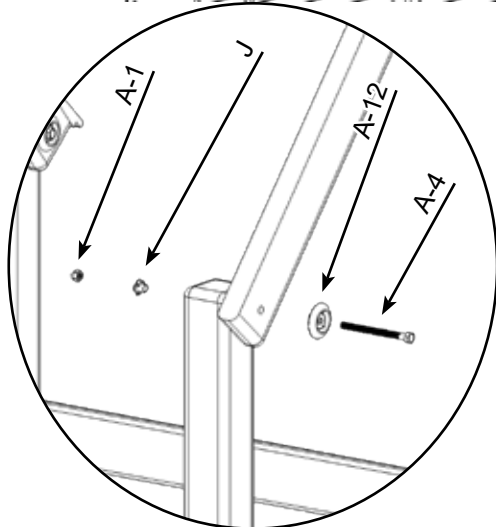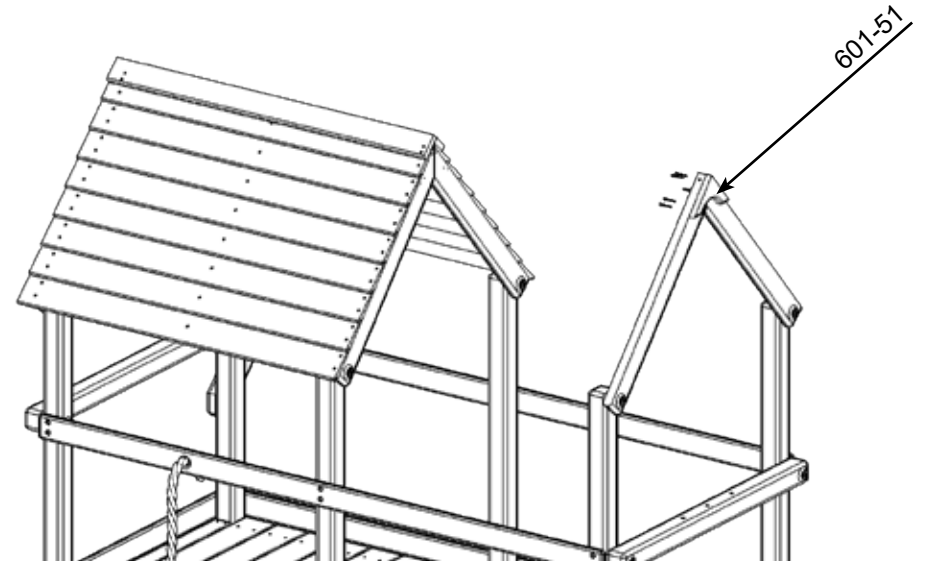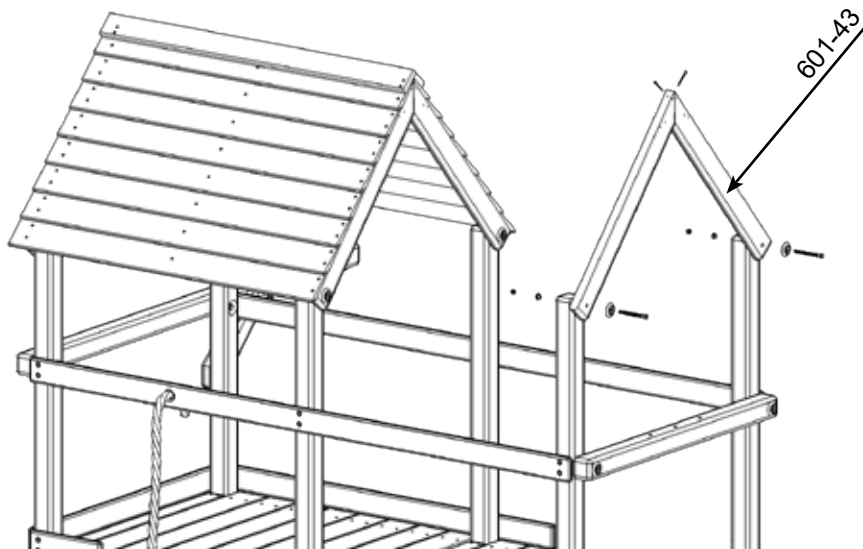

Main Assembly





PARTS NEEDED

Fan Assembly- (1)
601-79- 35" Wood Roof Extension- (2)

HARDWARE NEEDED

C- 1 5/8" Coated Deck Screw- (10)
E- 2 1/2" Coated Deck Screw- (2)
K- 1/4" USS Flatwasher- (8)
A-7- 1/4" x 2" Hex Lag Screw- (8)

MAKE THE 601-79'S EVEN WITH THE WOOD ROOF SUPPORTS

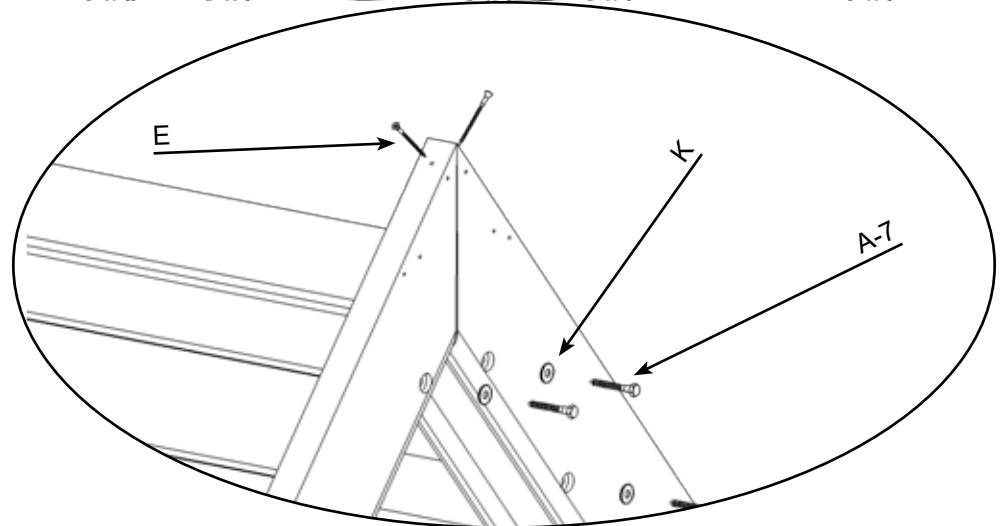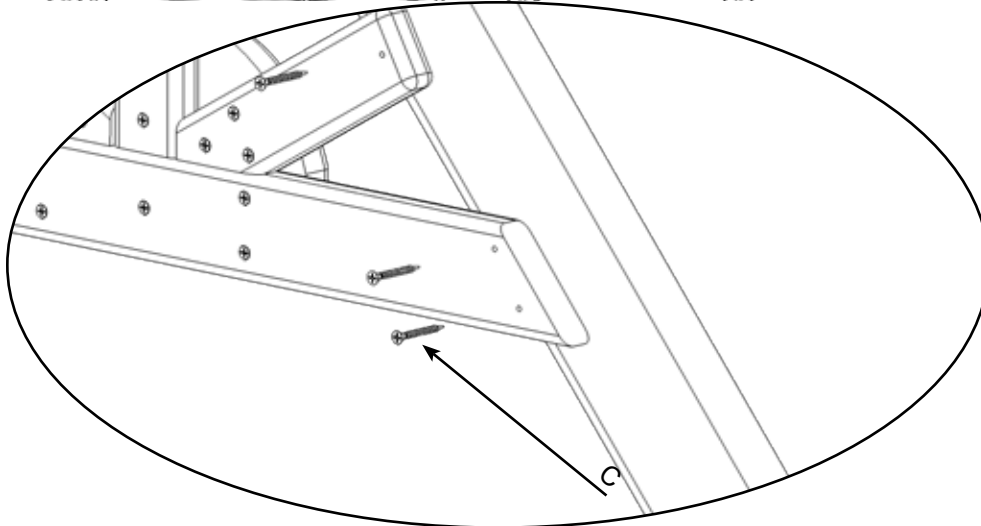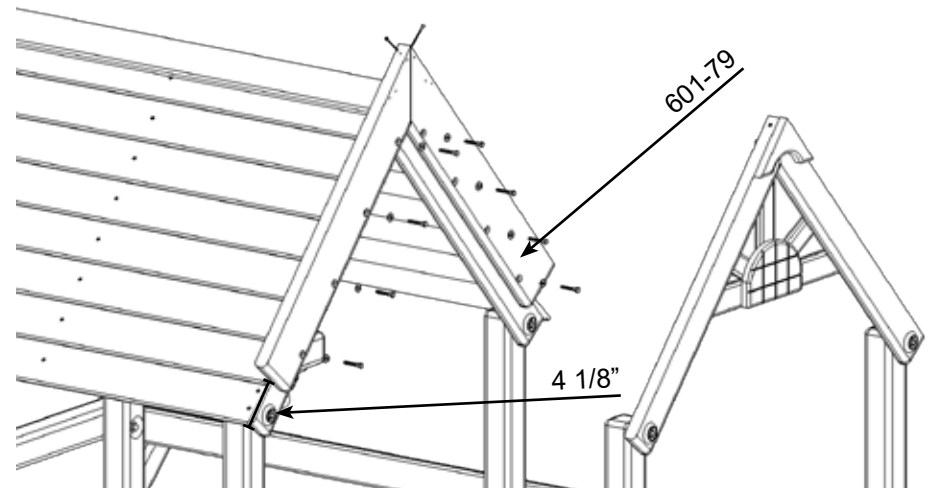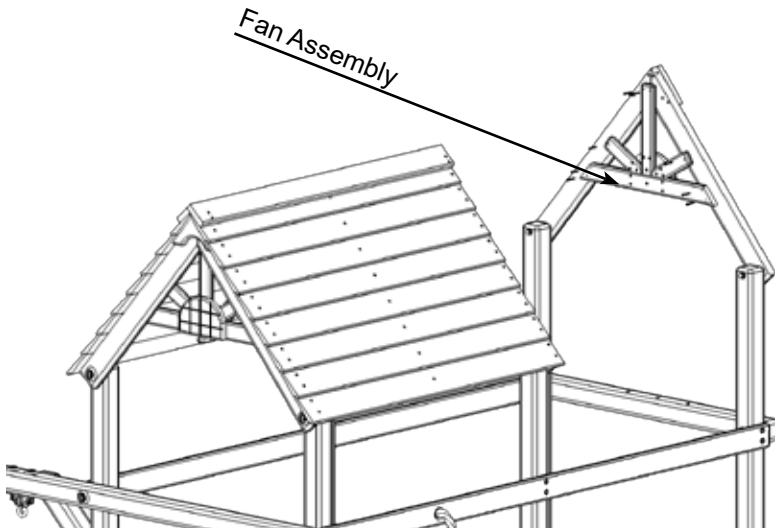


Main Assembly

PARTS NEEDED




601-51- 8 3/8" Wood Roof Peak- (1)
601-93- 48 1/16" Wood Roof Board- (8)

HARDWARE NEEDED

D- 2" Coated Deck Screw- (6)
C- 1 5/8" Coated Deck Screw- (32)

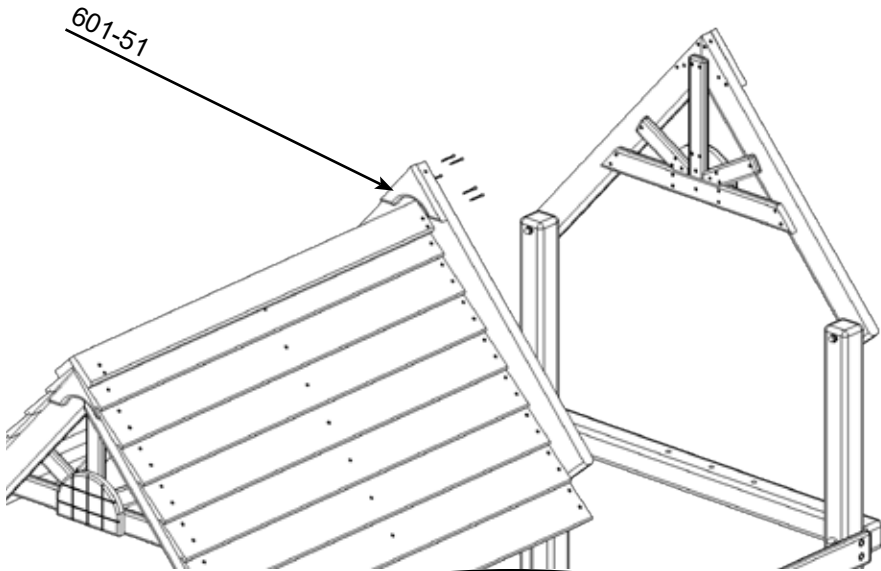

REPEAT FOR BOTH SIDES OF WOOD ROOF

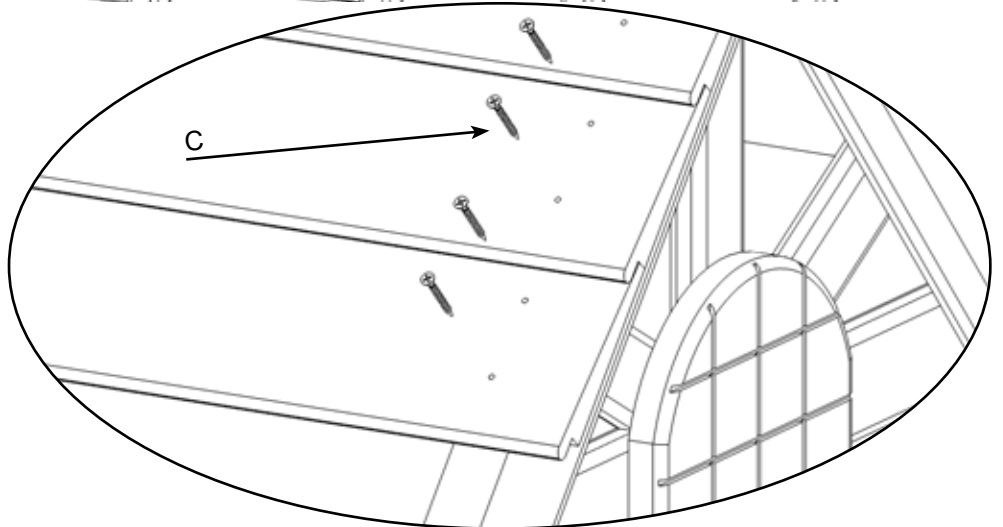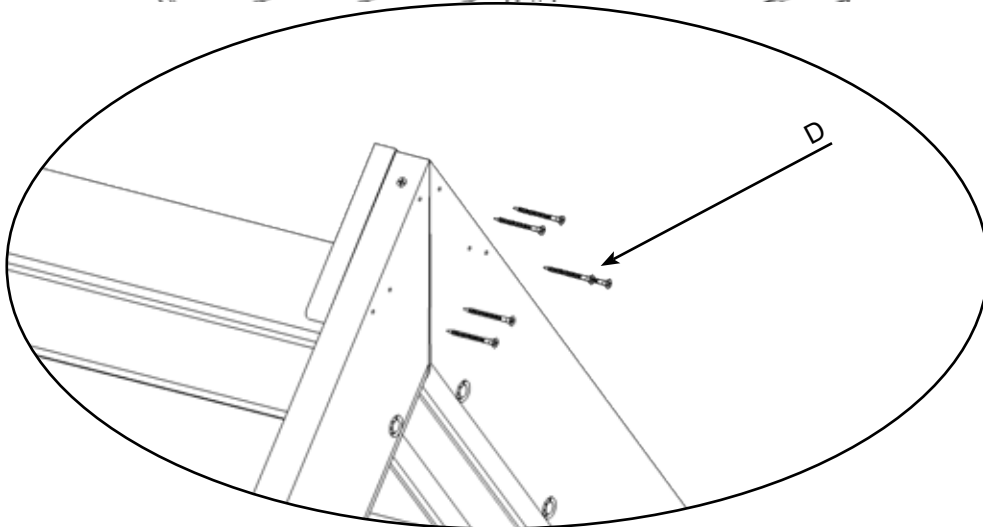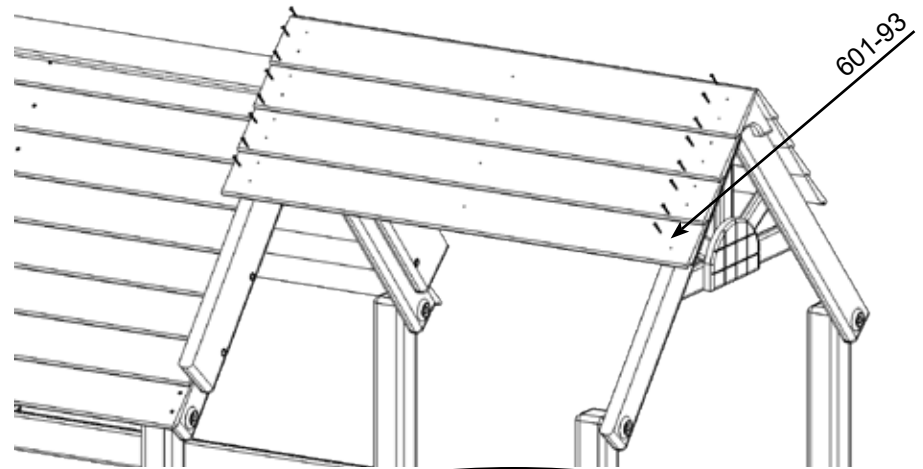





Main Assembly (Repeat for Both Sides)

PARTS NEEDED

601-41- 33 3/4" Wood Roof Center Support- (2)
601-7- 48 1/16" Wood Roof Topper- (1)
601-48- 48 1/16" Wood Roof Topper- (1)

HARDWARE NEEDED

B- 1 1/2" Coated Deck Screw- (8)
E- 2 1/2" Coated Deck Screw- (8)

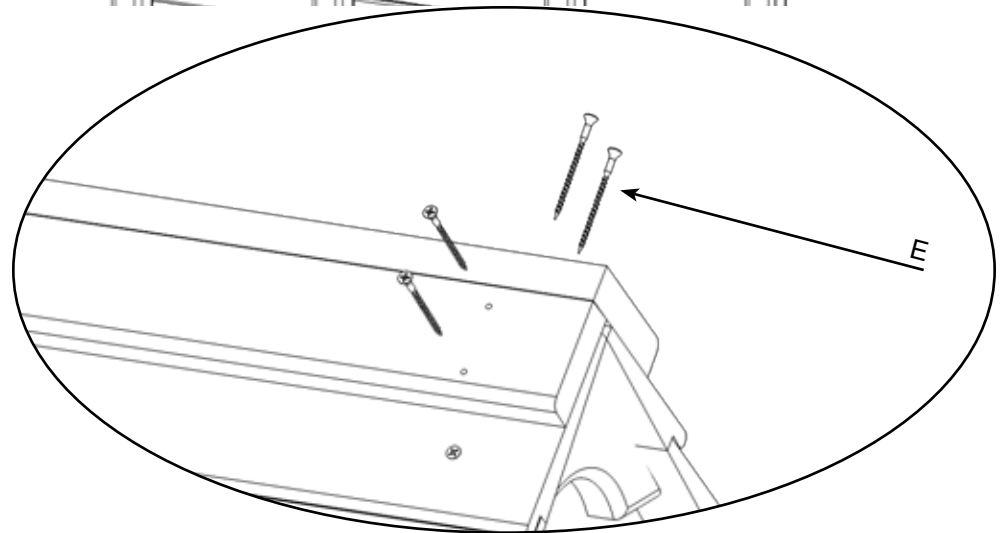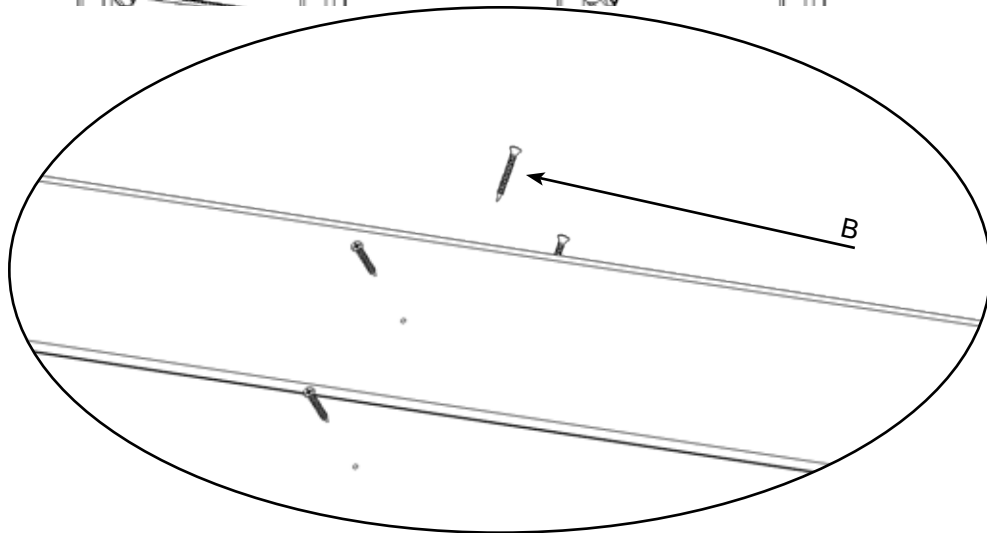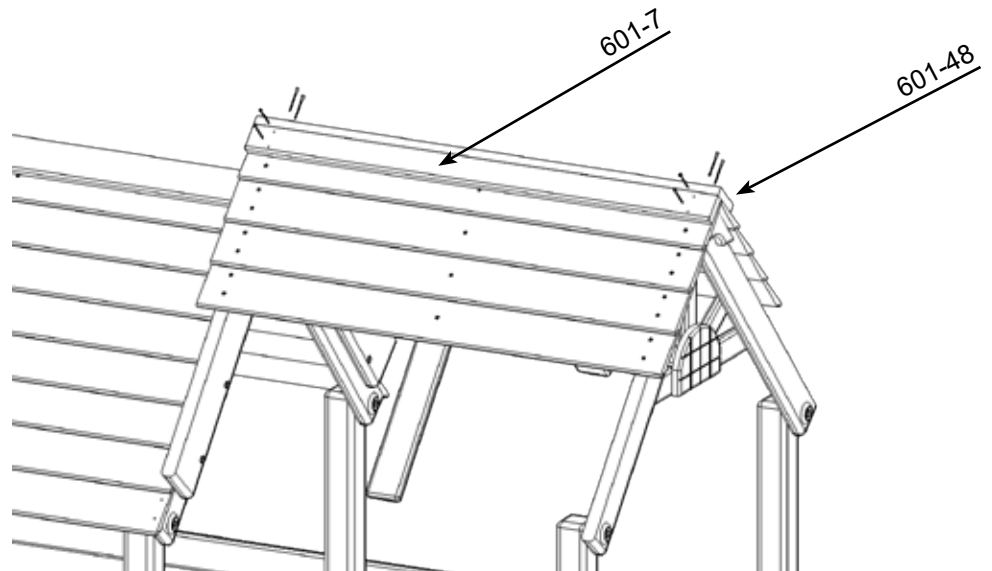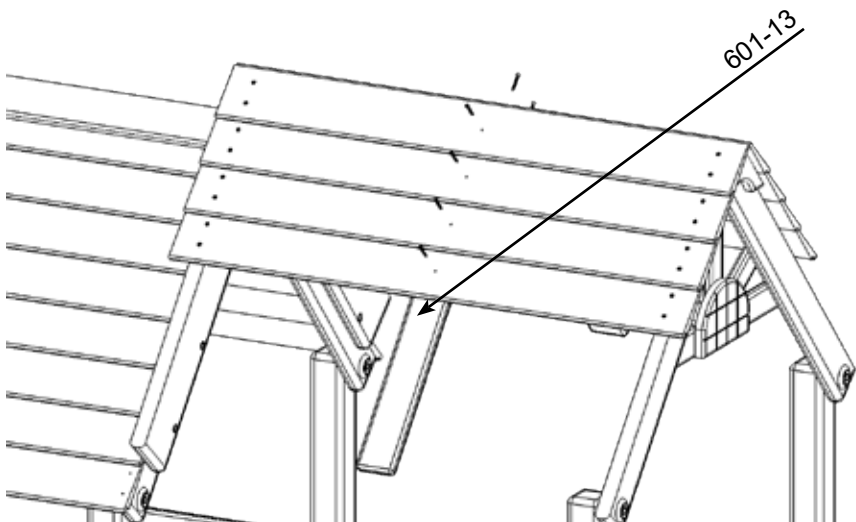

Main Assembly






PARTS NEEDED

601-93- 48 1/16" SB Side Wood Roof Board- (8)
Chimney- (1)

HARDWARE NEEDED

C- 1 5/8" Coated Deck Screw- (32)
B- 1 1/2" Coated Deck Screw- (8)
E- 2 1/2" Coated Deck Screw- (4)

REPEAT FOR BOTH SIDES OF WOOD ROOF

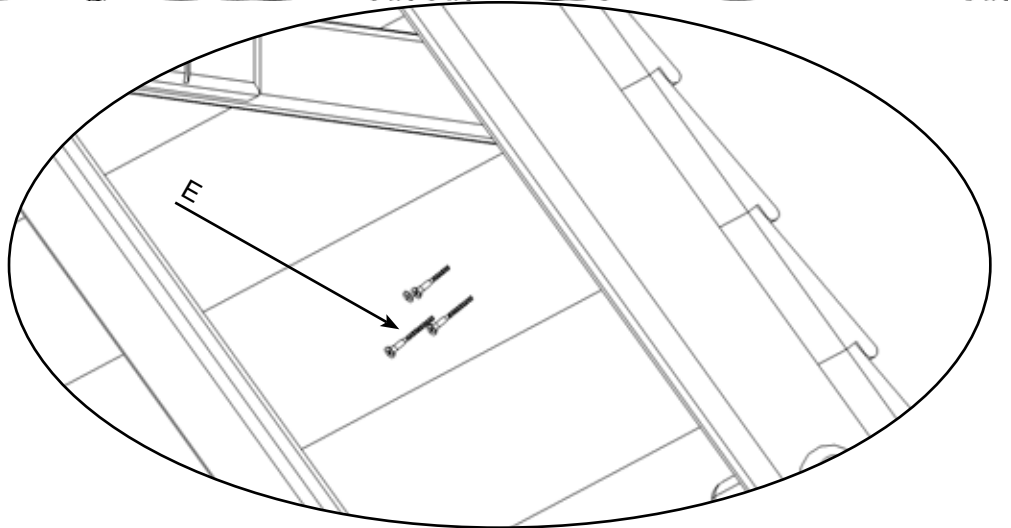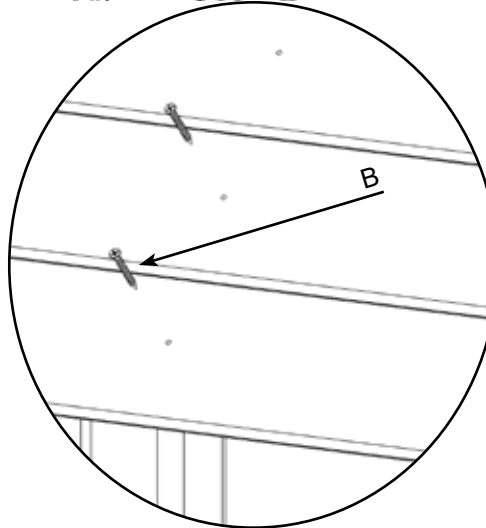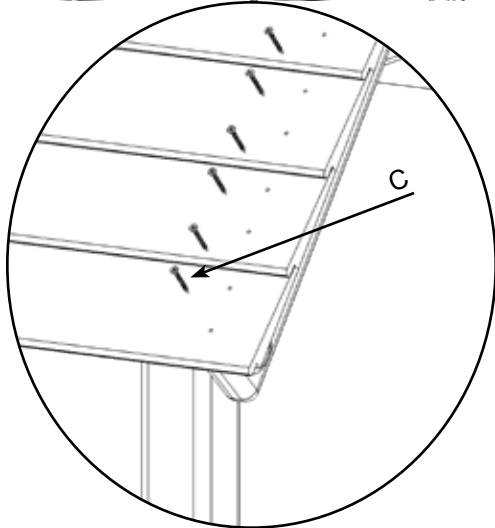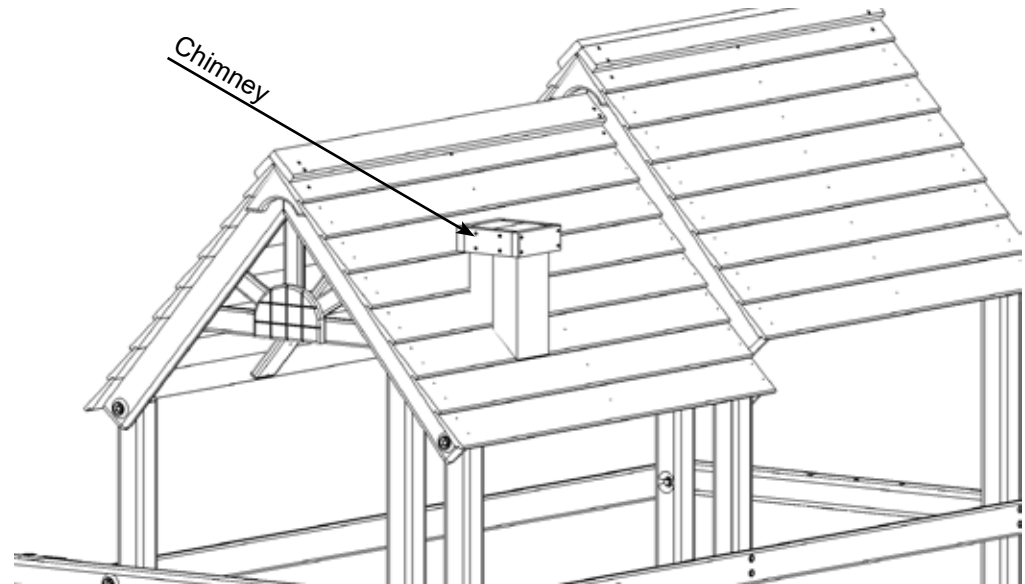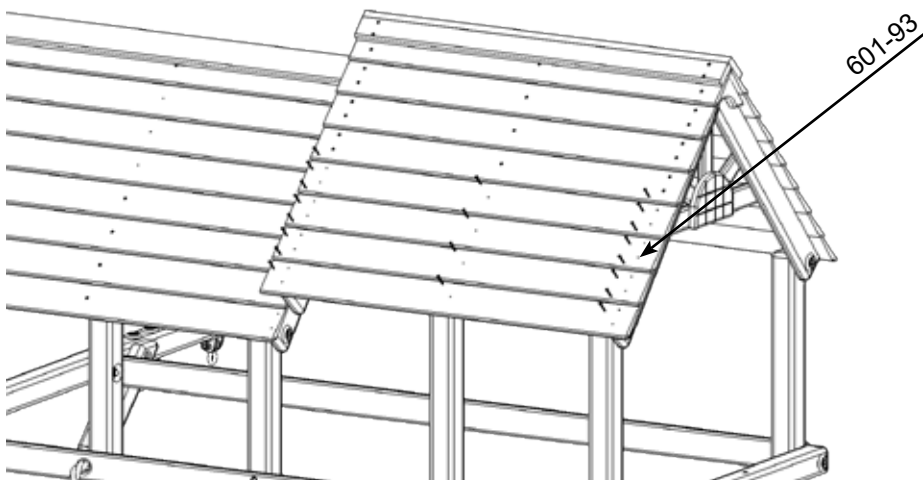





Main Assembly (Roof Removed for Visual Purposes)

PARTS NEEDED

601-C- Swingbeam Tri-Plate- (1)
A-Frame Assembly- (1)

HARDWARE NEEDED

SB-3- 1/2" x 3 1/2" Carriage Bolt- (2)	SB-19- 3/4" USS Flatwasher- (4)
SB-18- 1/2" USS Flatwasher- (4)	SB-16- 1/2" Split Lockwasher- (4)
SB-7- 1/2" Hex Nut- (4)	SB-2- 1/2" Acorn Nut Plated- (4)
SB-5- 1/2" x 9" Carriage Bolt- (1)	SB-4- 1/2" x 7" Carriage Bolt- (1)

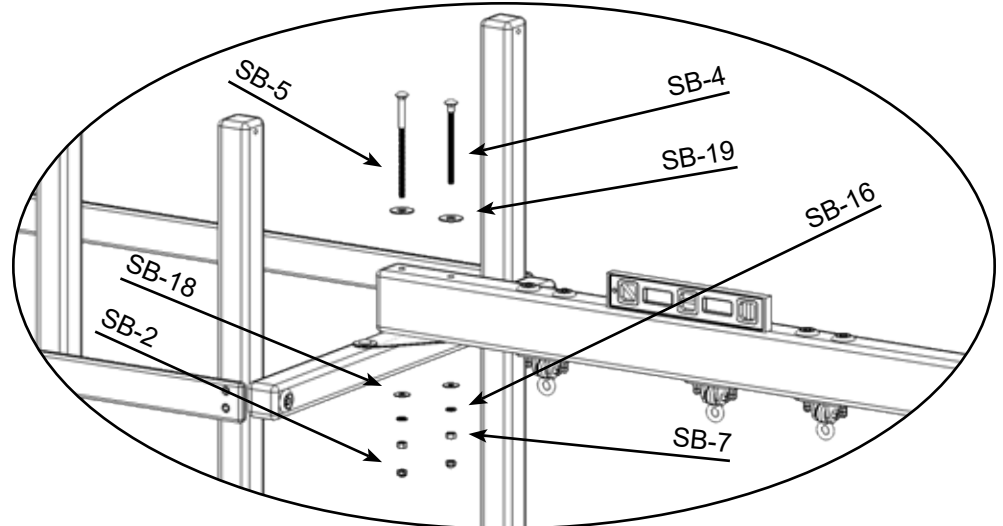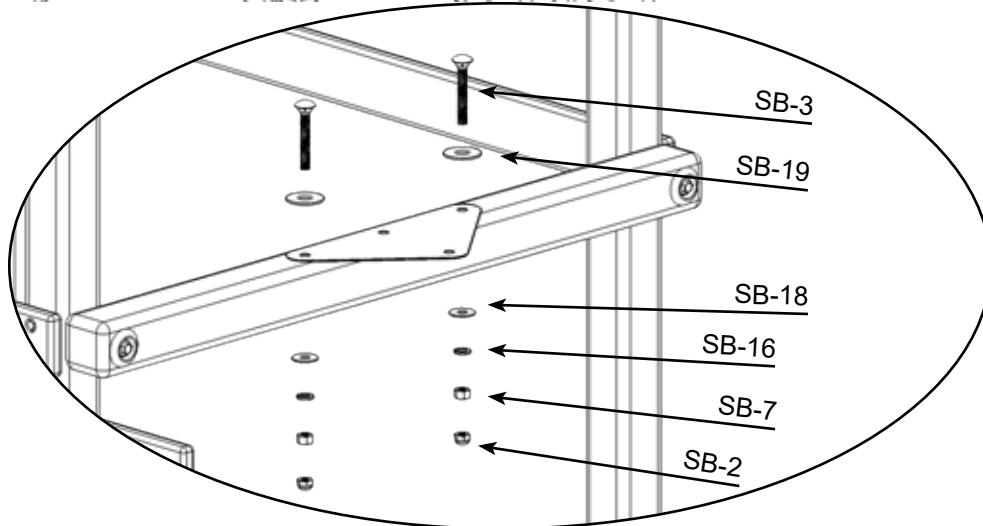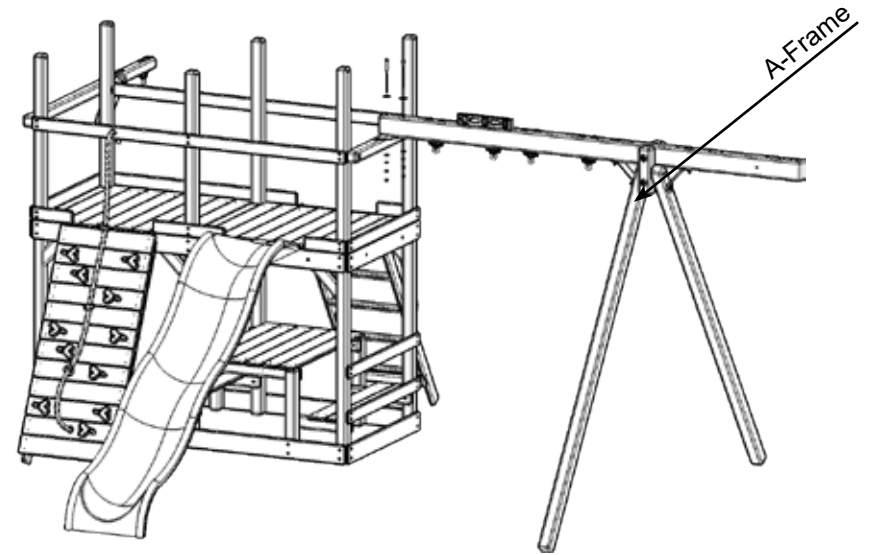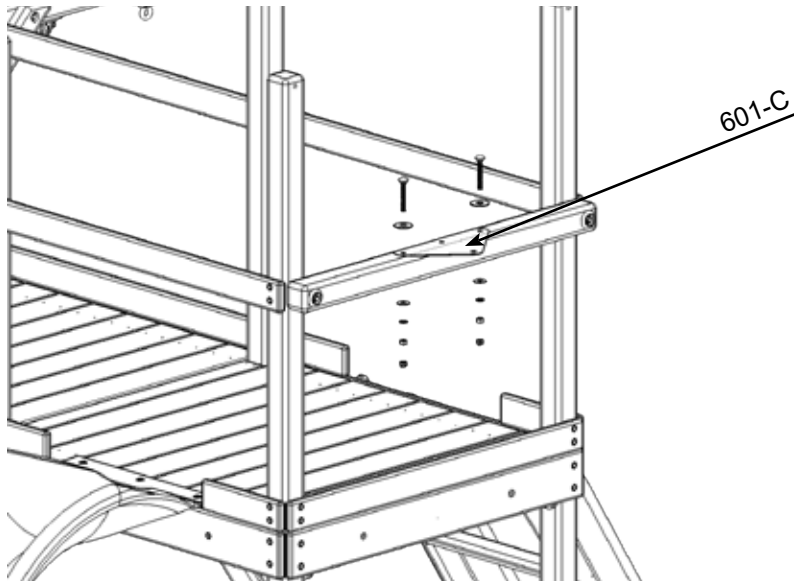

Main Assembly

PARTS NEEDED



601-99- 72" A-Frame Crossmember- (1)

SB-17- 3/8" USS Flatwasher-
SB-4- 1/2" x 7" Carriage Bolt-
SB-18- 1/2" USS Flatwasher-
SB-7- 1/2" Hex Nut-

HARDWARE NEEDED

(2)	SB-12- 3/8" x 5" Hex Lag Screw-	(2)
(2)	SB-19- 3/4" USS Flatwasher-	(2)
(2)	SB-16- 1/2" Split Lockwasher-	(2)
(2)	SB-2- 1/2" Acorn Nut Plated-	(2)

SECURE THE A-FRAME LEGS IN POSITION

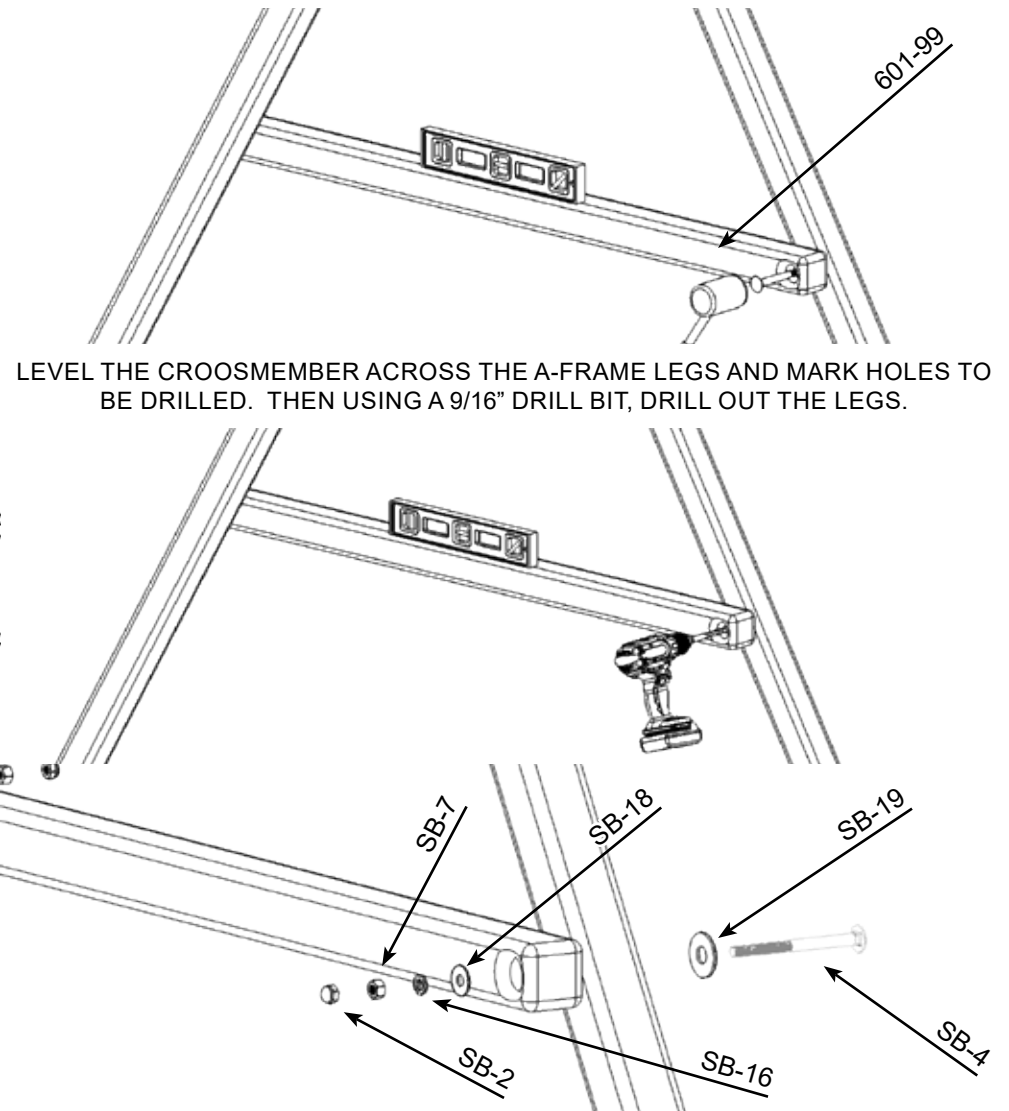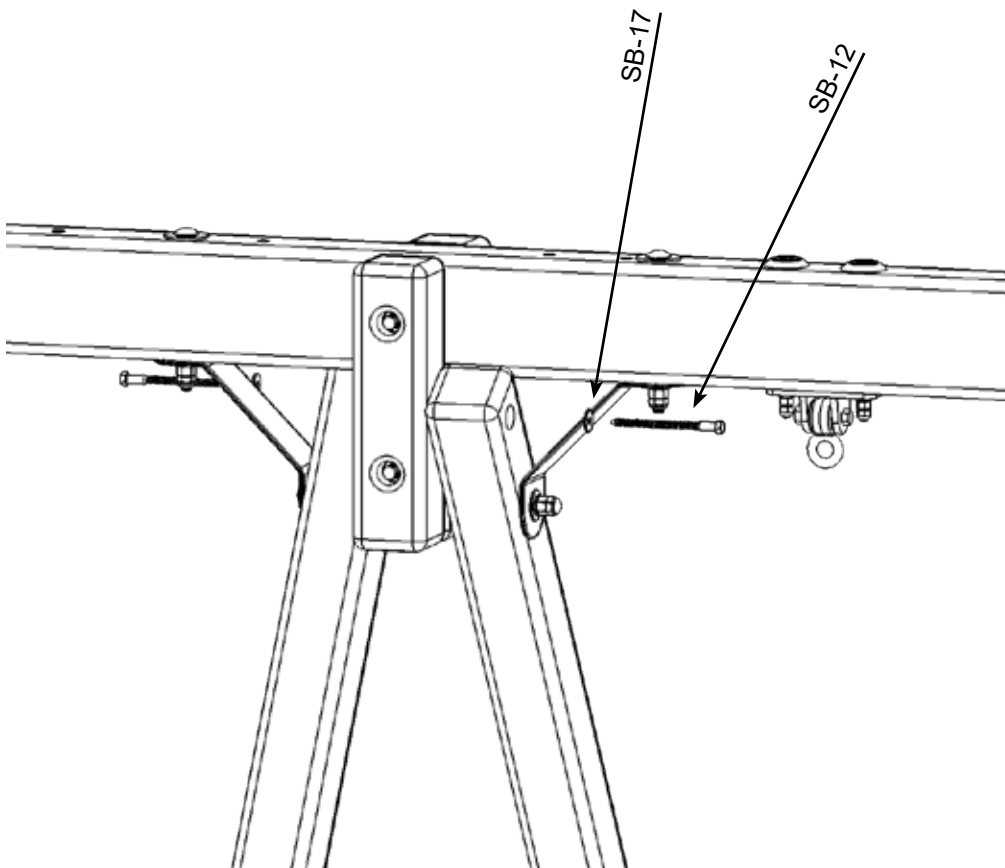



Main Assembly

PARTS NEEDED

601-M- 56" Chained Belt Swing- (2)
601-F- 14' Yellow Rope- (1)
601-I- Disc Swing- (1)

HARDWARE NEEDED

SB-21- 8 x 80mm Spring Clip- (4)

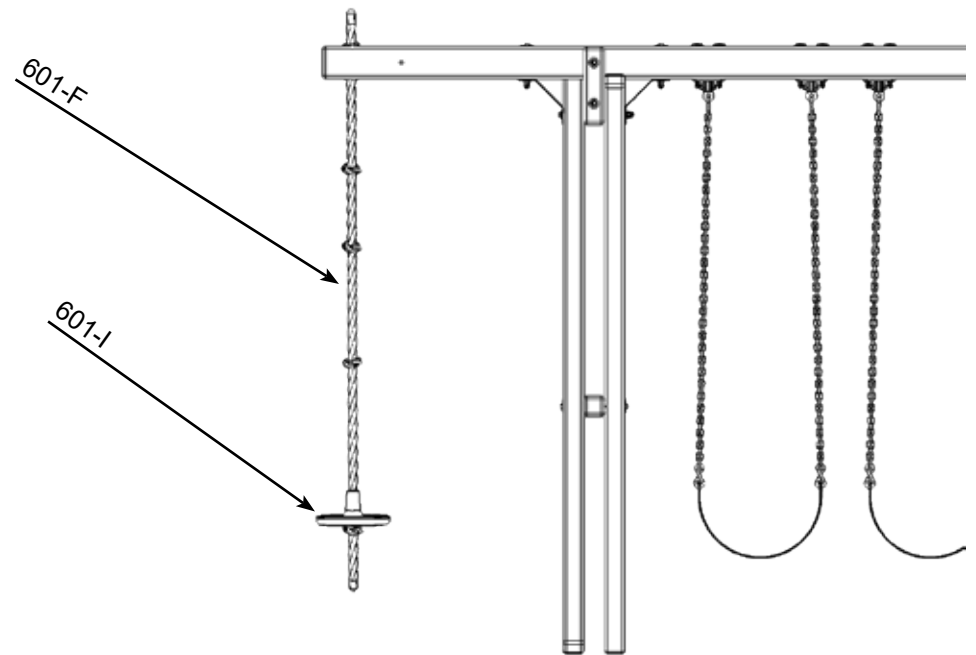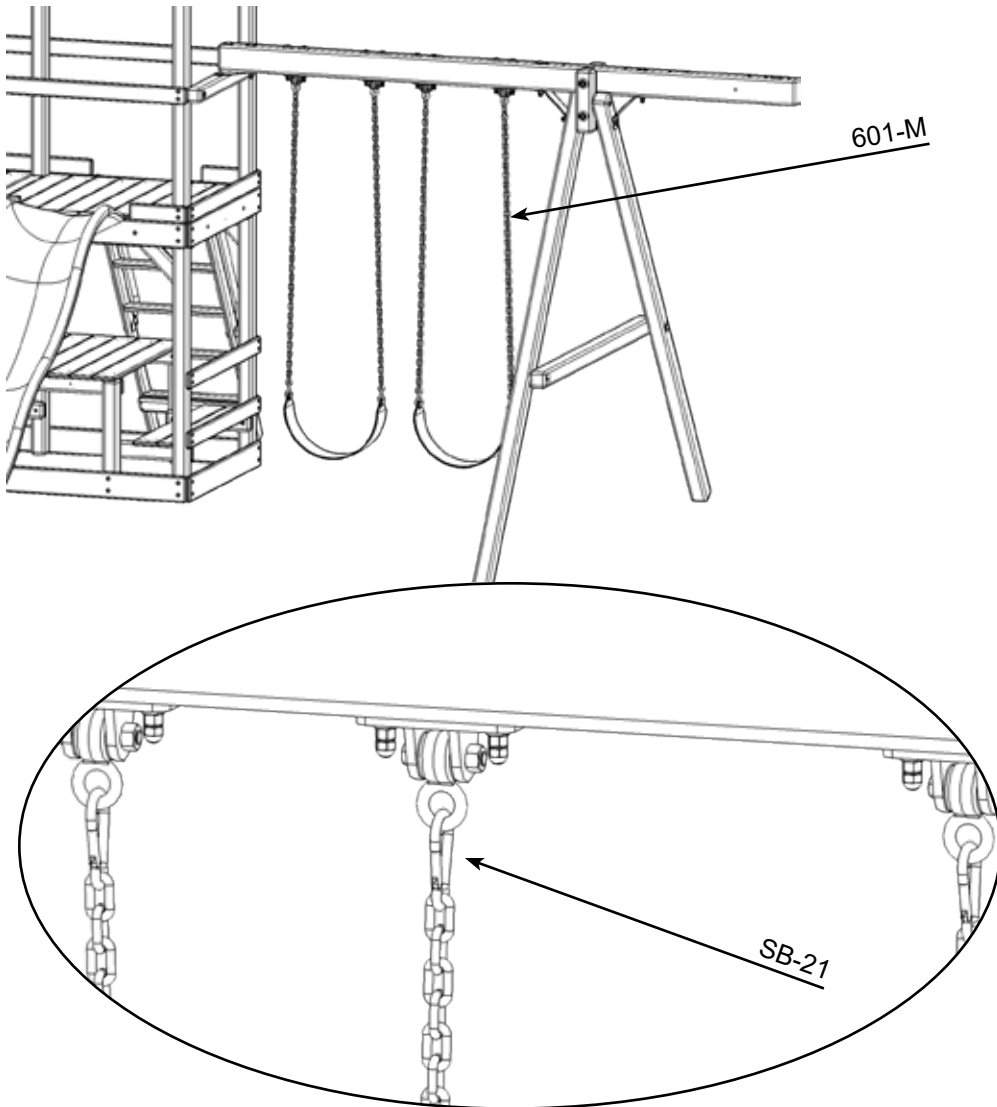

SLIP THE ROPE THROUGH THE SWINGBEAM AND TIE A DOUBLE KNOT SECURING IT TO THE SWINGBEAM. THEN TIE A KNOT EVERY 2 TO 3 FEET UNTIL YOU PLACE THE 601-I ON THE ROPE AND TIE A DOUBLE KNOT KEEPING IT IN PLACE.

Main Assembly



PARTS NEEDED

601-P- 12" Ships' Wheel-
601-O- Telescope-

(1)
(1)

HARDWARE NEEDED

(Hardware with Accessories)

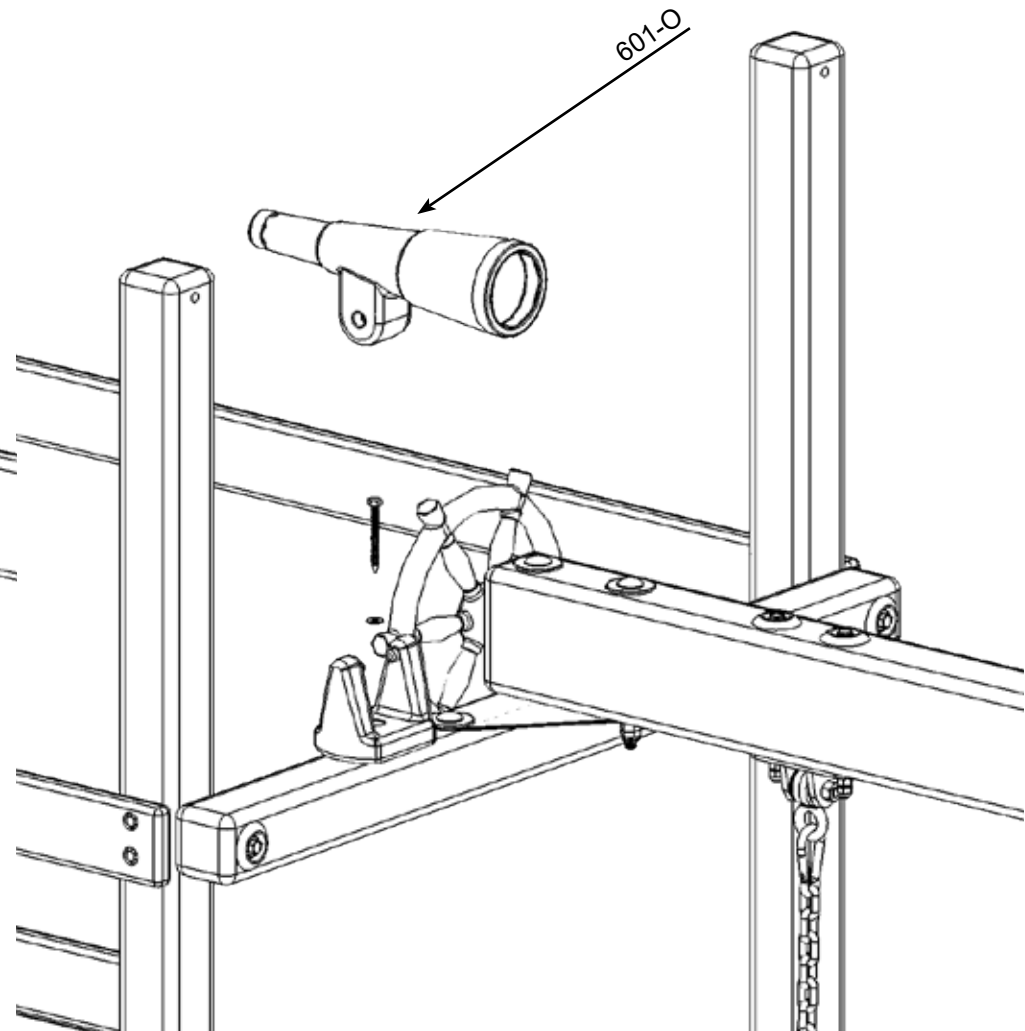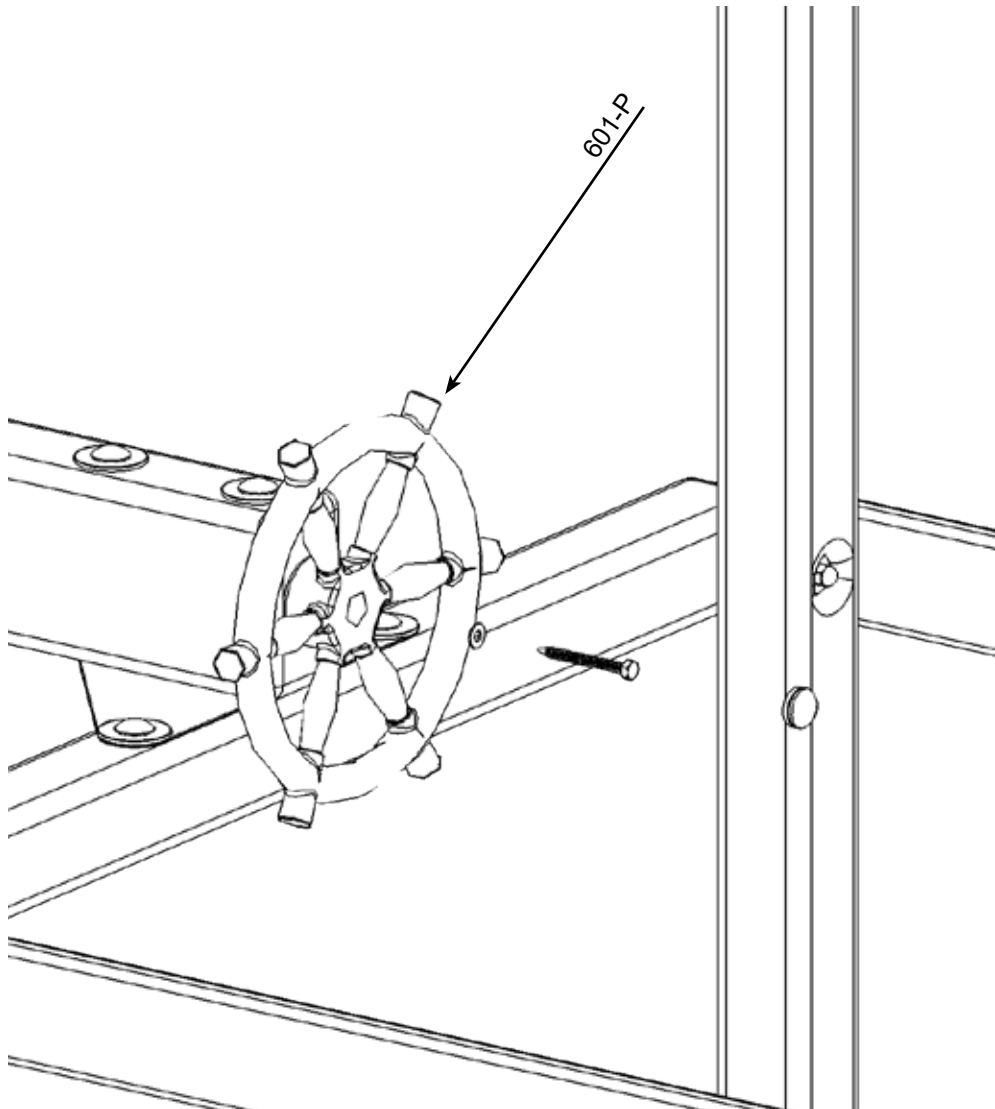





Main Assembly

PARTS NEEDED


601-G- 16" Trapeze Bar- (1)
601-L- Spiral Ground Anchor- (4)

HARDWARE NEEDED

A-14- 8 x 80mm Spring Clip- (2)
A-11- 3/8" USS Flatwasher- (2)
SB-17- 3/8" USS Flatwasher- (2)
A-8- 3/8" x 3 1/2" Hex Lag Screw- (2)
SB-11- 3/8" x 3 1/2" Hex Lag Screw- (2)

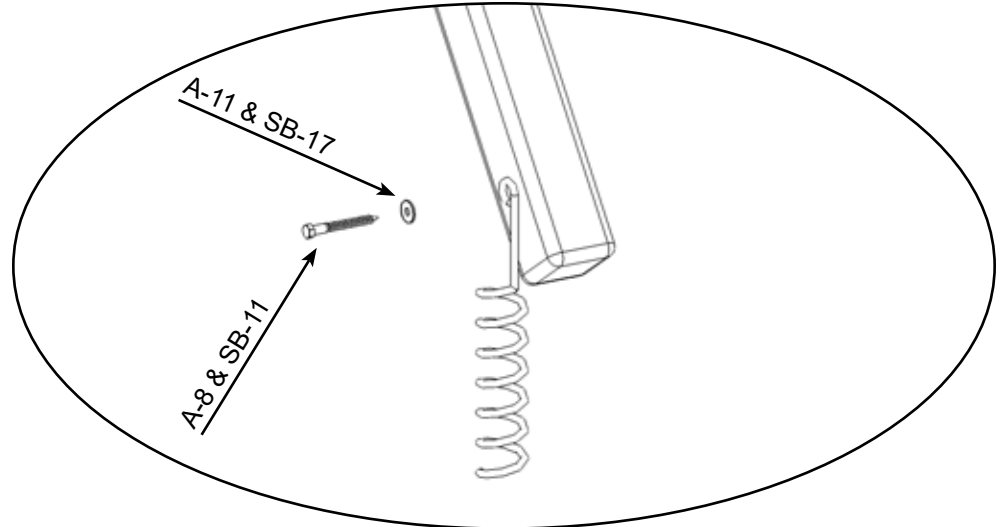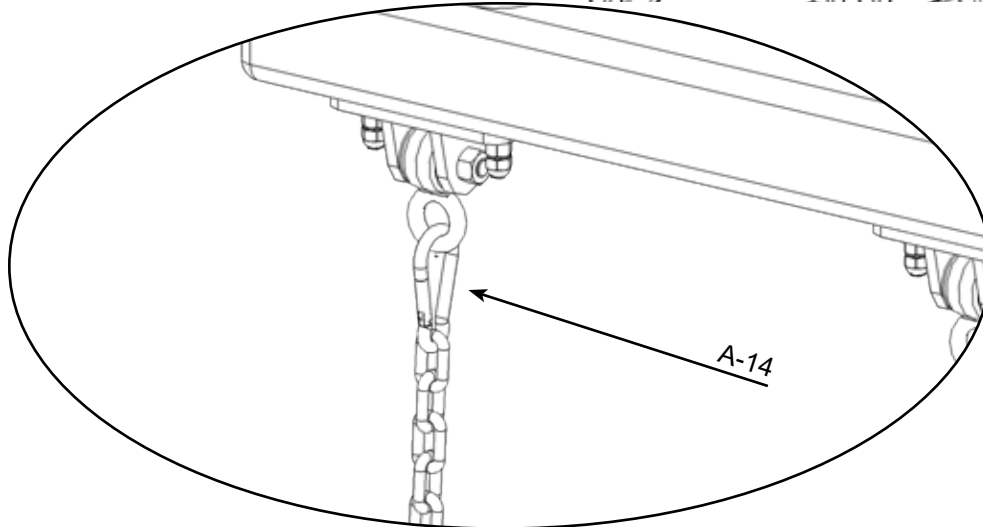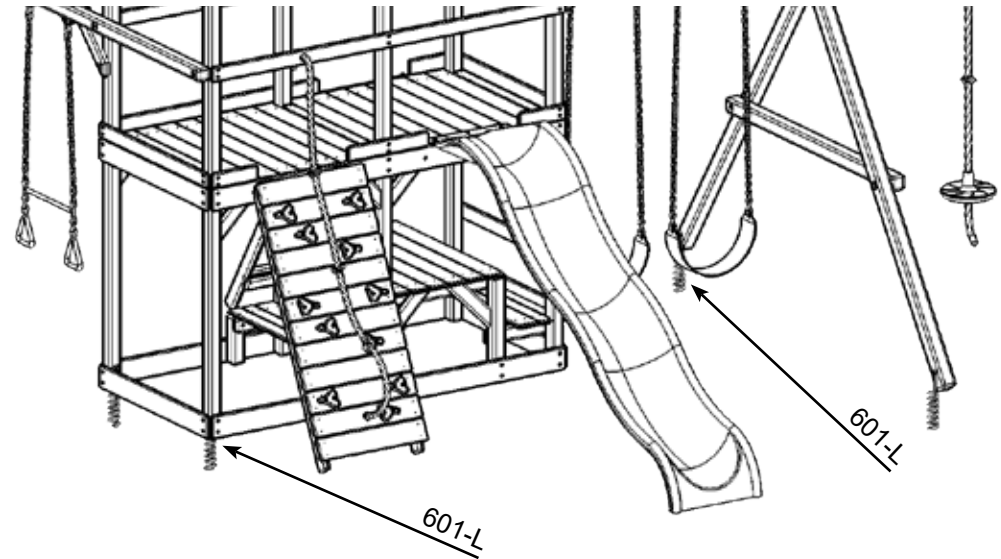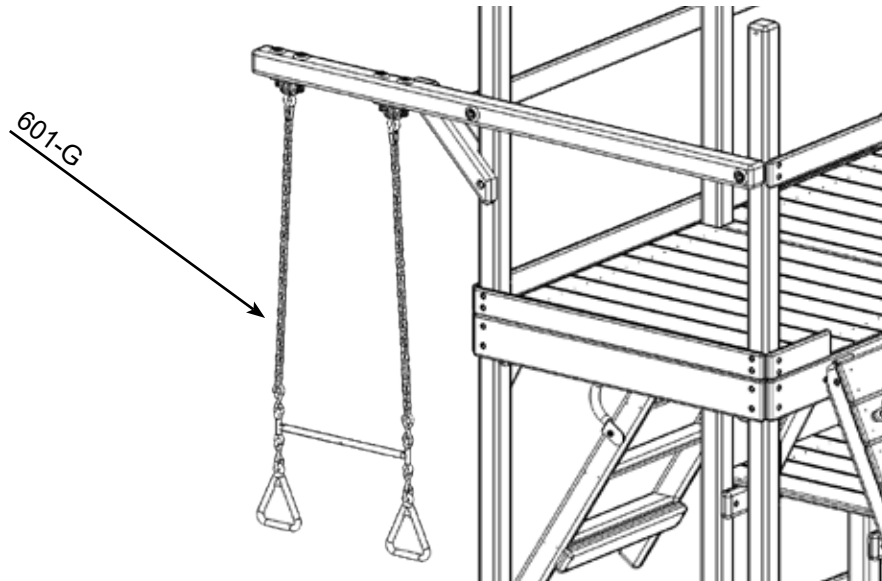

AT THIS POINT YOUR SWING SET SHOULD LOOK LIKE THIS. PROCEED TO THE
RAIL OPTIONS SECTION.

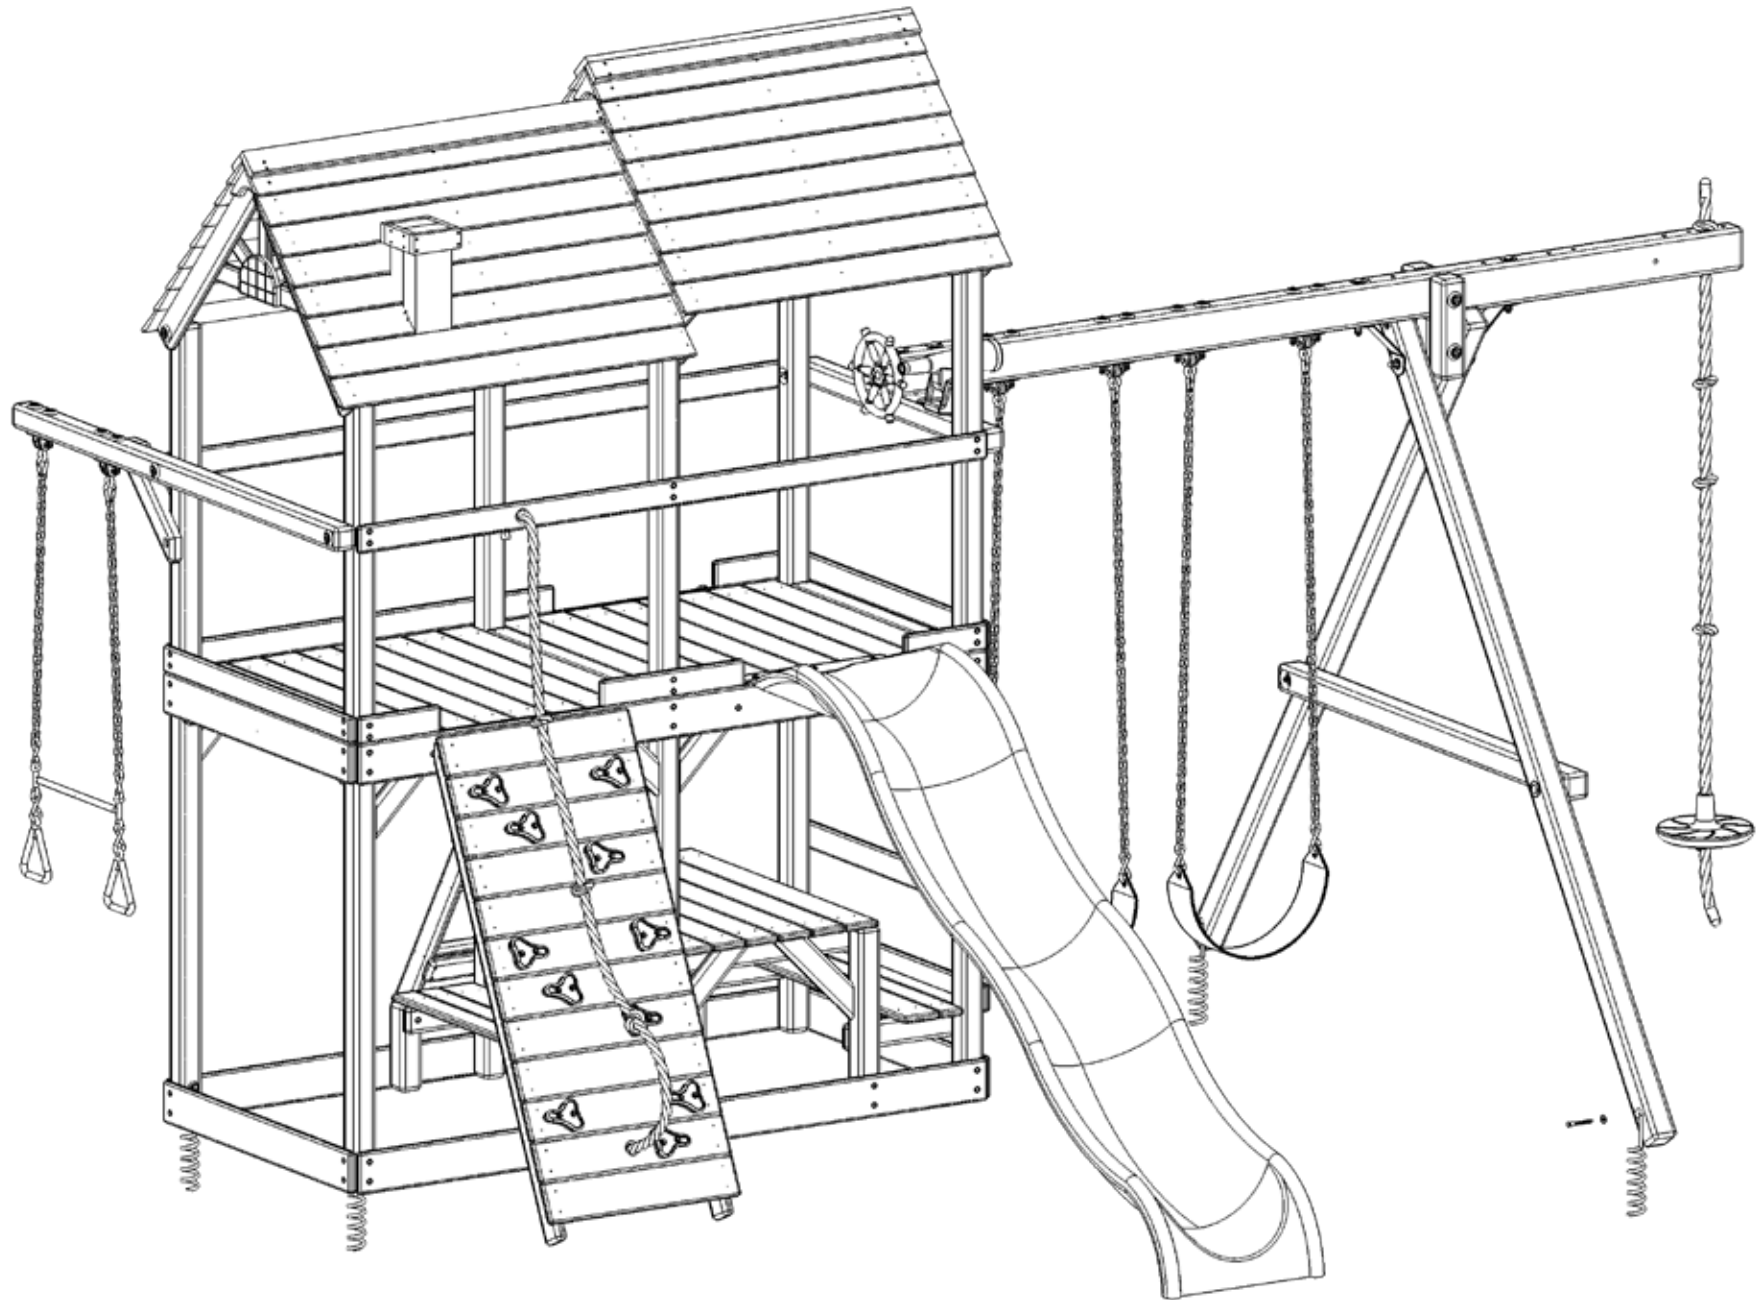

Open Air Rail Option (Skip for Treehouse Panel Rail Option)

PARTS NEEDED





601-32- 26 1/2" Rail Picket-

(12)

HARDWARE NEEDED

C- 1 5/8" Coated Deck Screw-

(48)

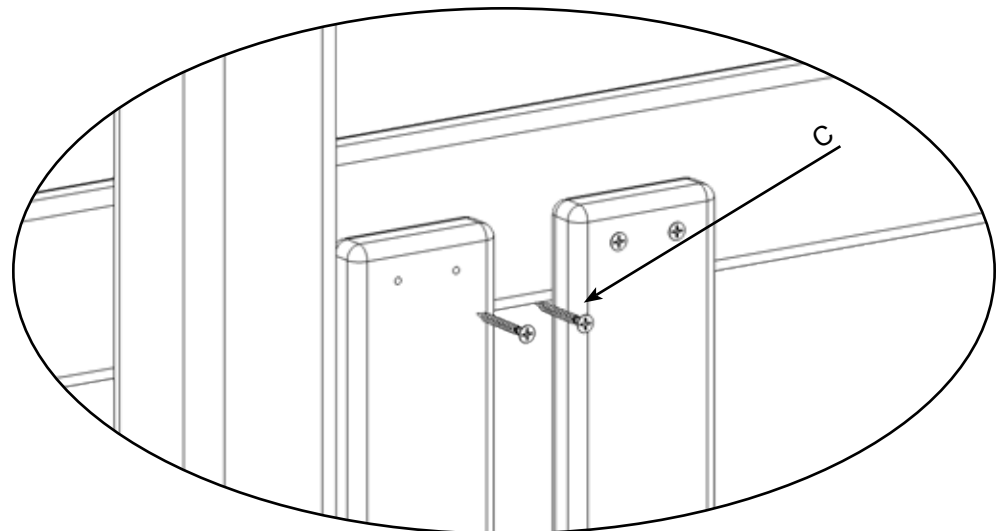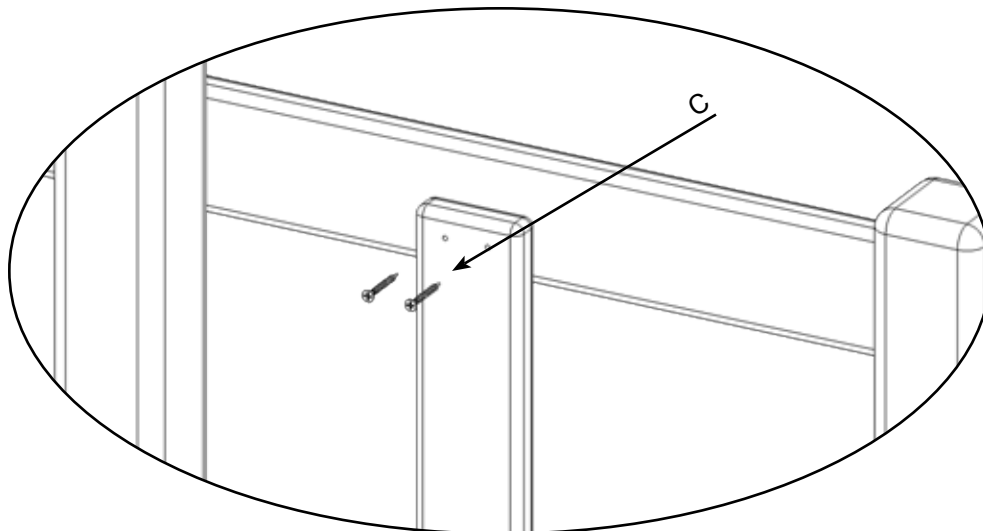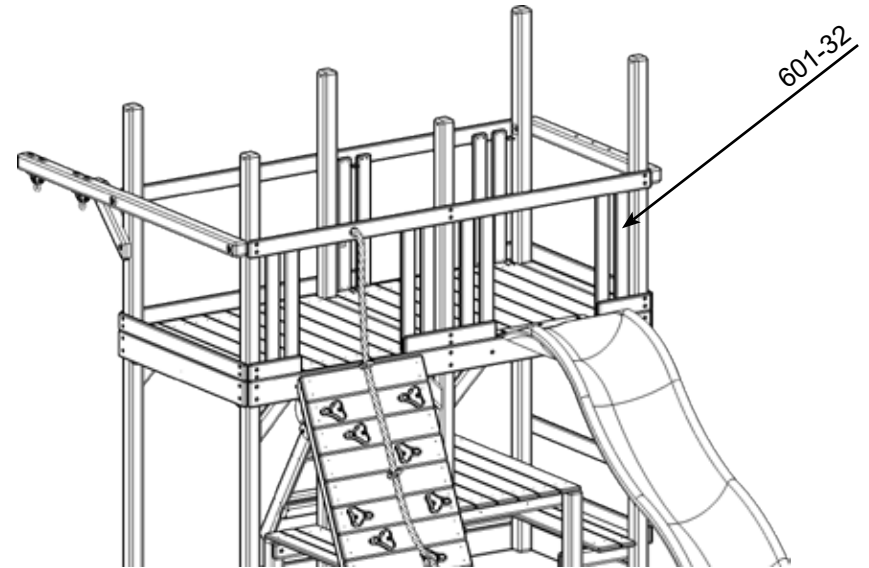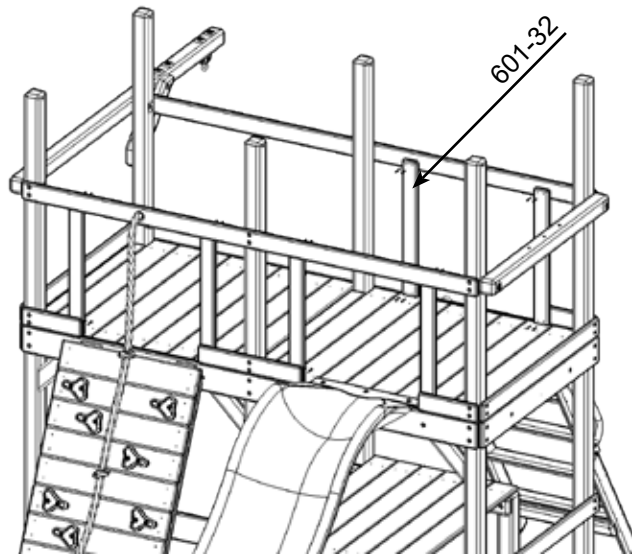

Open Rail Option

PARTS NEEDED

601-32- 26 1/2" Rail Picket-


(17)

HARDWARE NEEDED




C- 1 5/8" Coated Deck Screw-

(68)

RAILS ARE 1 9/16" APART

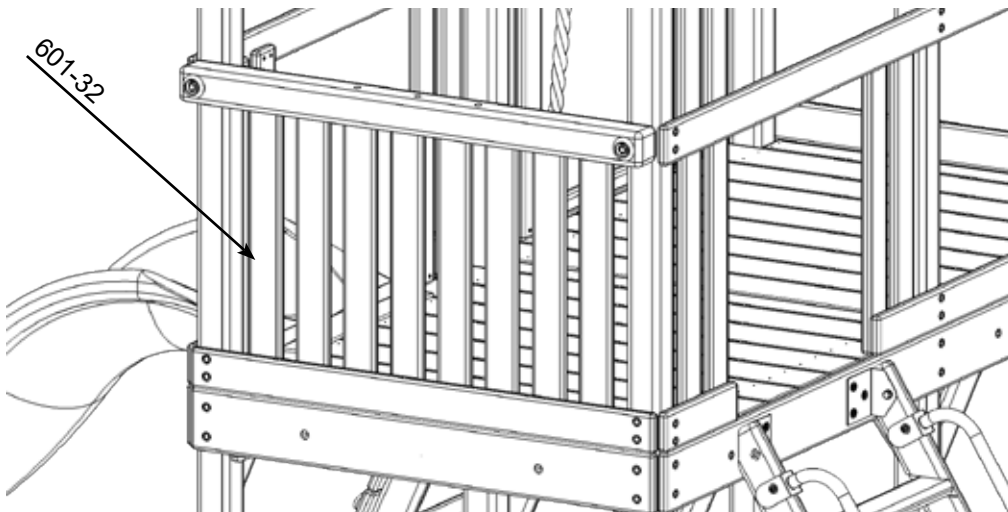

RAILS ARE 1 9/16" APART

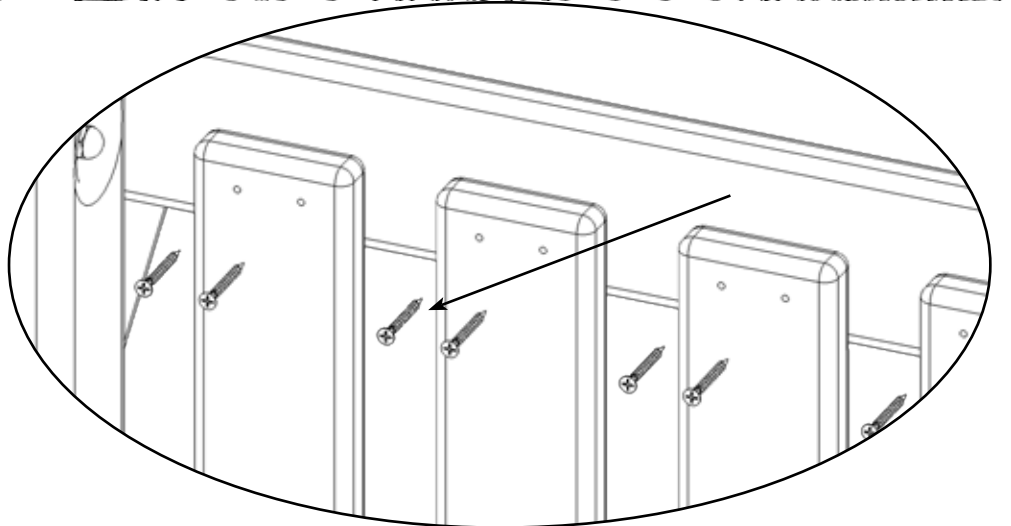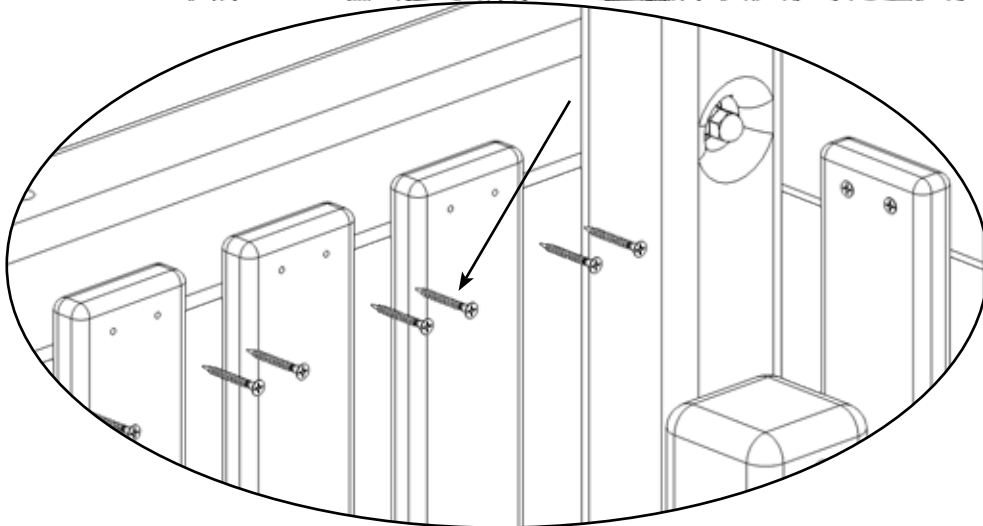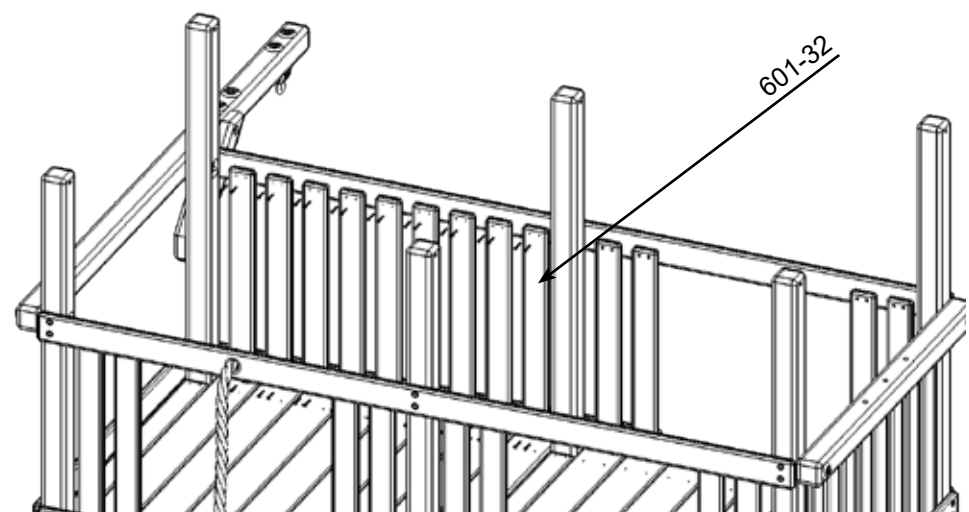





Open Rail Option

PARTS NEEDED

Tic Tac Toe Assembly- (1)
601-52- 26 1/2" Tic Tac Toe Filler Arch- (2)

HARDWARE NEEDED

C- 1 5/8" Coated Deck Screw- (16)

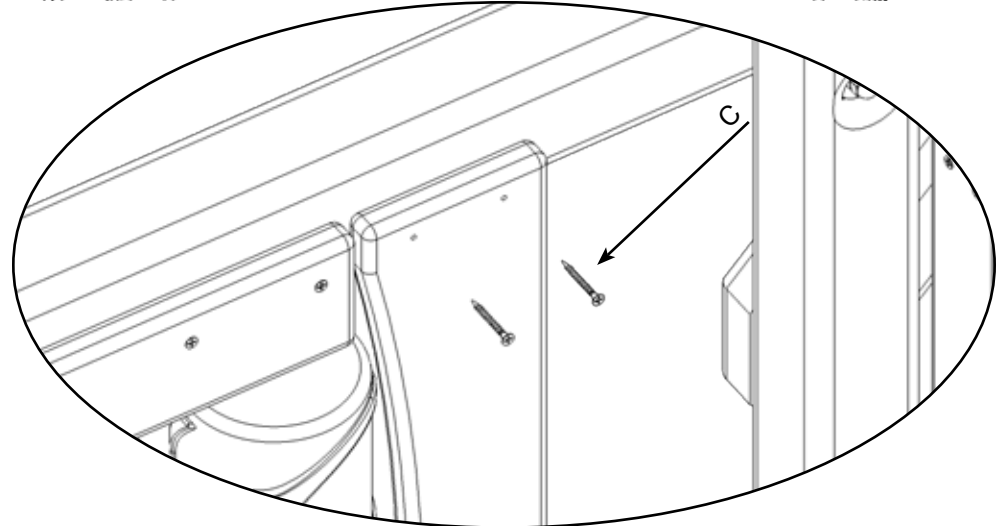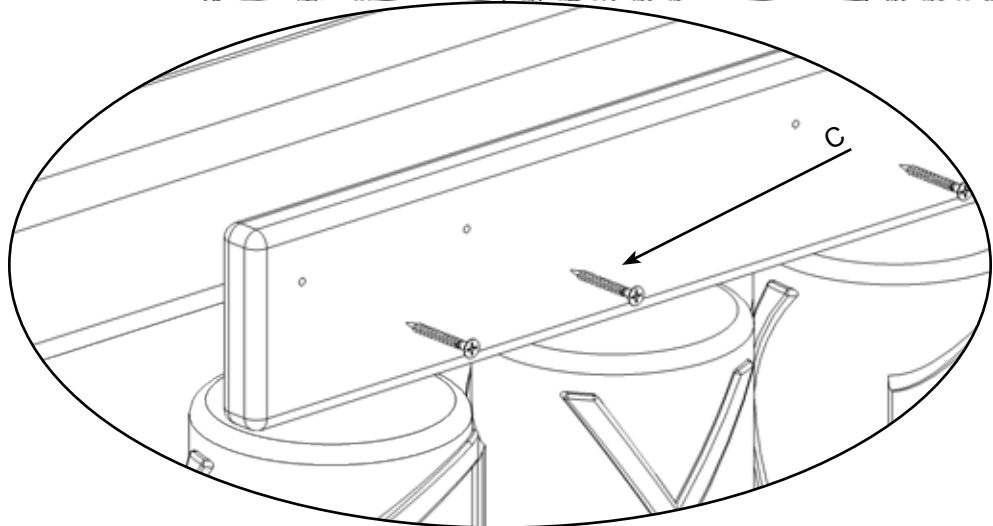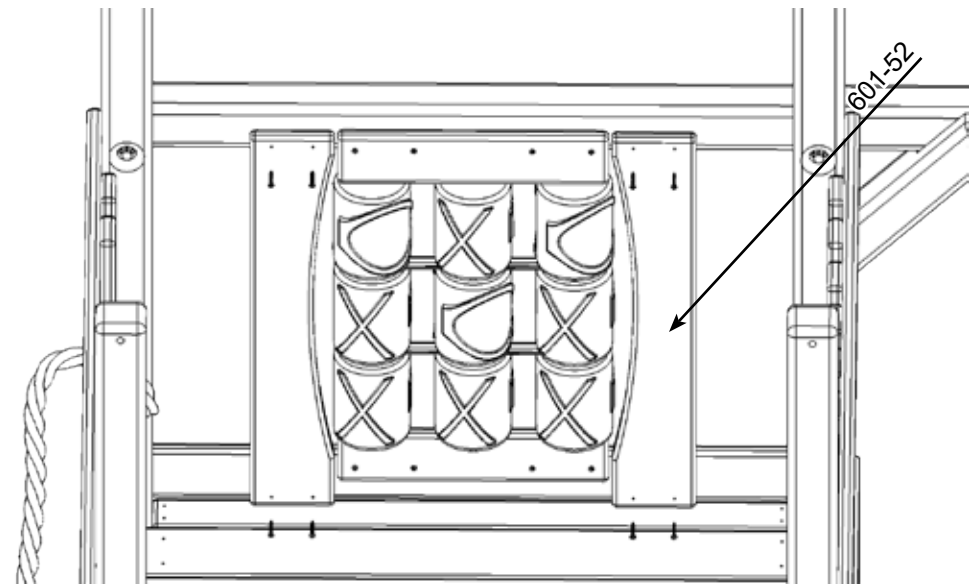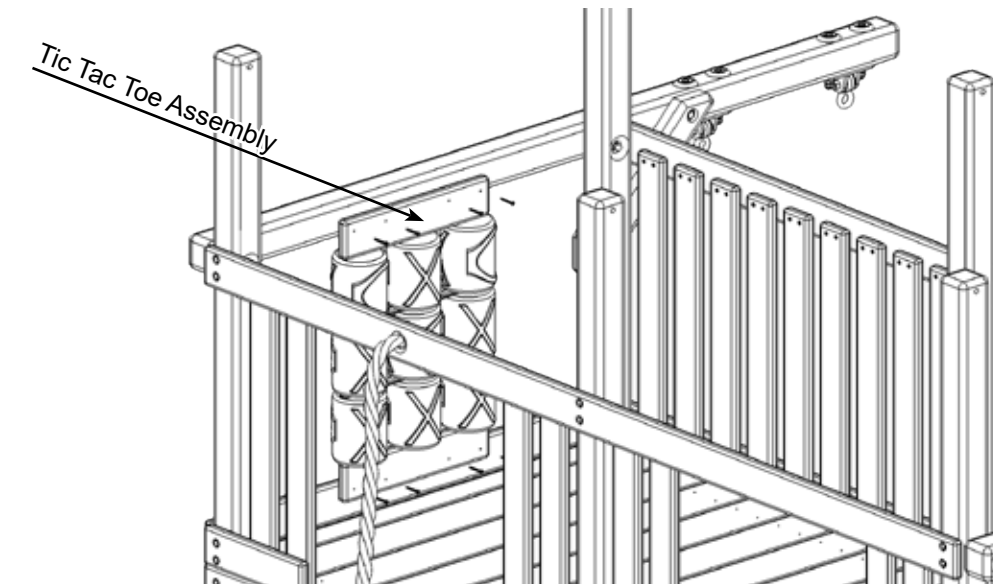





Open Rail Option

PARTS NEEDED

601-32- 26 1/2" Rail Picket- (2)
601-A- 90 Degree Brakcet- (6)

HARDWARE NEEDED

C- 1 5/8" Coated Deck Screw- (8)
K- 1/4" USS Flatwasher- (12)
G- #14 x 1" Pan Phillips T/S- (12)

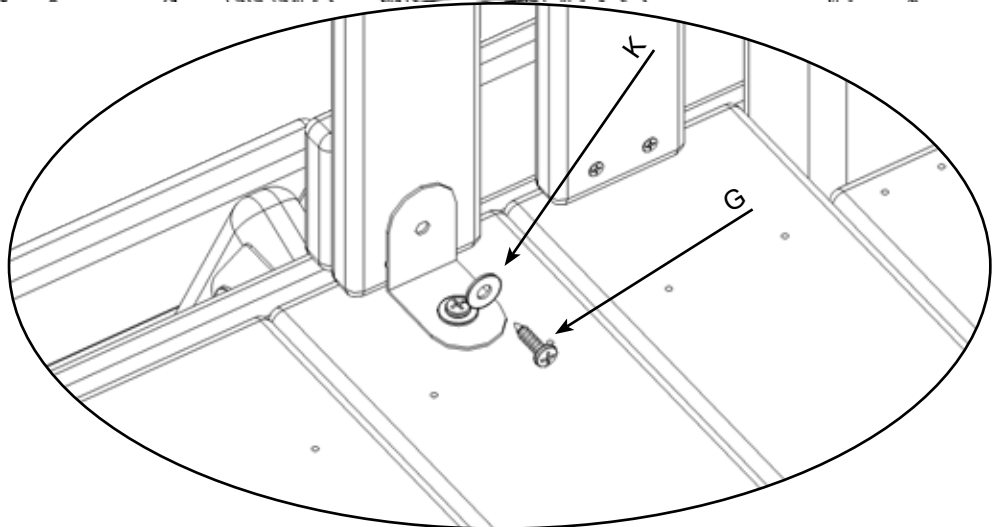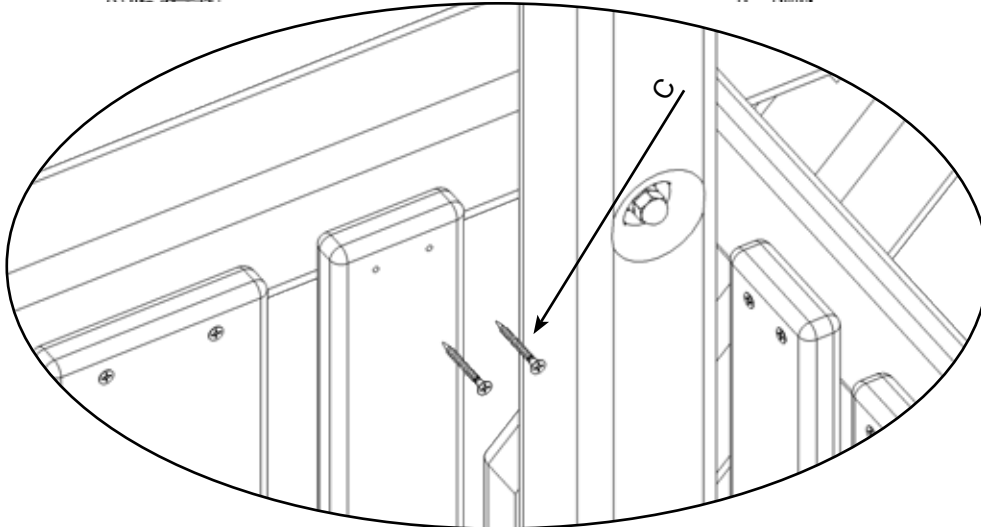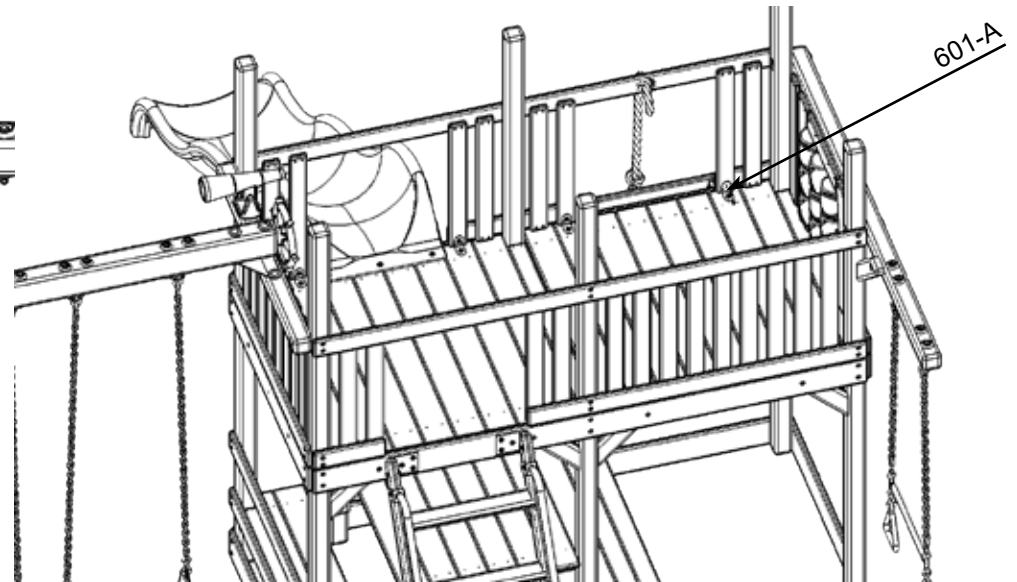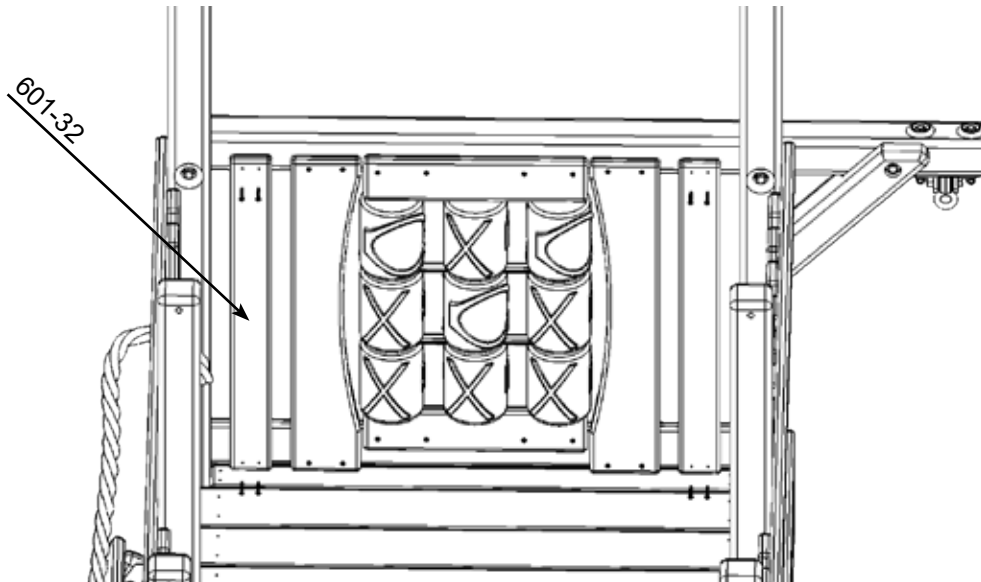


Open Rail Option

PARTS NEEDED




601-H- 22" x 22" Chalkboard- (1)
601-D- Playgrip Safety Handle- (4)

HARDWARE NEEDED


K- 1/4" USS Flatwasher- (12)
G- #14 x 1" Pan Phillips T/S- (12)

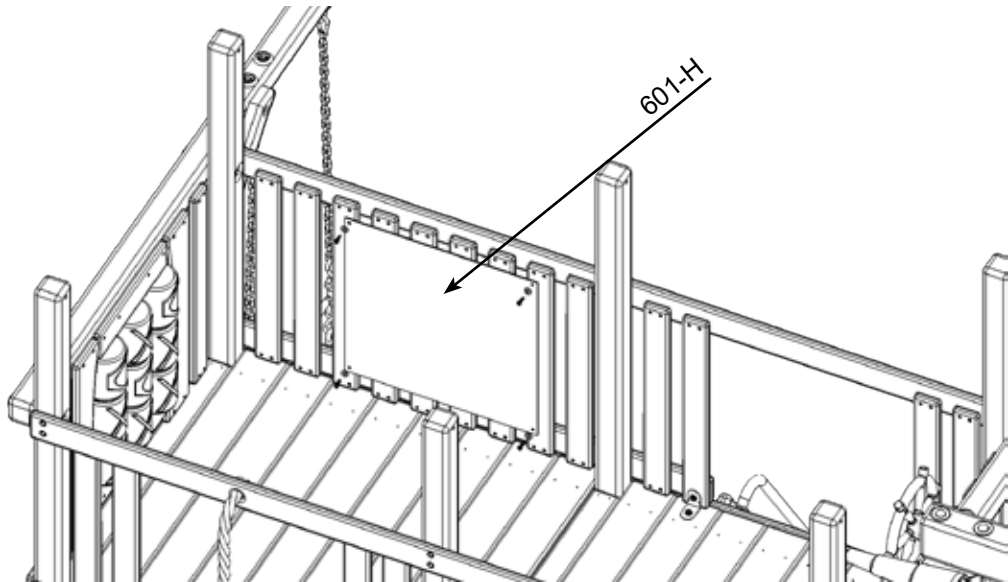

PLACE SAFETY HANDLES ON FOR THE LADDER AND ROCKWALL

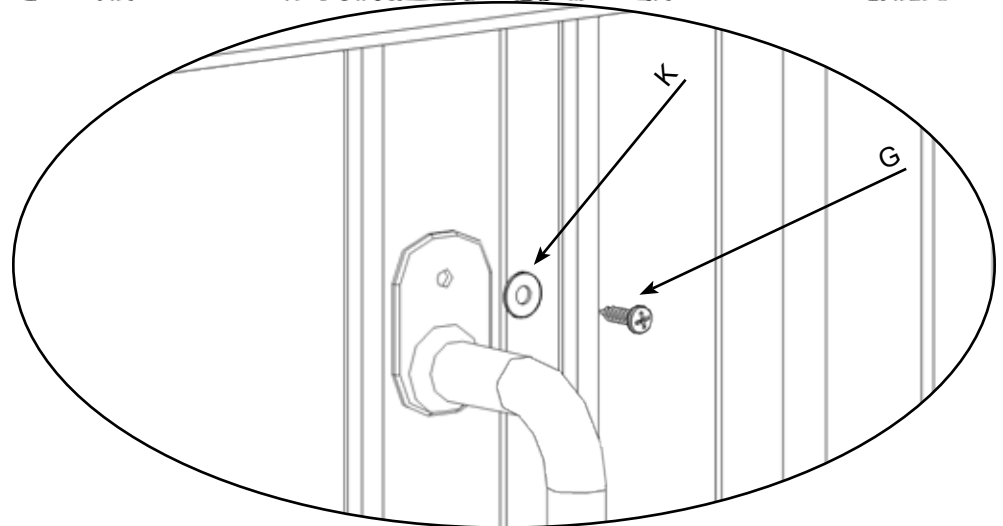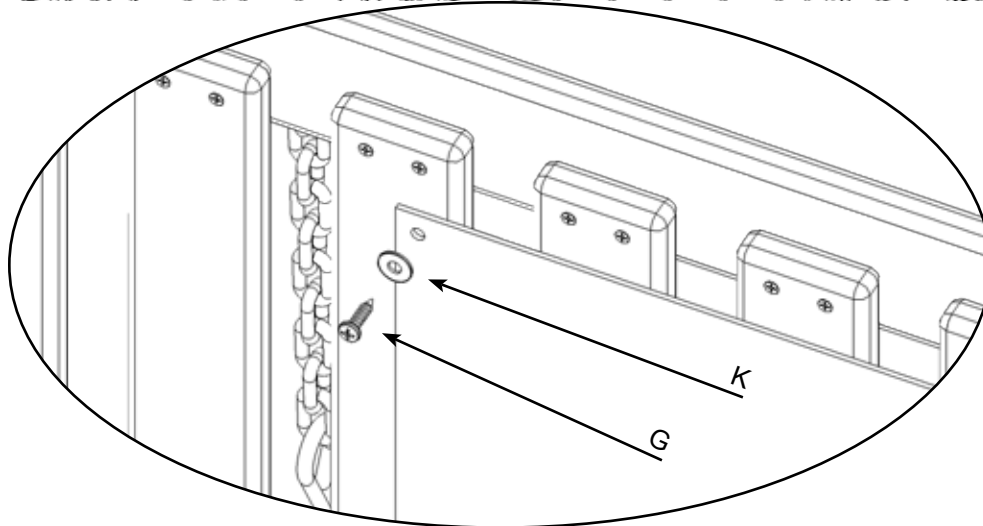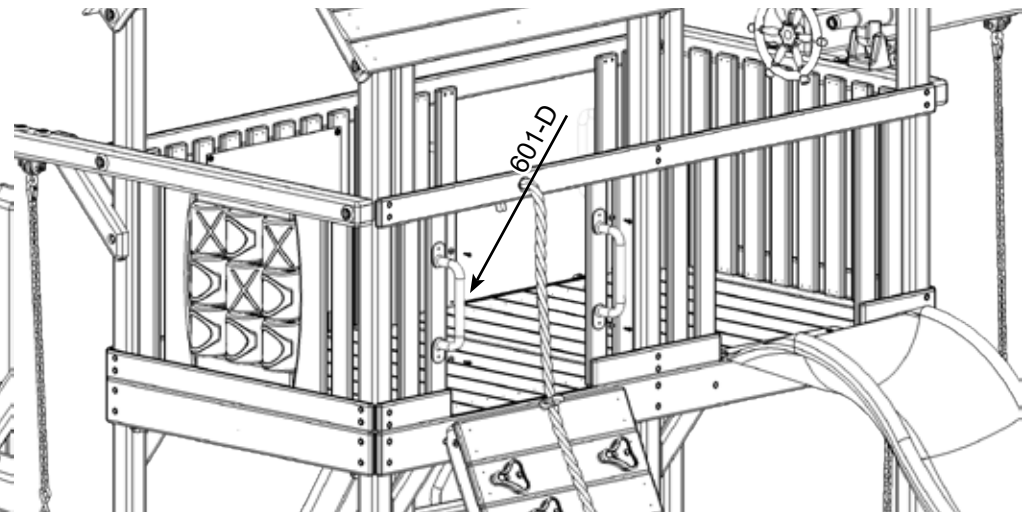

Finished Open Rail Assembly

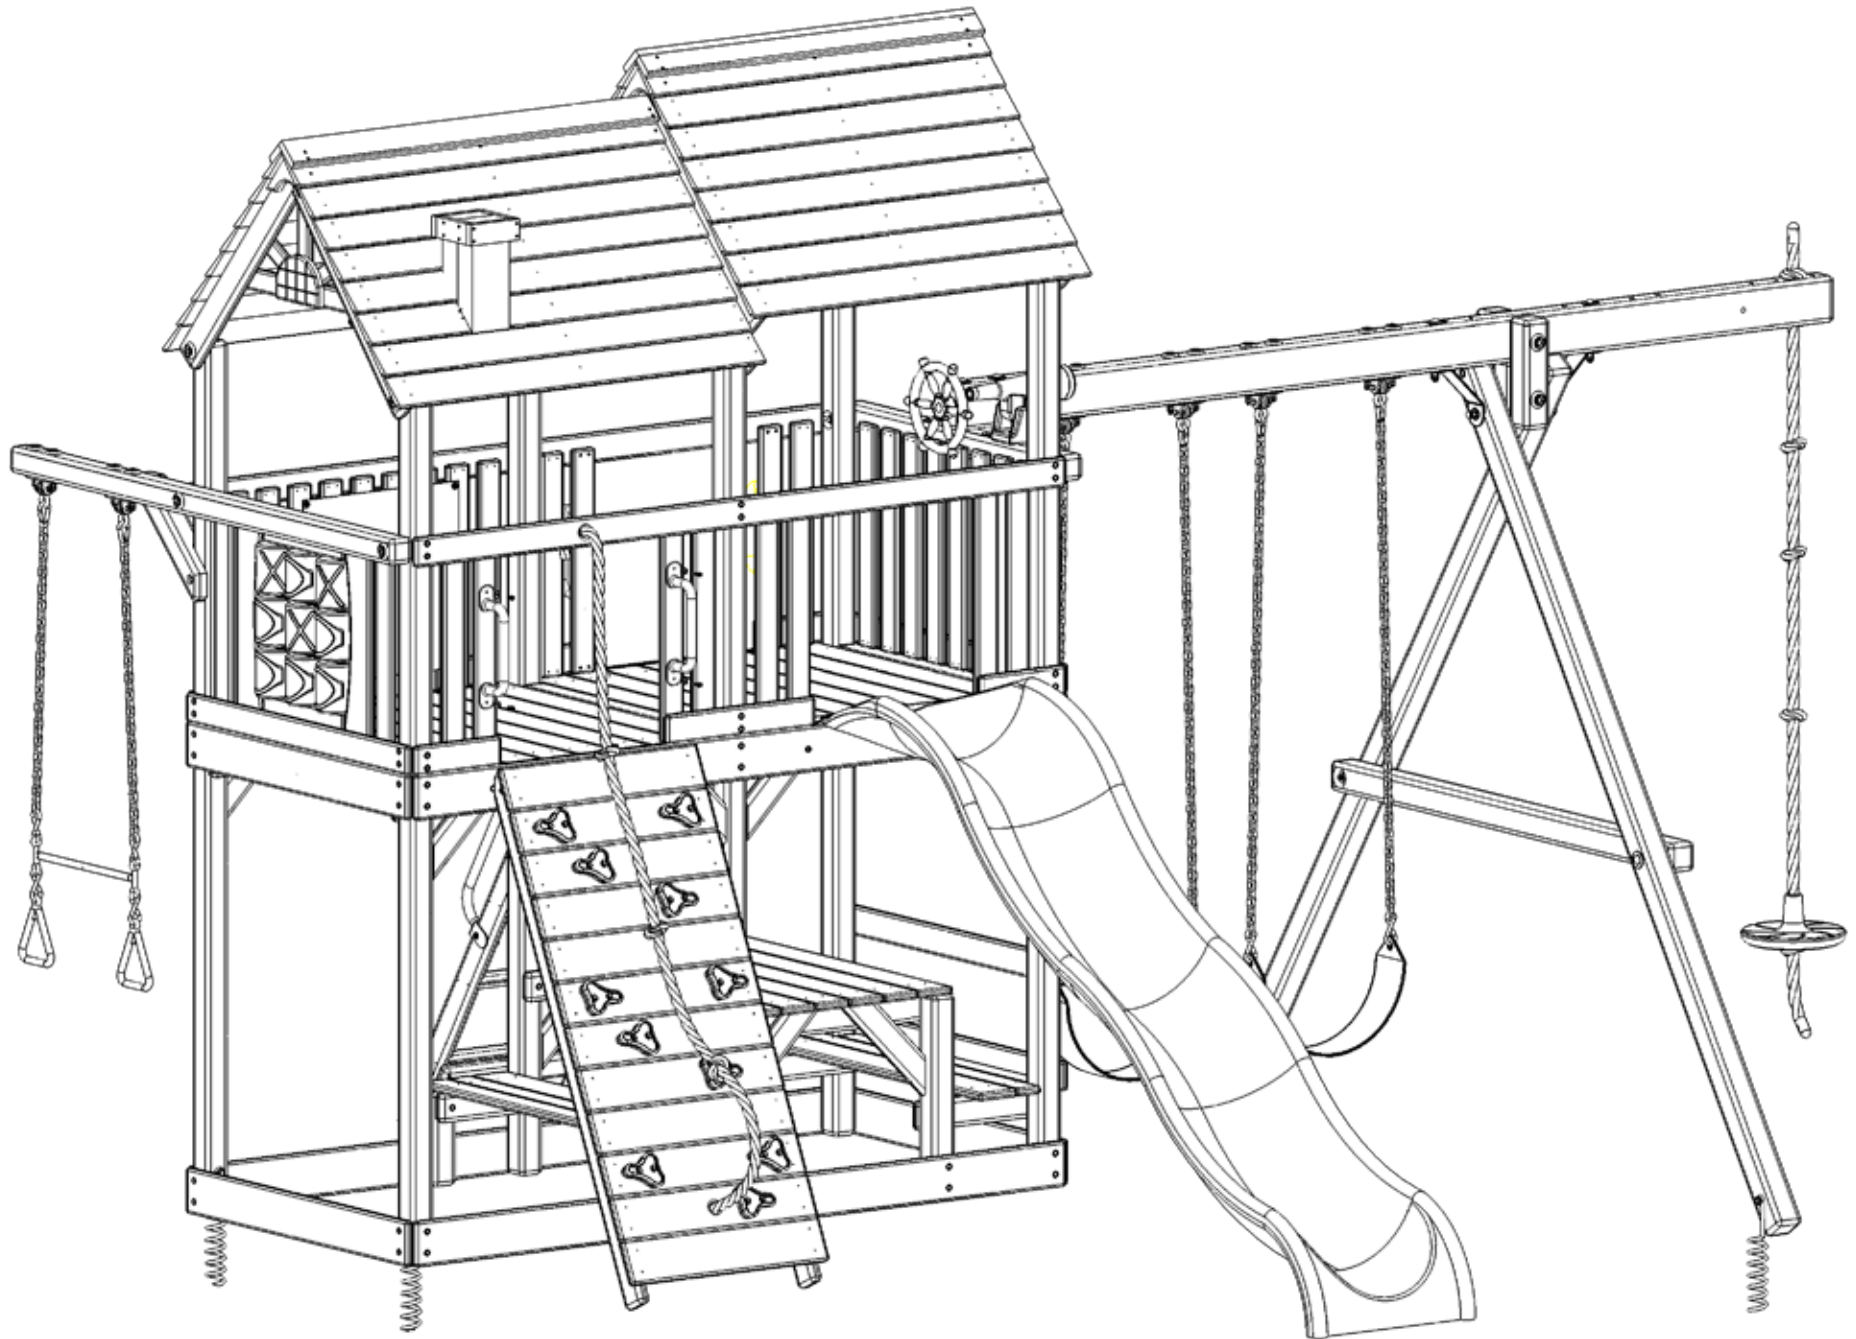





Treehouse Rail Option (ROOF REMOVED FOR VISUAL PURPOSES)

PARTS NEEDED

601-8- 26 1/2" Rail Picket- (30)
601-1- 26 1/2" Lower SB Side Panel Board- (1)

HARDWARE NEEDED

C- 1 5/8" Coated Deck Screw- (120)

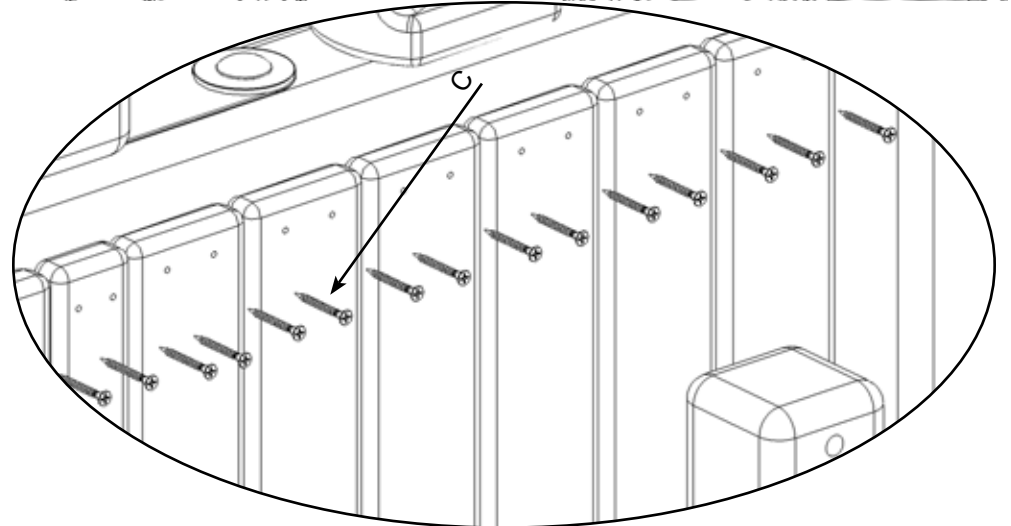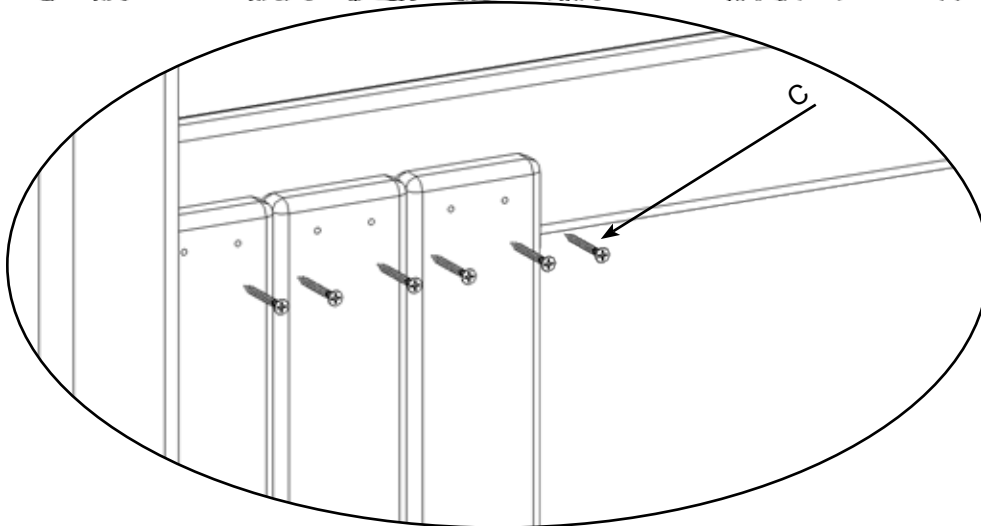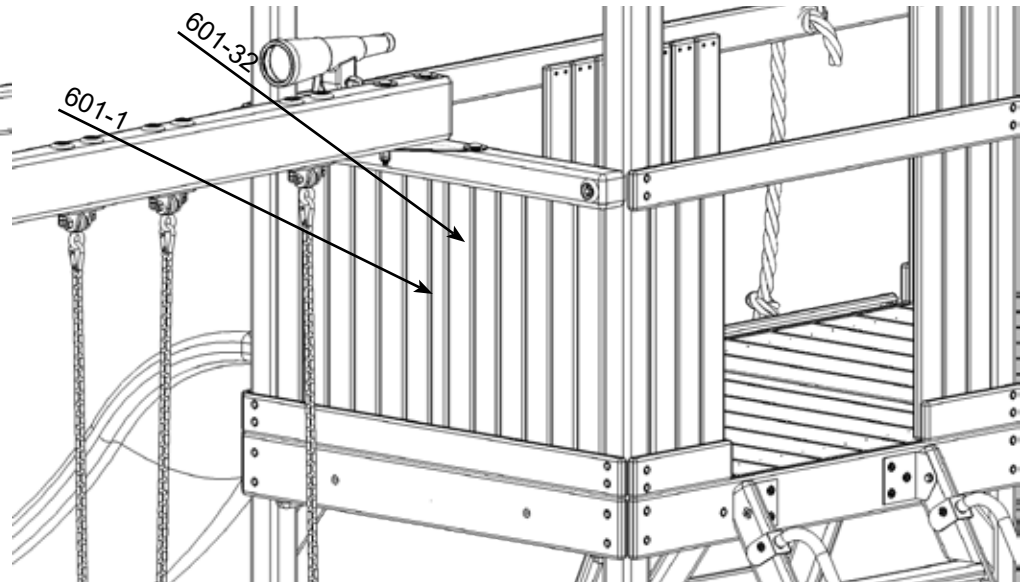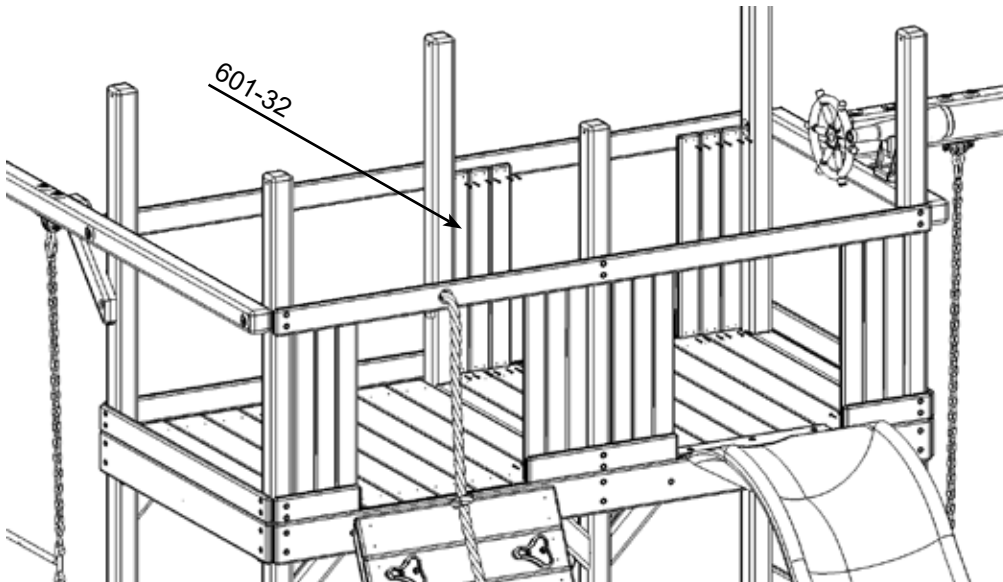





Treehouse Rail Option (ROOF REMOVED FOR VISUAL PURPOSES)

PARTS NEEDED

Tic Tac Toe Assembly- (1)
601-32- 26 1/2" Tic Tac Toe Filer Arch- (2)

HARDWARE NEEDED

C- 1 5/8" Coated Deck Screw- (12)

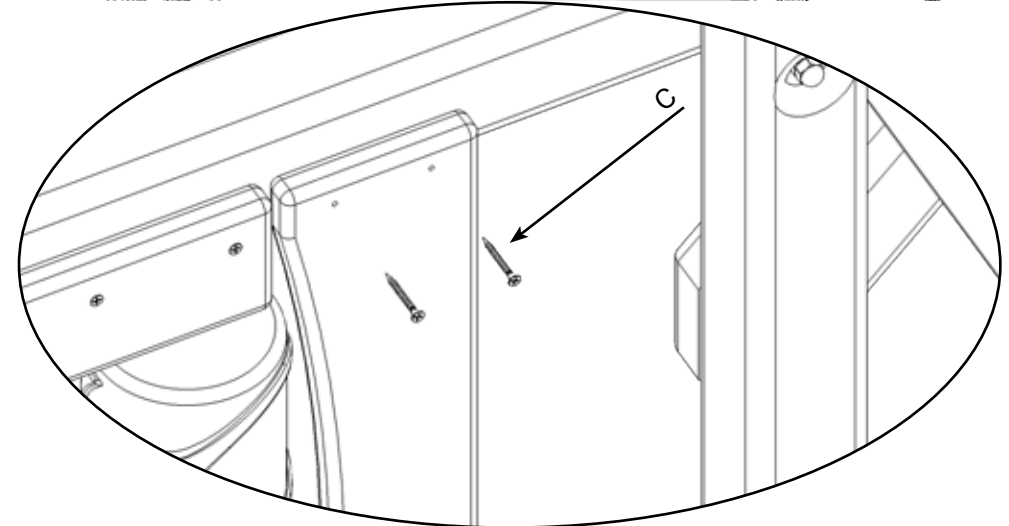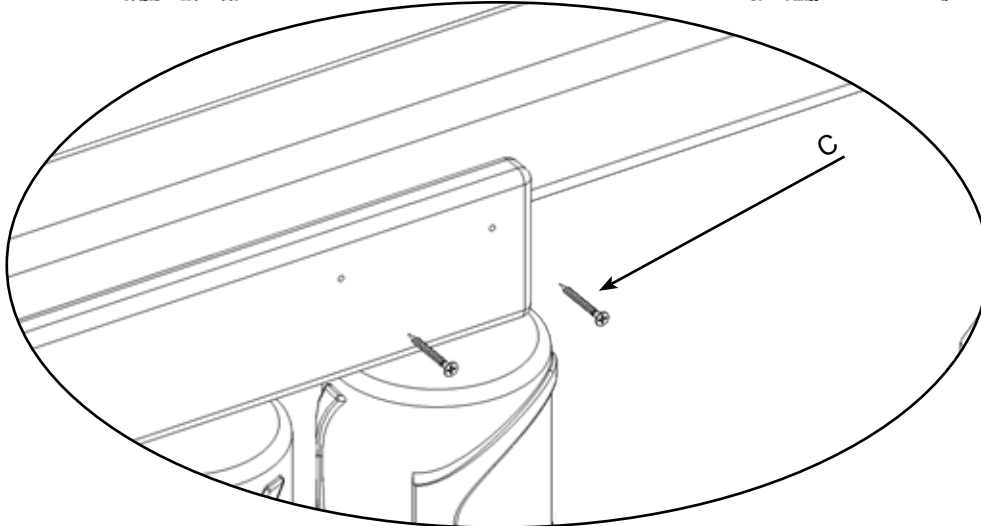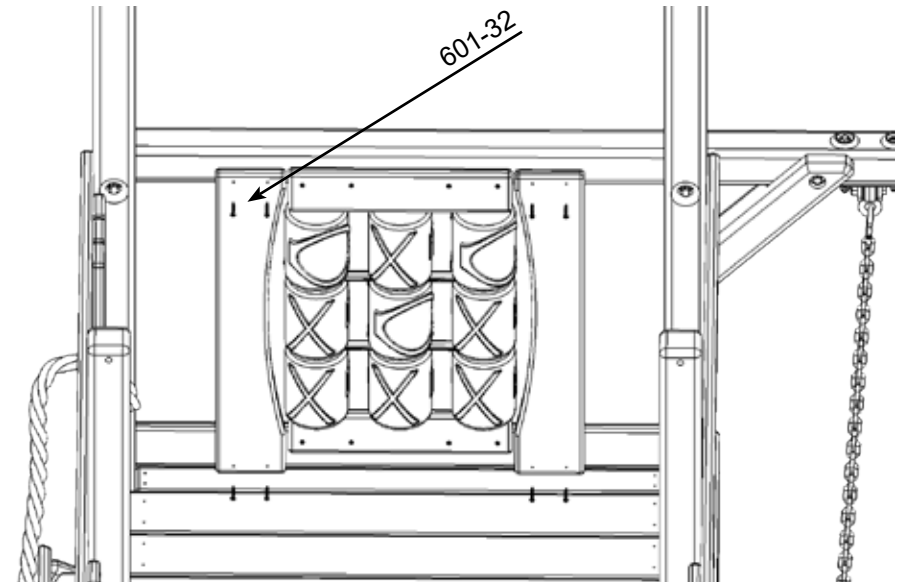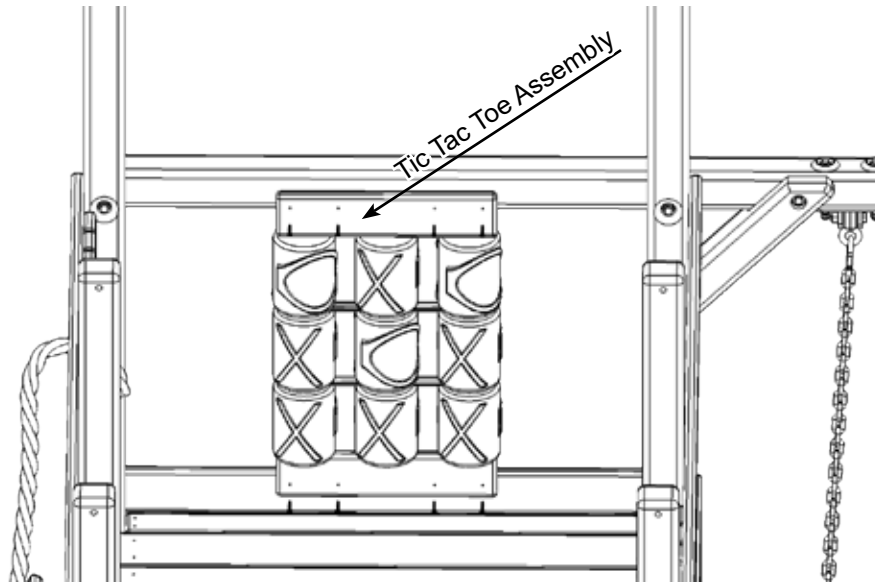





Treehouse Rail Option (ROOF REMOVED FOR VISUAL PURPOSES)

PARTS NEEDED

601-32- 26 1/2" Rail Picket-	(16)
601-10- 26 1/2" Panel Board-	(2)

HARDWARE NEEDED

C- 1 5/8" Coated Deck Screw-	(72)
------------------------------	------

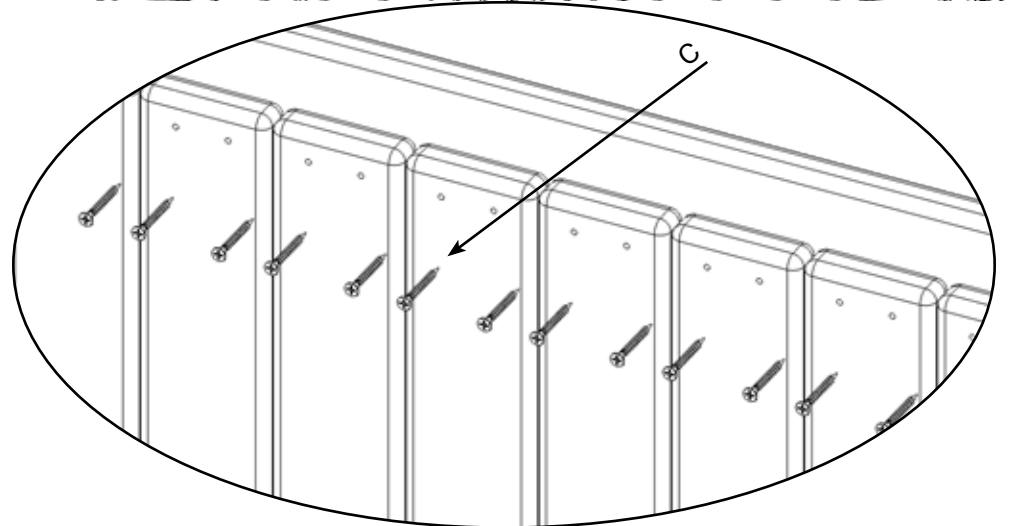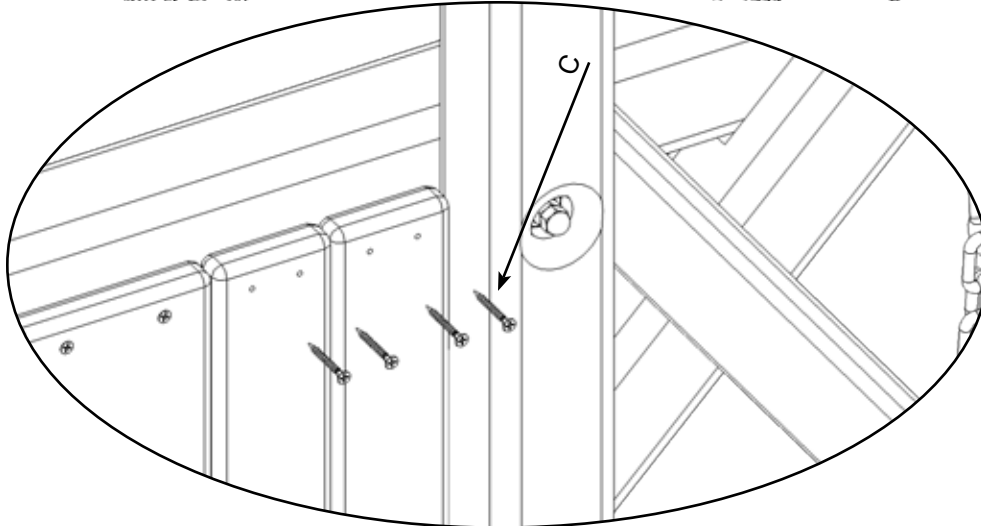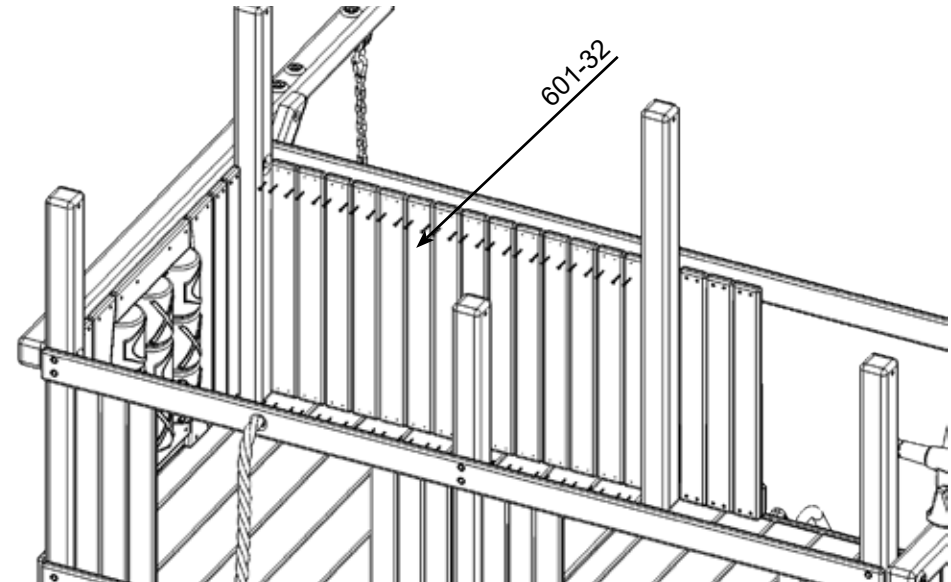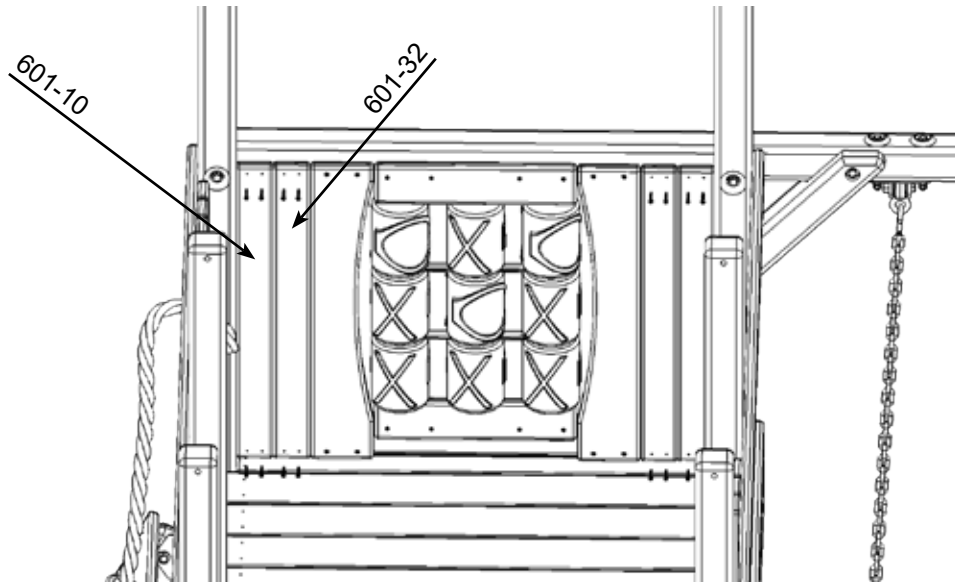





Treehouse Rail Option (ROOF REMOVED FOR VISUAL PURPOSES)

PARTS NEEDED

601-A- 90 Degree Bracket-	(6)
601-H- 22" x 22" Chalkboard-	(1)

HARDWARE NEEDED

K- 1/4" USS Flatwasher-	(16)
G- #14 x 1" Pan Phillips T/S-	(16)

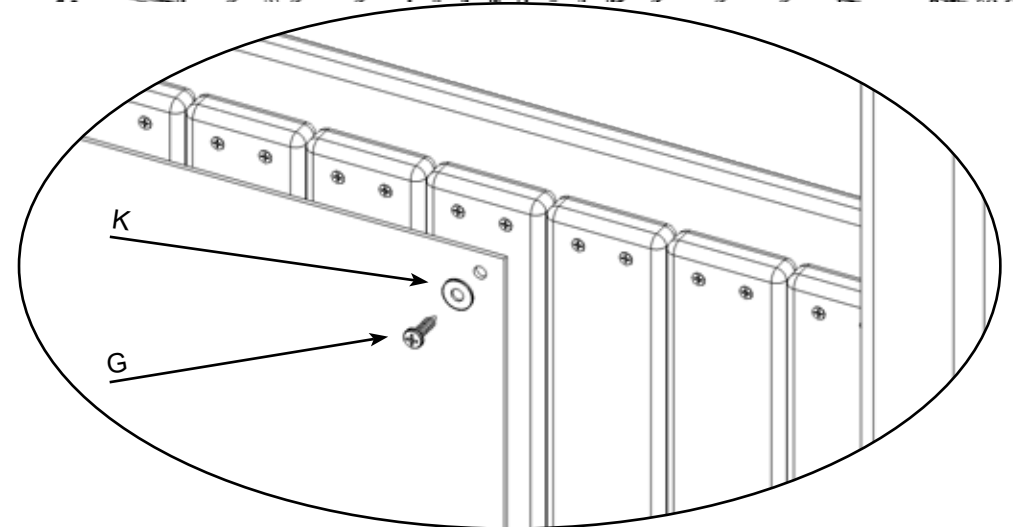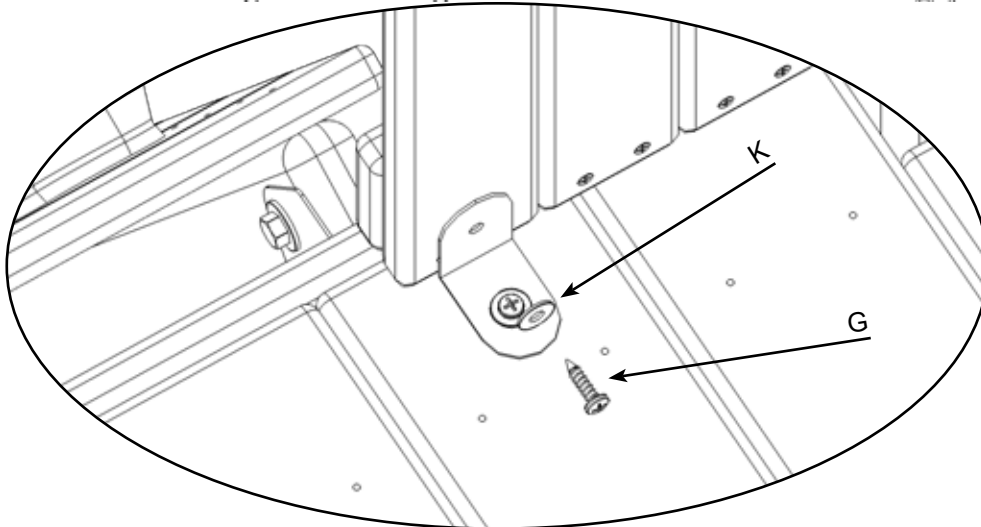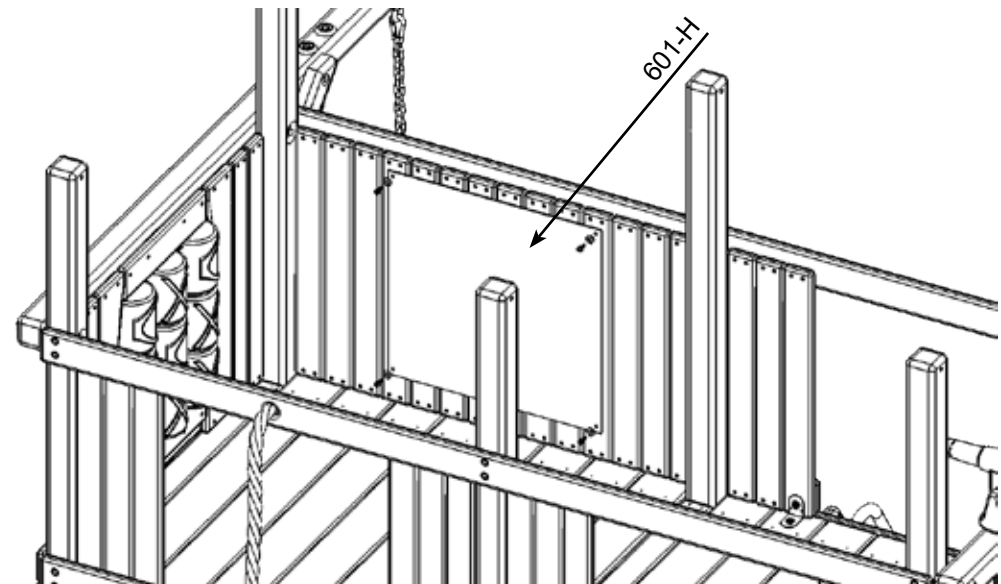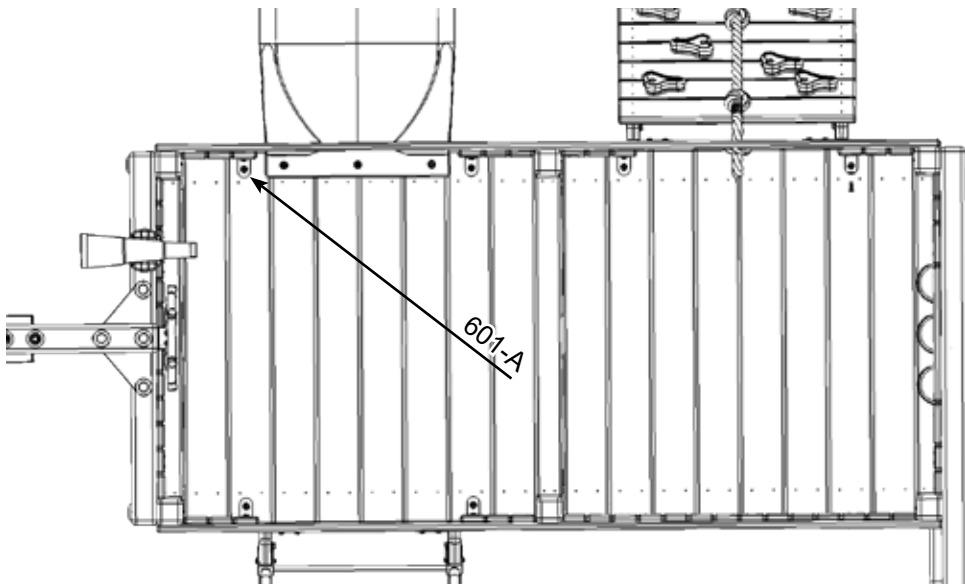

Treehouse Rail Option (ROOF REMOVED FOR VISUAL PURPOSES)

PARTS NEEDED




601-D- Playgrip Safety Handle- (4)

HARDWARE NEEDED

K- 1/4" USS Flatwasher- (8)

G- #14 x 1" Pan Phillips T/S- (8)

PLACE SAFETY HANDLES ON FOR THE LADDER AND ROCKWALL

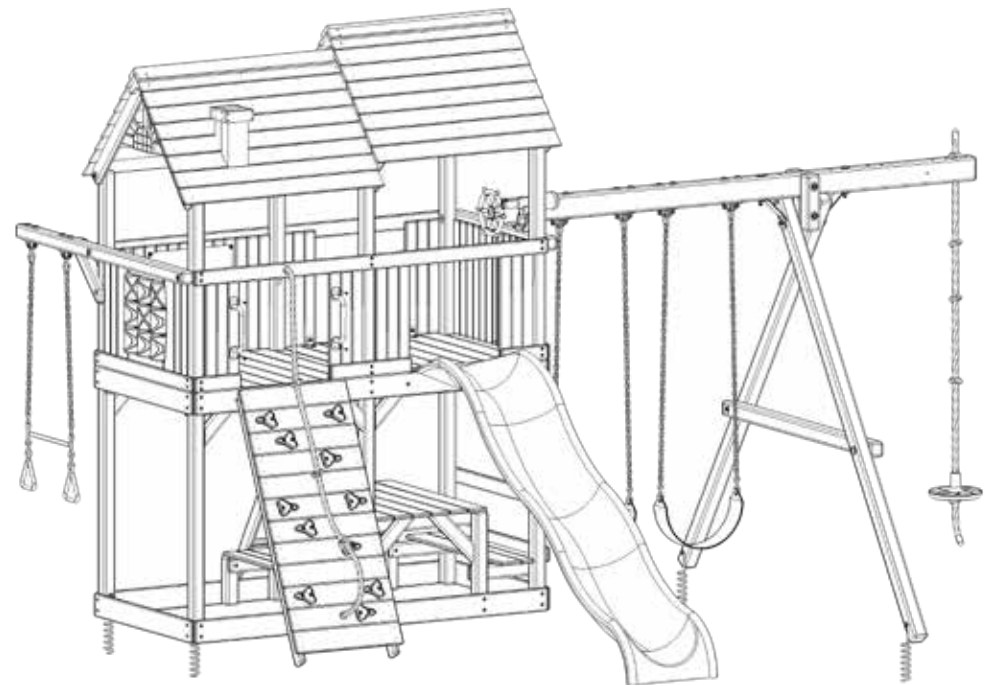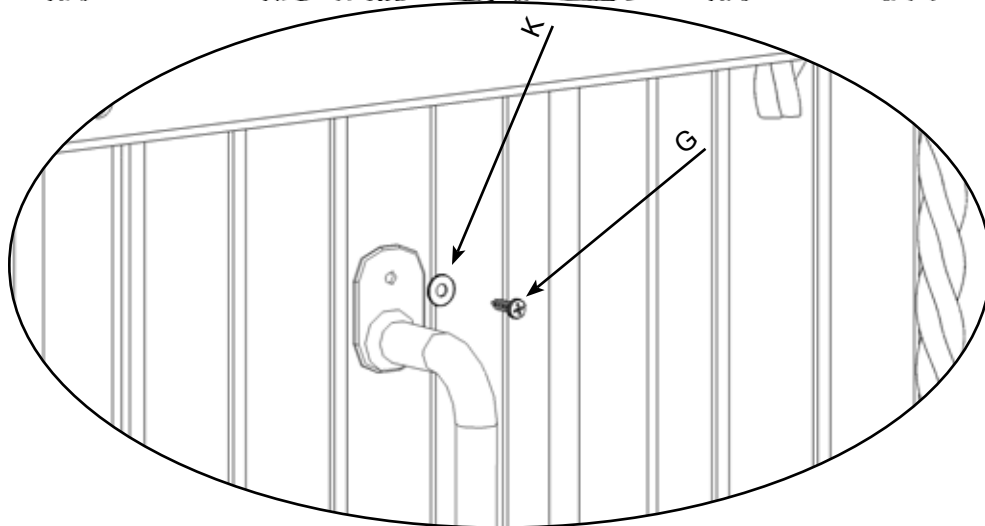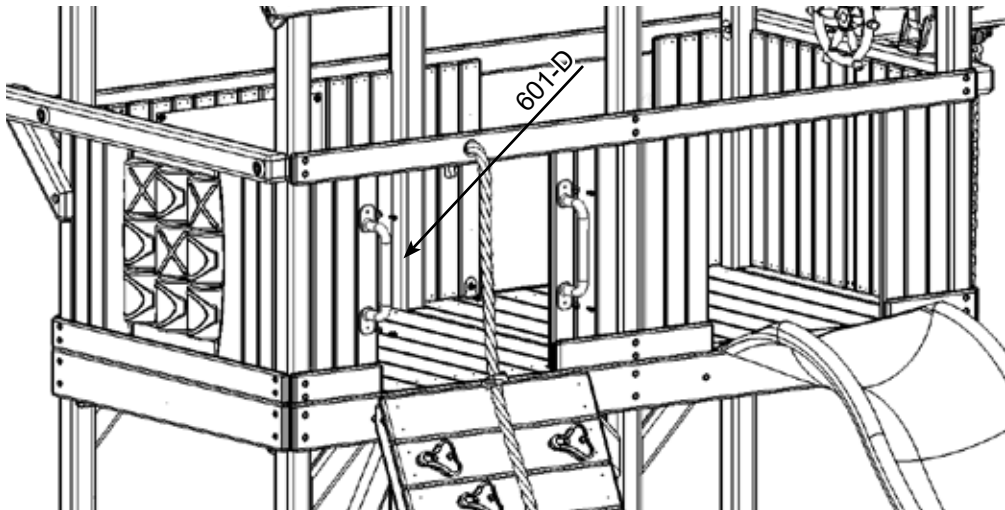

COMPLETED CLOSED RAIL OPTION. NEXT LETS FINISH THE TREEHOUSE PANEL INSTALL.


Treehouse Panel Install

PARTS NEEDED




602-44- 47 13/16" Window Arches-	(2)
602-27- 17 1/4" Upper Panel Board-	(6)
602-28- 17 1/4" Upper Panel Board for Shutters-	(8)

HARDWARE NEEDED

K- 1/4" USS Flatwasher-	(8)
F- 1/4" x 3" Hex Lag Screw-	(8)
C- 1 5/8" Coated Deck Screw-	(56)

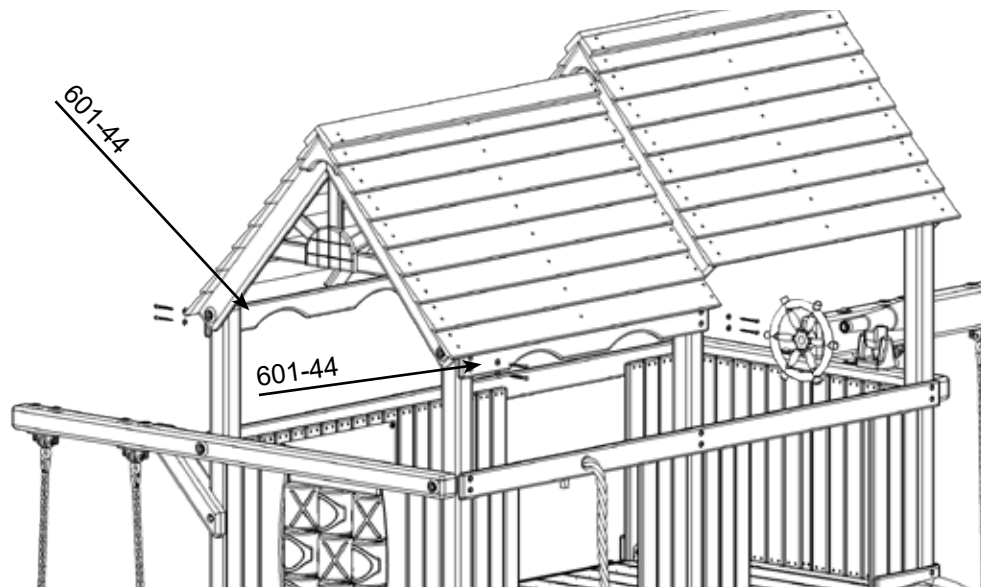

REPEAT FOR BOTH SIDES

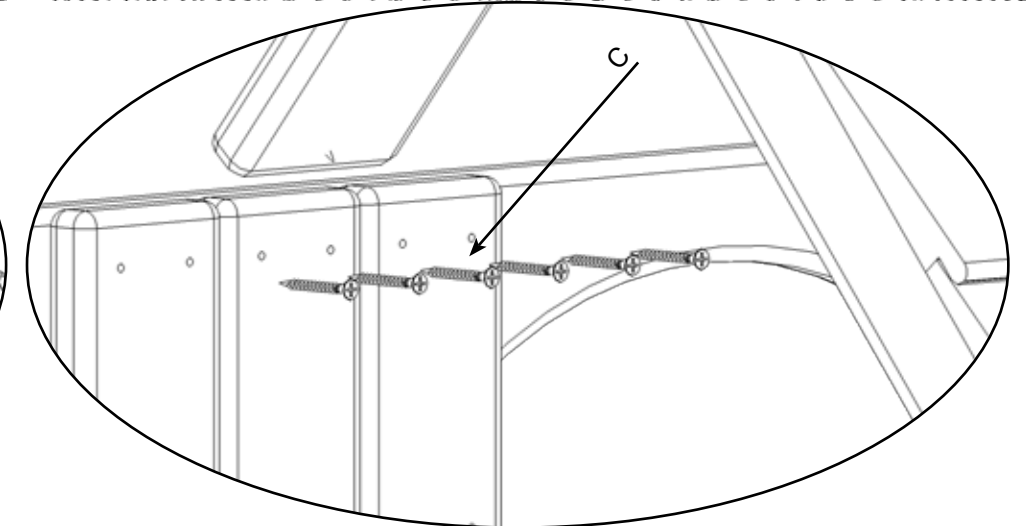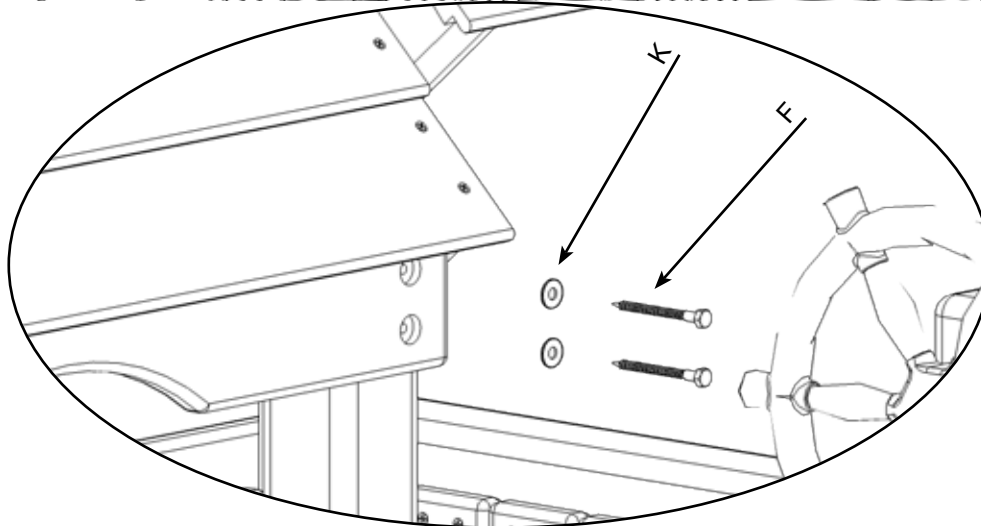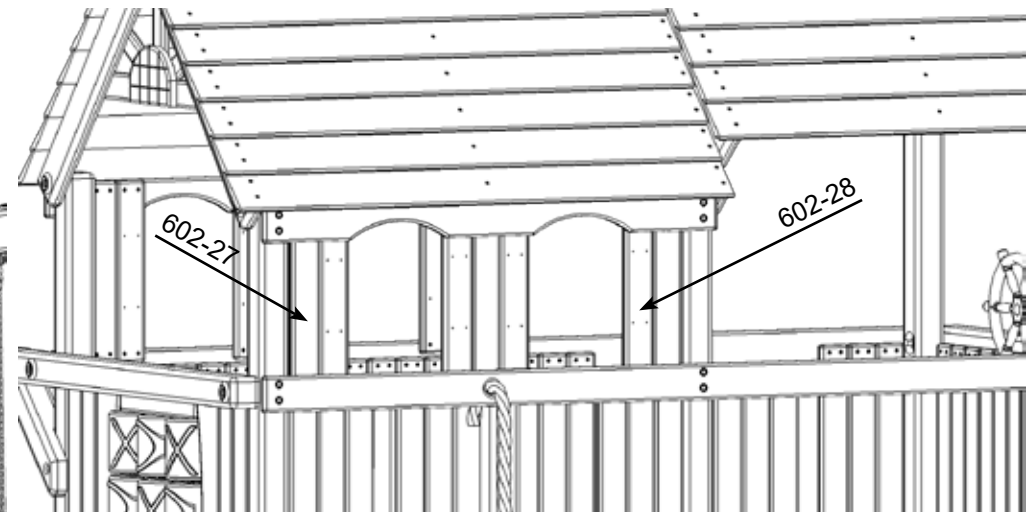


Treehouse Panel Install

PARTS NEEDED



602-8- 12" Left Shutter for Side-	(4)
602-9- 12" Right Shutter for Side-	(4)
601-59- 44" Window Top-	(1)

HARDWARE NEEDED

C- 1 5/8" Coated Deck Screw-	(16)
F- 1/4" x 3" Hex Lag Screw-	(4)
K- 1/4" USS Flatwasher-	(4)

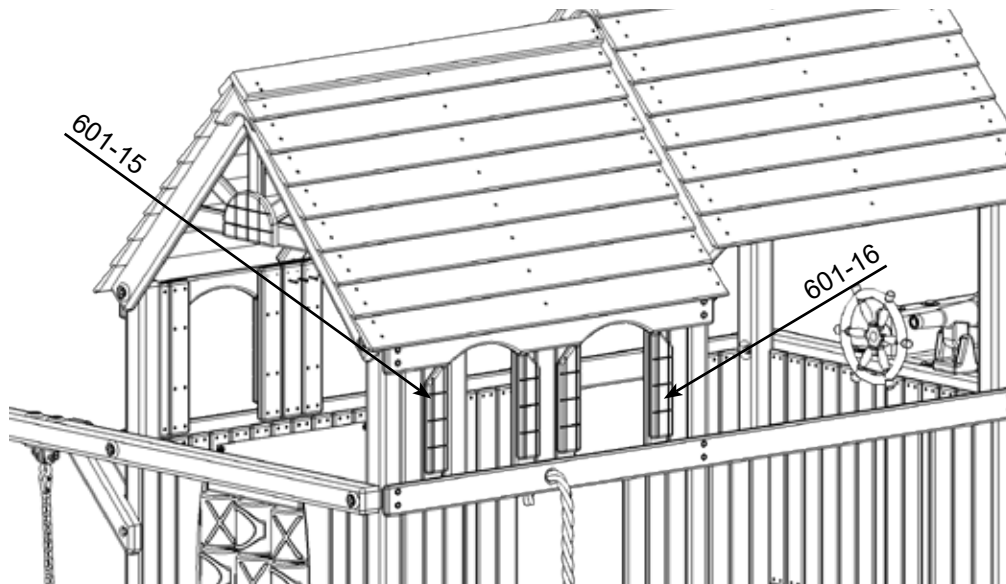

REPEAT FOR SWINGBEAM SIDE

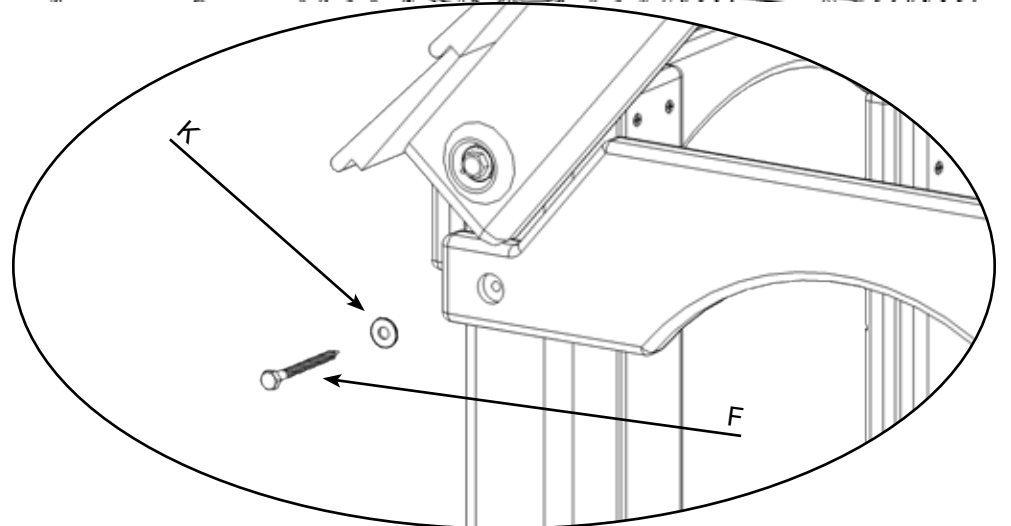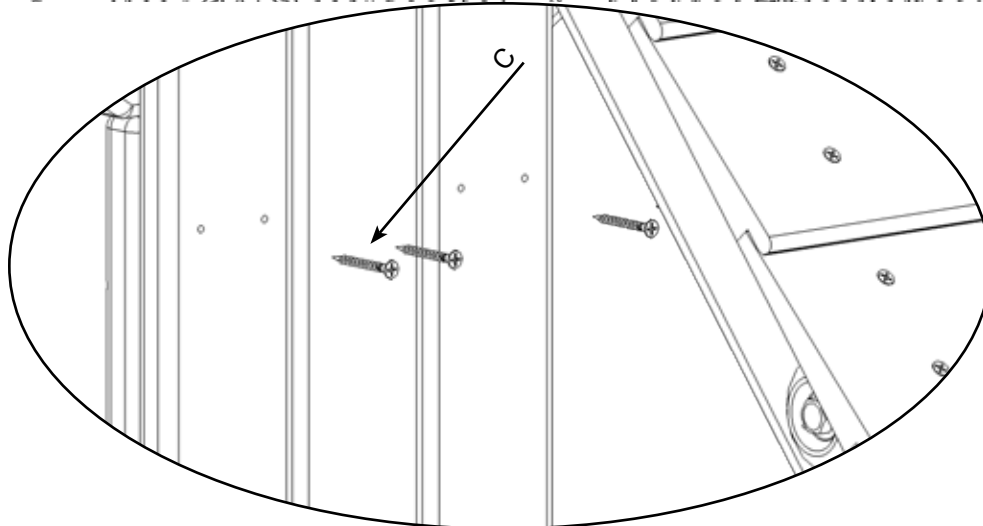



Treehouse Panel Install

PARTS NEEDED

601-23- 23 1/16" Corner Angled Board- (2)
601-31- 26 1/16" Upper Panel Board For End- (1)
601-30- 26 1/16" Upper Panel Board for End Shutters- (2)

HARDWARE NEEDED

C- 1 5/8" Coated Deck Screw- (18)

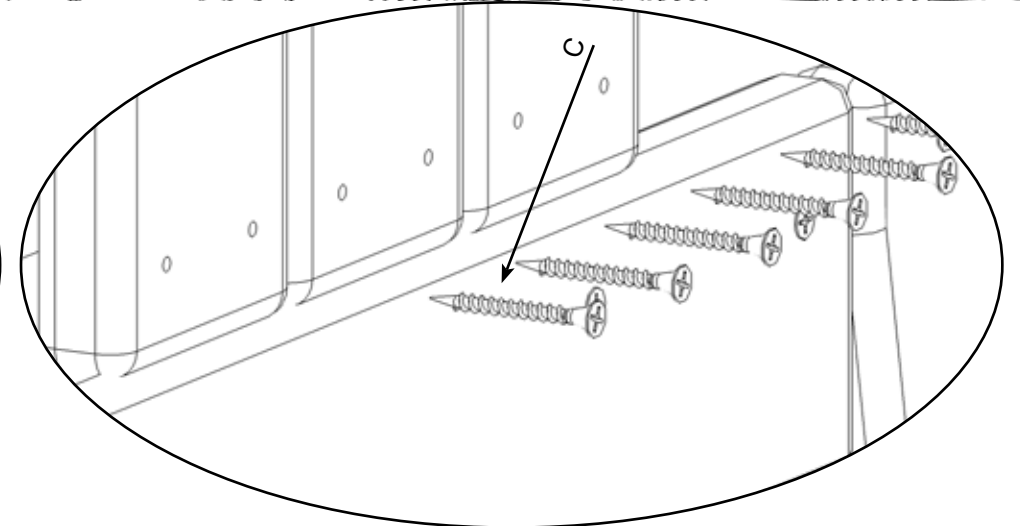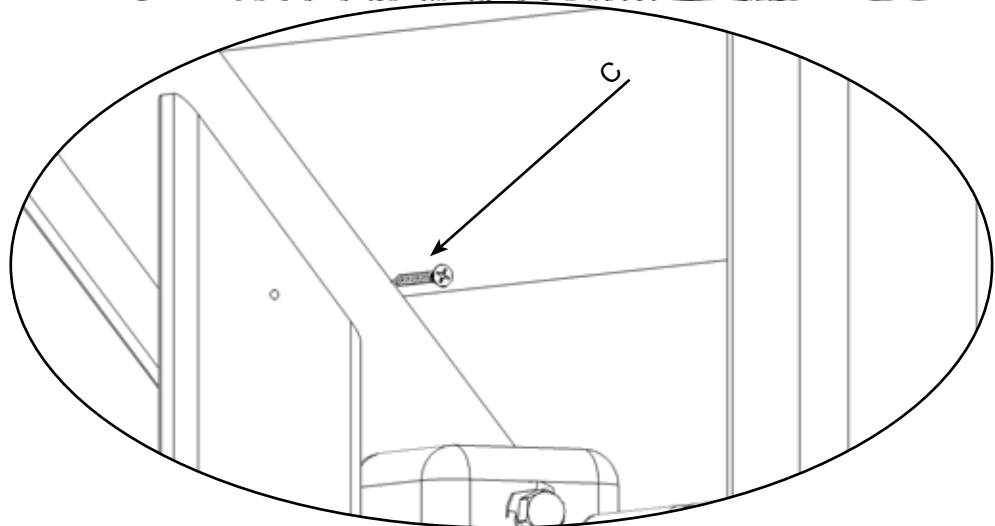




Treehouse Panel Install

PARTS NEEDED

601-13- 11 1/4" Left Shutter for Trapeze Side- (2)
601-14- 11 1/4" Right Shutter for Trapeze Side- (2)
601-12- 10 1/16" Under Fan Angled Board- (2)
601-9- 10 1/16" Under Fan Board- (6)

HARDWARE NEEDED

TP-1- 1 5/8" Coated Deck Screw- (34)

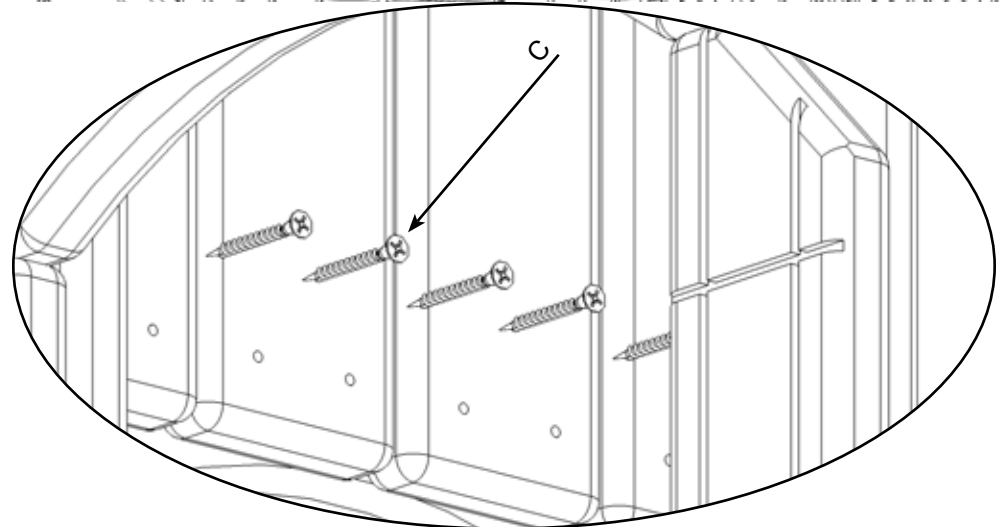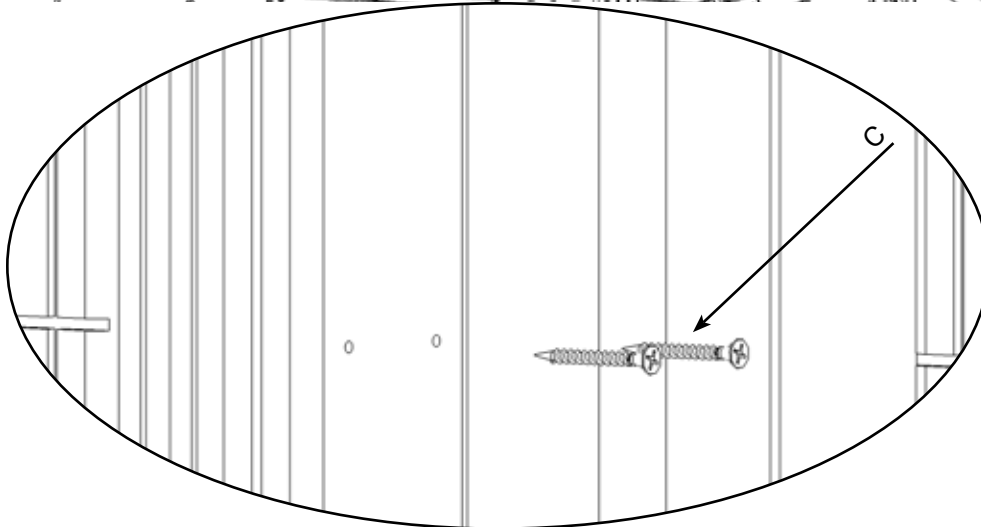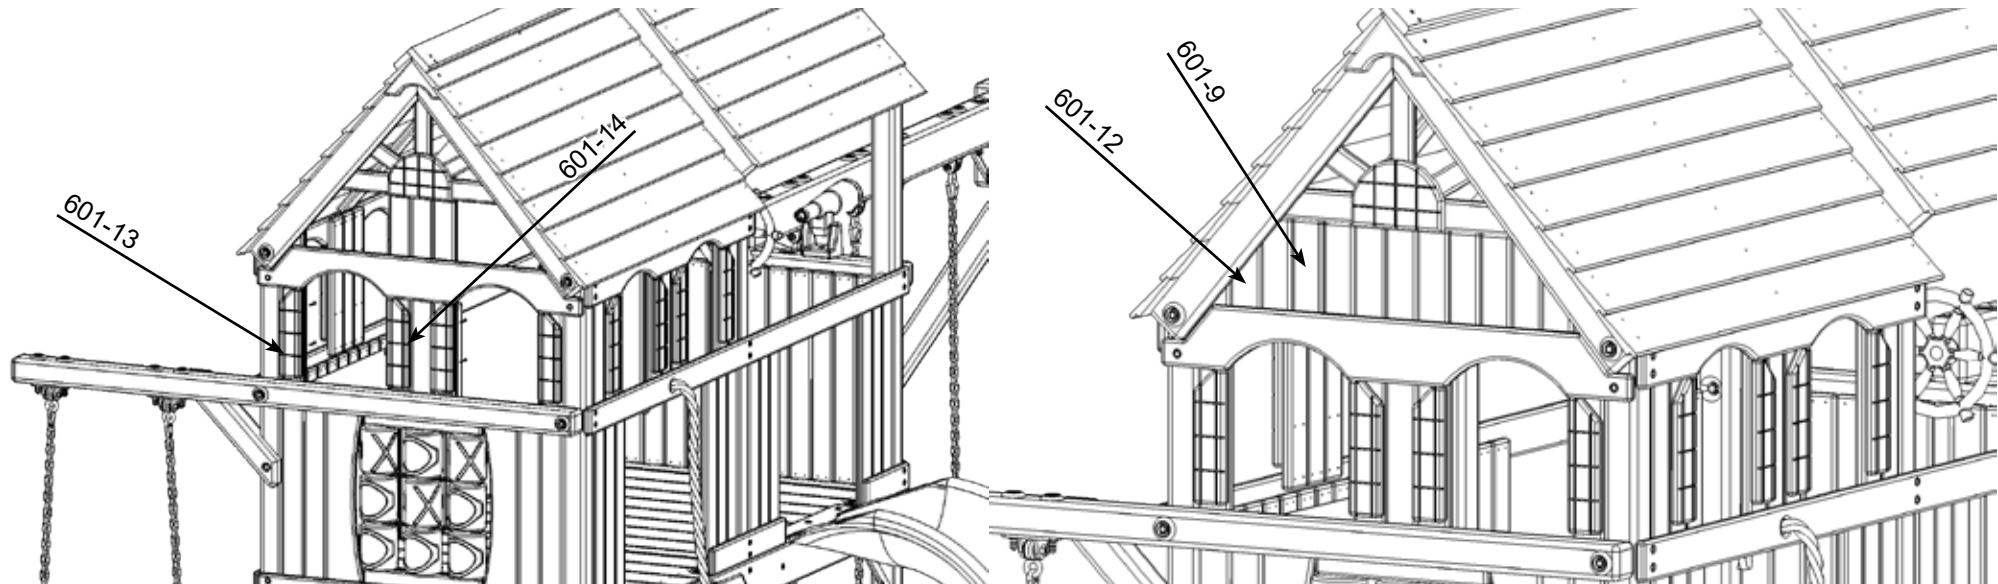

Treehouse Panel Install






PARTS NEEDED

601-40- 28 11/16" Panel Support-	(1)
601-59- 44" Window Top-	(1)
601-25- 28 13/16" Corner Angle Board for SB Side-	(2)

HARDWARE NEEDED

C- 1 5/8" Coated Deck Screw-	(20)
F- 1/4" x 3" Hex Lag Screw-	(2)
K- 1/4" USS Flatwasher-	(2)

601-40 SITS 3/4" UNDER THE WOOD ROOF FAN

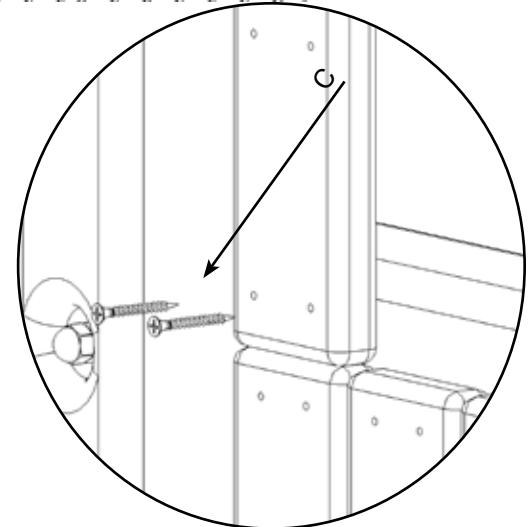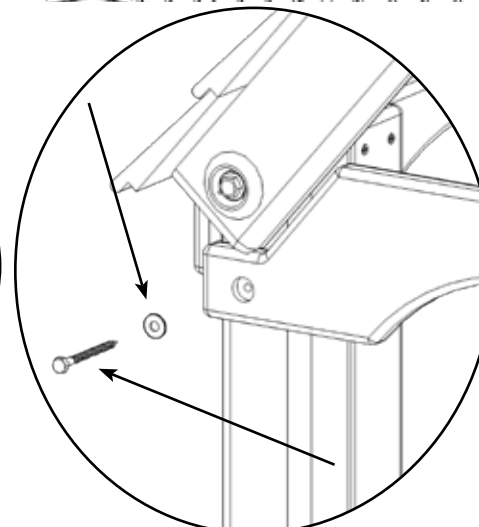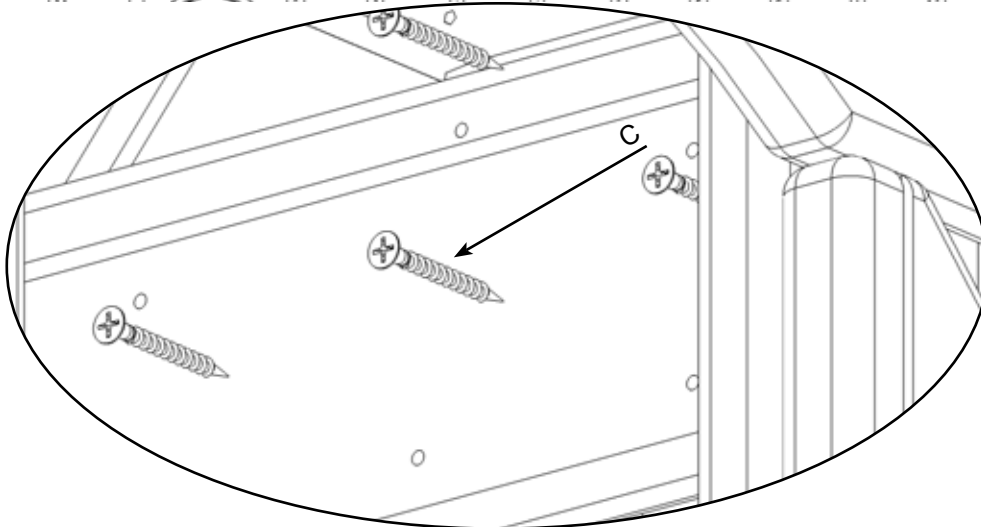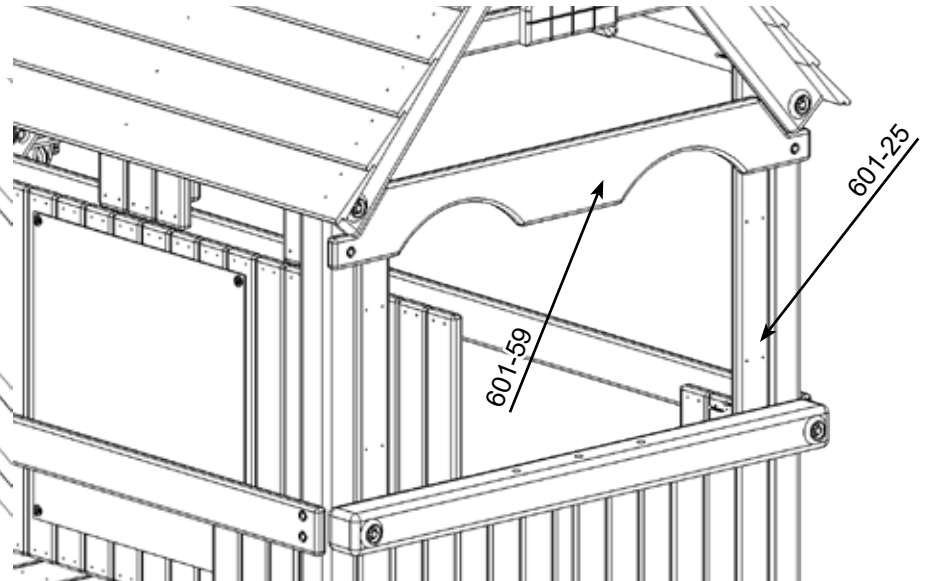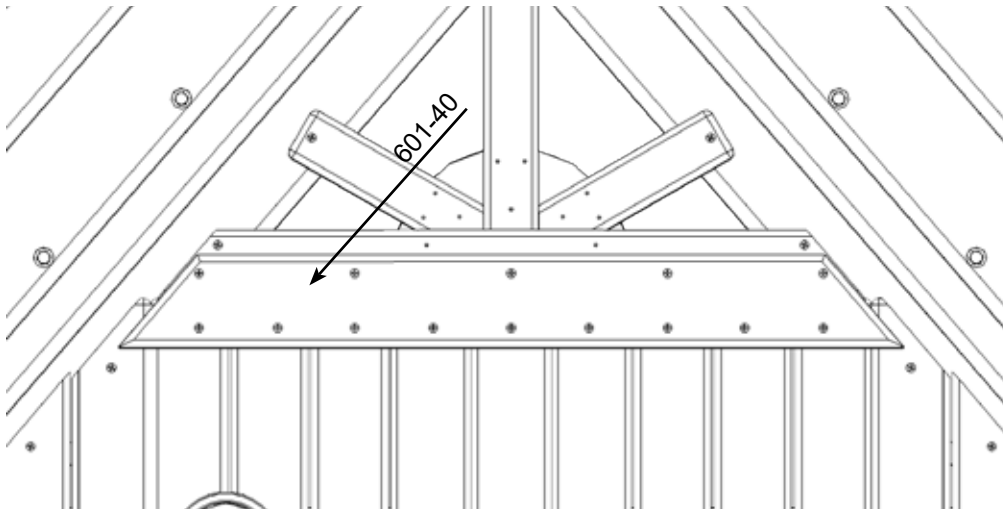




Treehouse Panel Install

PARTS NEEDED

- 601-29- 24 9/16" SB Side under Fan Center Board- (1)
- 601-33- 31 9/16" Under Fan Center Board for SB Side- (2)
- 601-9- 10 1/16" Under Fan Board- (6)
- 601-12- 10 1/16" Under Fan Angled Cut- (2)

HARDWARE NEEDED

- C- 1 5/8" Coated Deck Screw- (30)

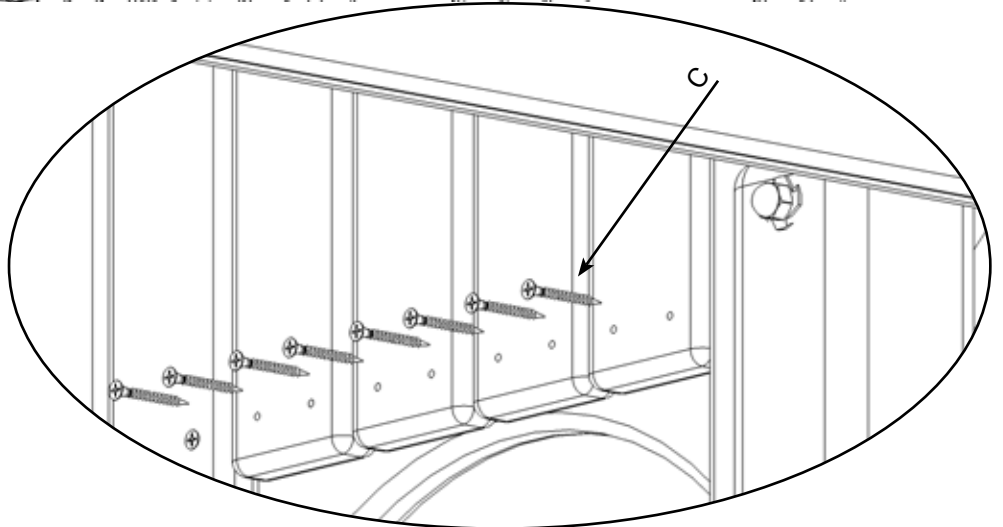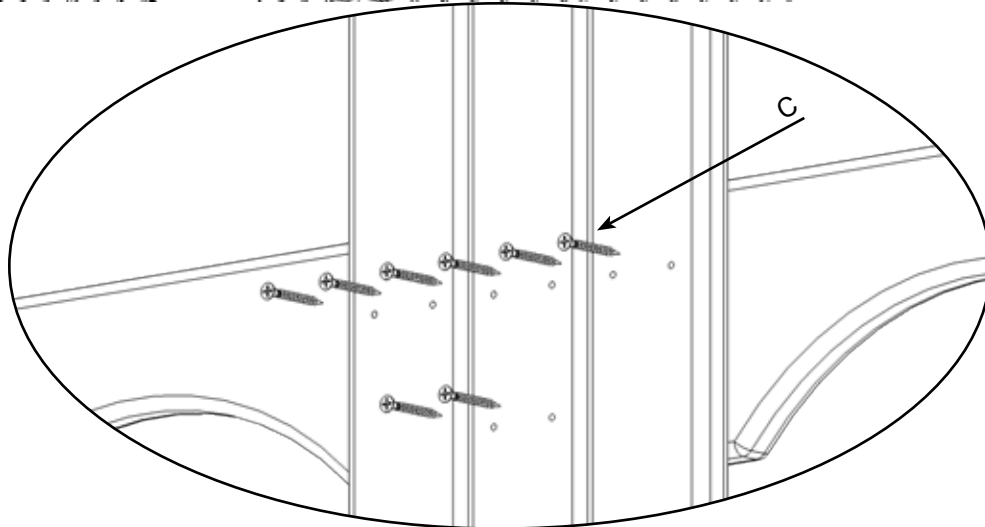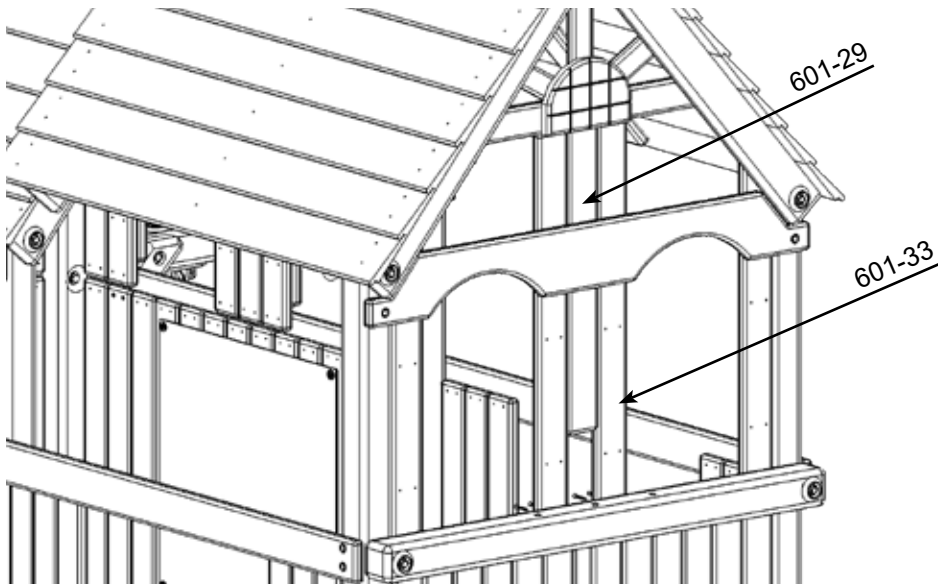

Treehouse Panel Install


PARTS NEEDED

601-40- 28 11/16" Panel Support-	(1)
601-20- 16 3/4" Left SB Side Shutter-	(1)
601-19- 16 3/4" Left SB Shutter-	(1)
601-22- 16 3/4" Right SB Shutter-	(1)
601-21- 16 3/4" Right SB Side Shutter-	(1)

HARDWARE NEEDED

C- 1 5/8" Coated Deck Screw-	(30)
------------------------------	------

602-29 SITS 3/4" UNDER THE WOOD ROOF FAN

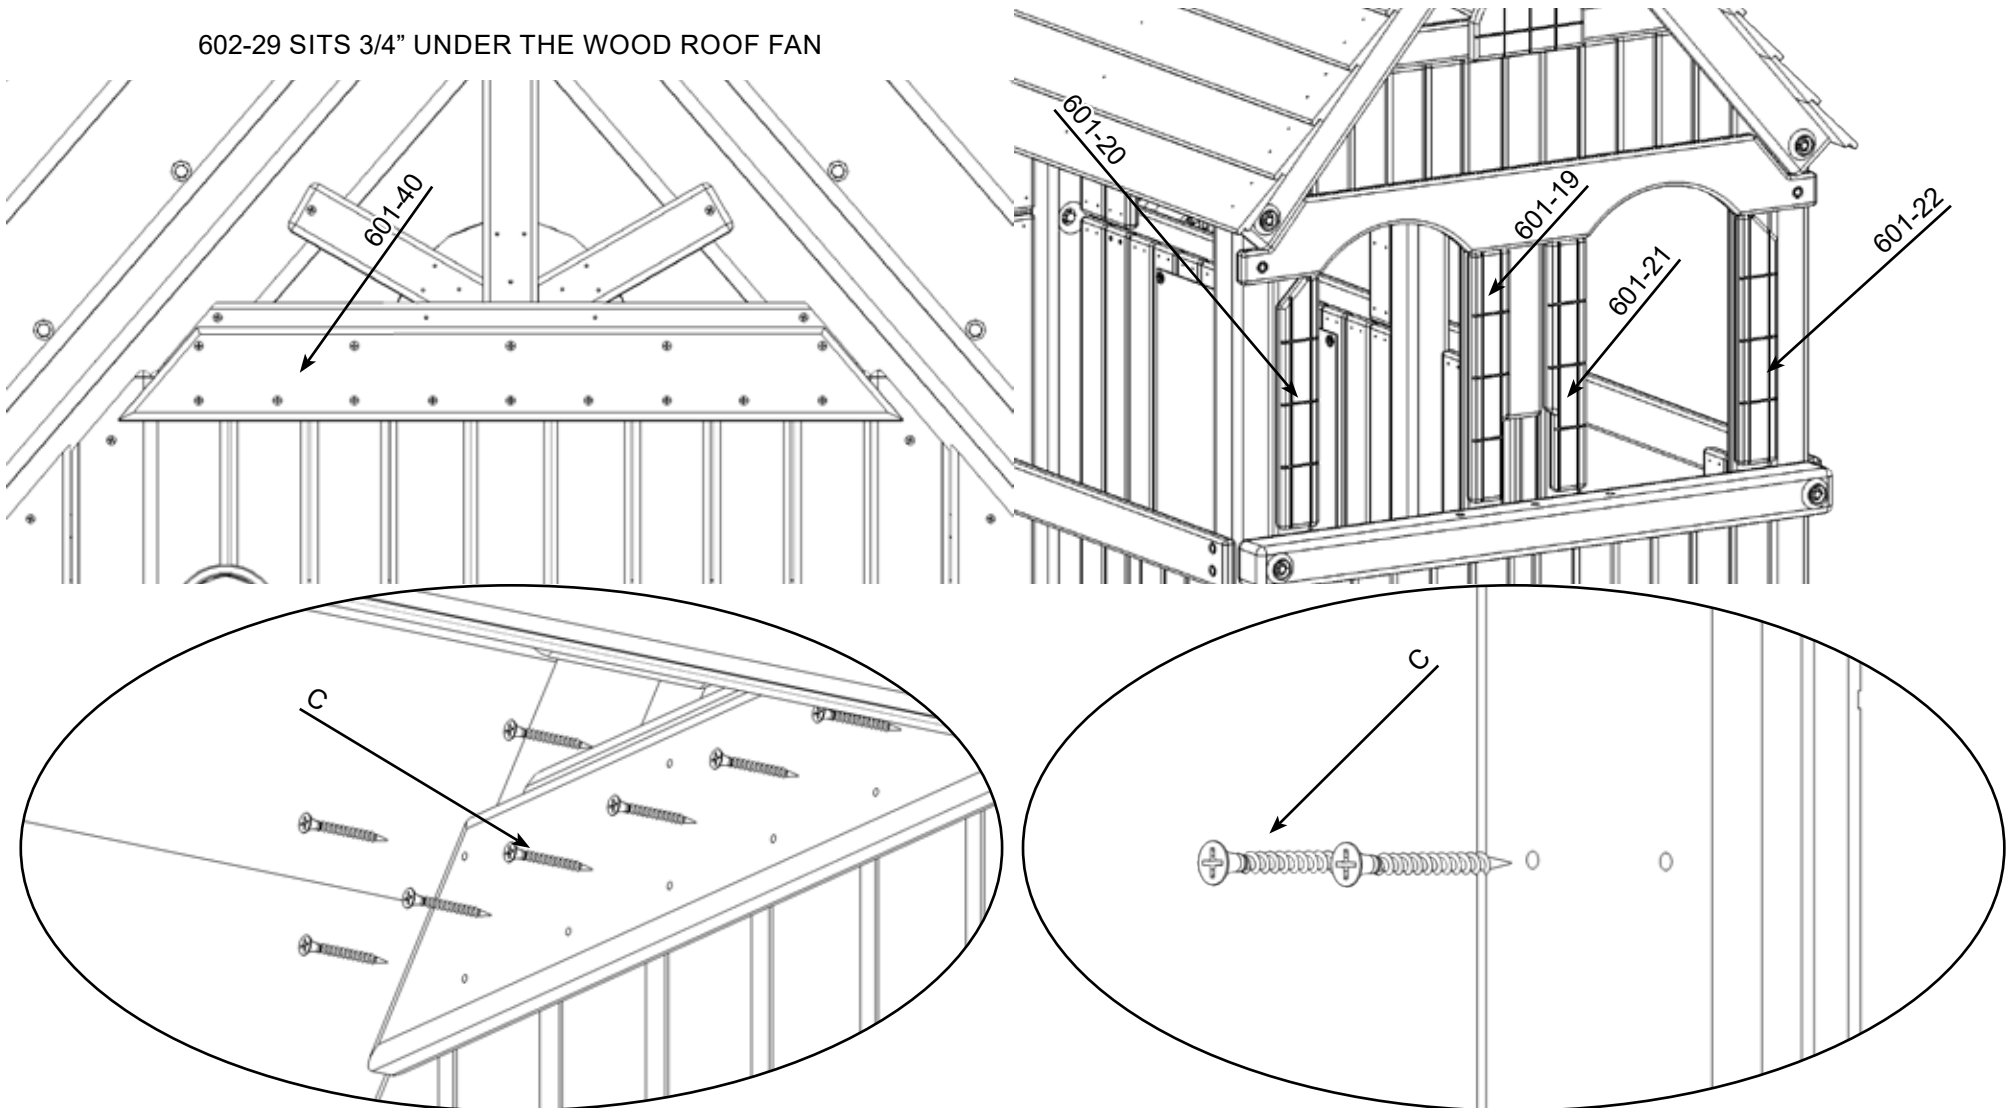





Treehouse Panel Install

PARTS NEEDED

601-43- 44" Slim 4- Hole Facia- (1)
601-80- 44" Lemonade 4- Hole Facia- (1)

HARDWARE NEEDED

K- 1/4" USS Flatwasher- (8)
F- 1/4" x 3" Hex Lag Screw- (8)

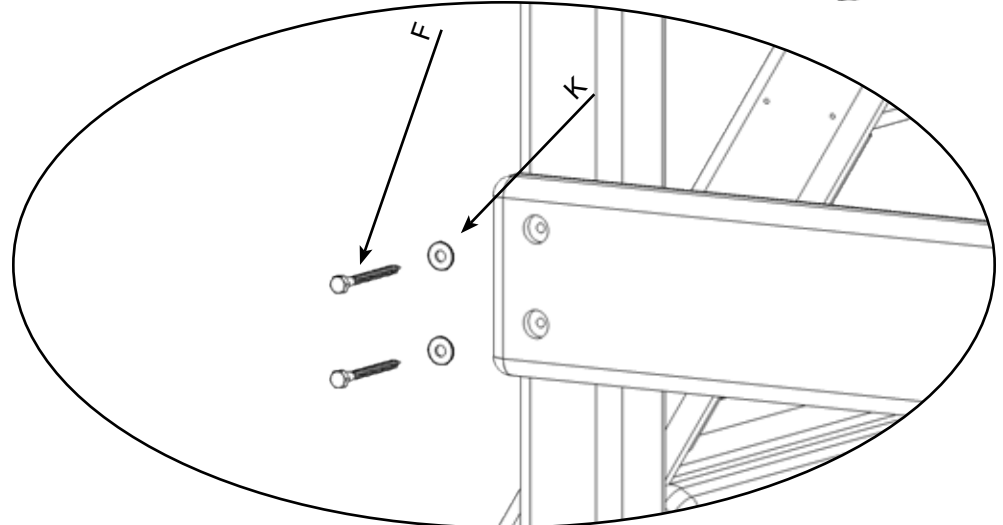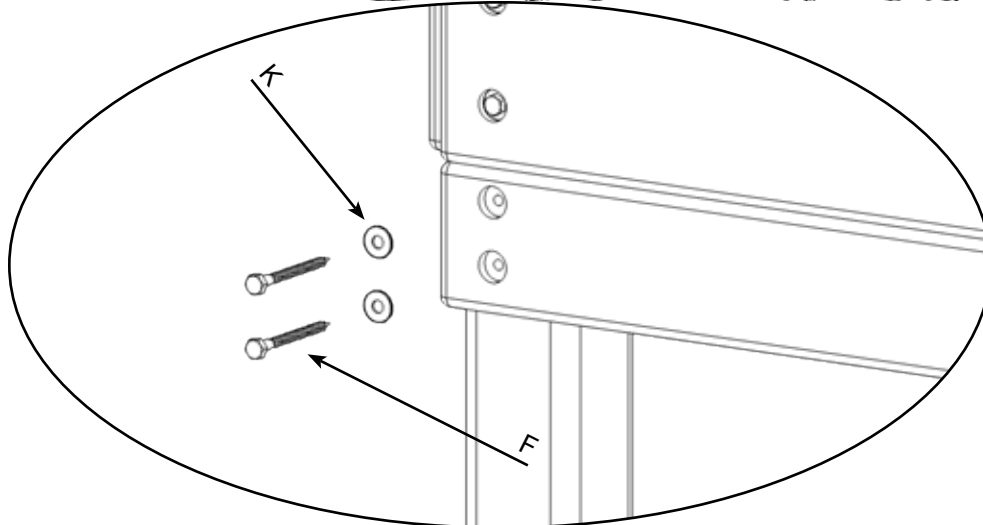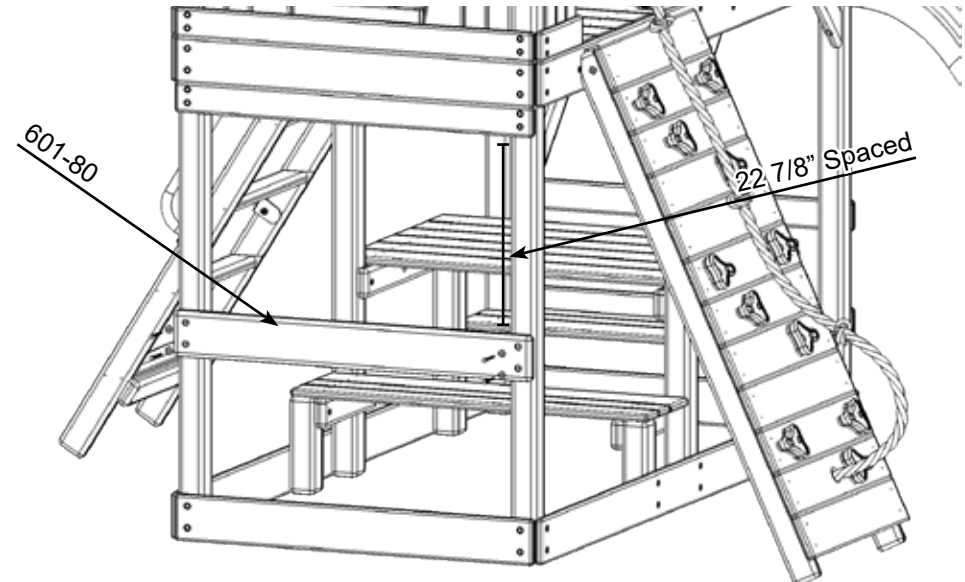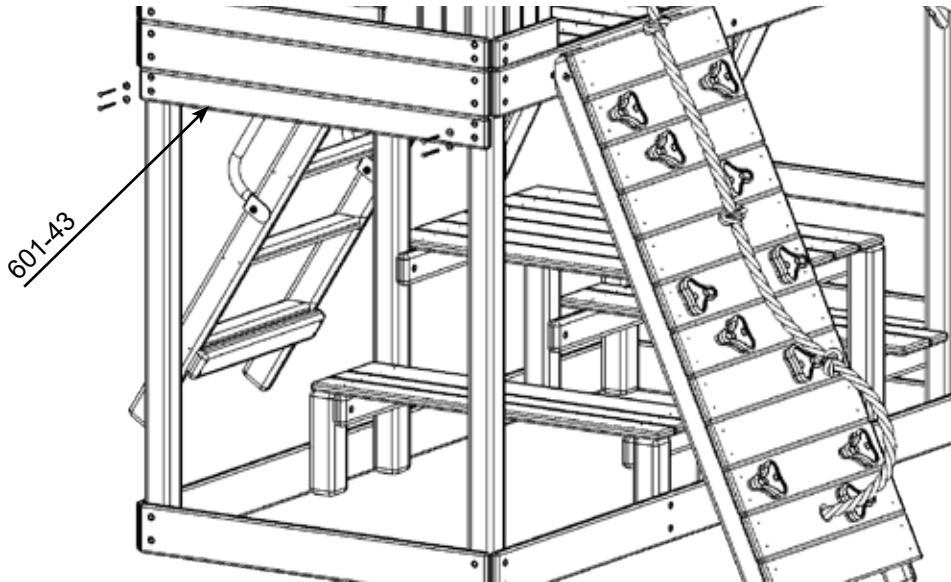





Treehouse Panel Install

PARTS NEEDED

601-60- 44" Lemonade Facia-	(1)
602-24- 26 1/2" Lower Panel Board-	(11)
602-26- 44 1/2" Lower Panel Board-	(2)

HARDWARE NEEDED

F- 1/4" x 3" Hex Lag Screw-	(4)
K- 1/4" USS Flatwasher-	(4)
C- 1 5/8" Coated Deck Screw-	(56)

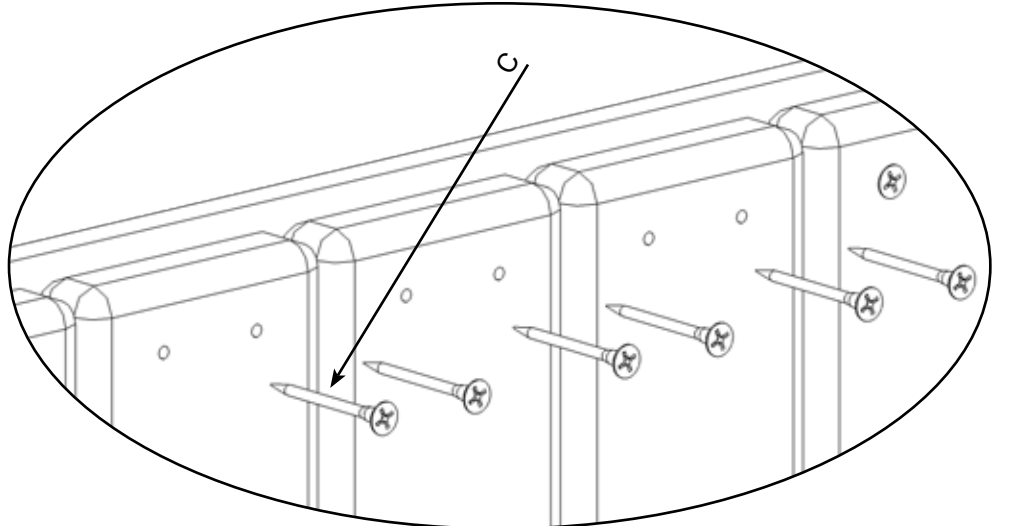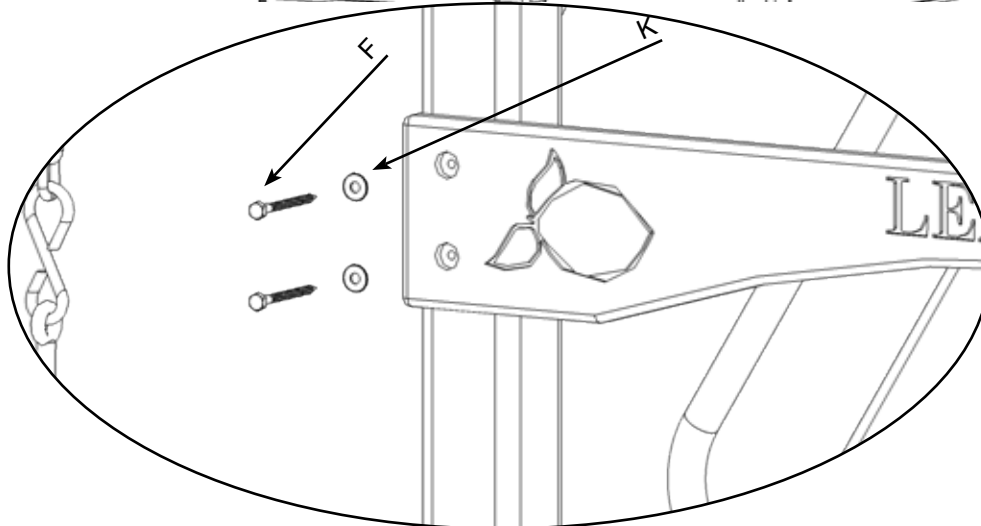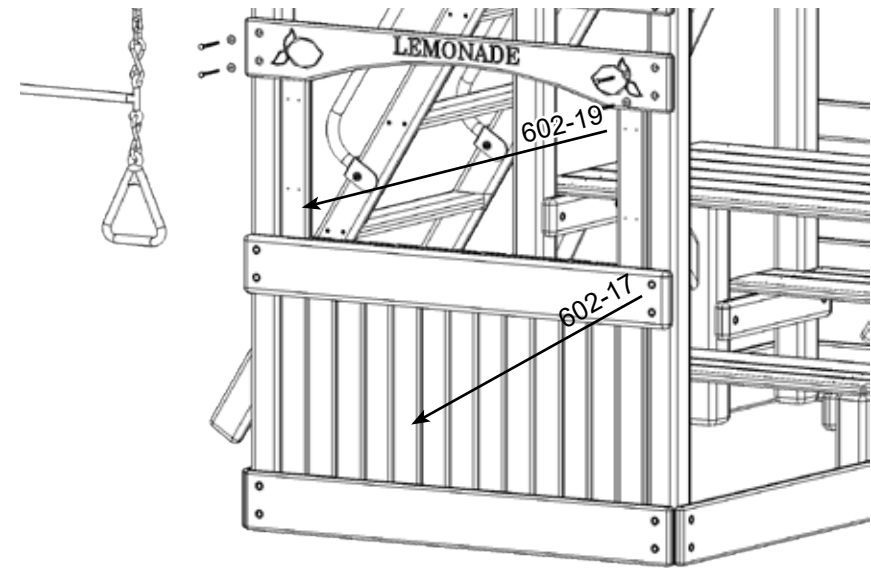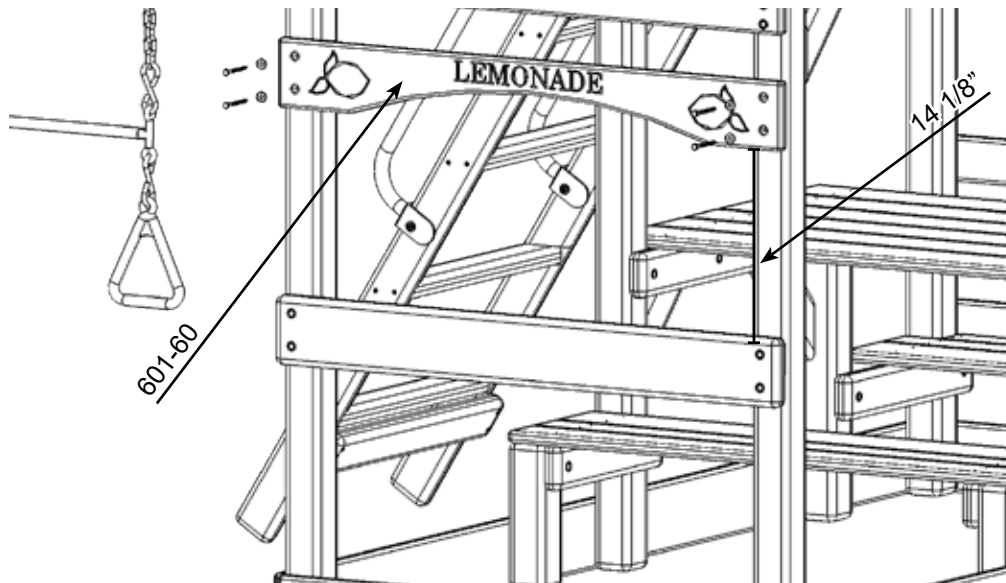





Treehouse Panel Install

PARTS NEEDED

601-11- 6 1/4" Upper Lemonade Board- (13)
601-37- 12 3/4" Lemonade Wood Roof Support- (2)

HARDWARE NEEDED

C- 1 5/8" Coated Deck Screw- (26)
F- 1/4" x 3" Hex Lag Screw- (4)
K- 1/4" USS Flatwasher- (4)

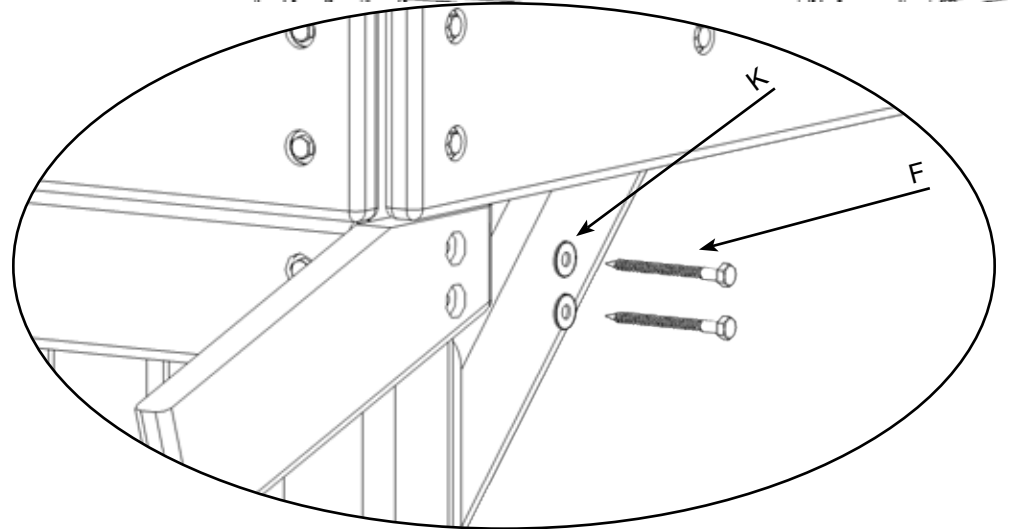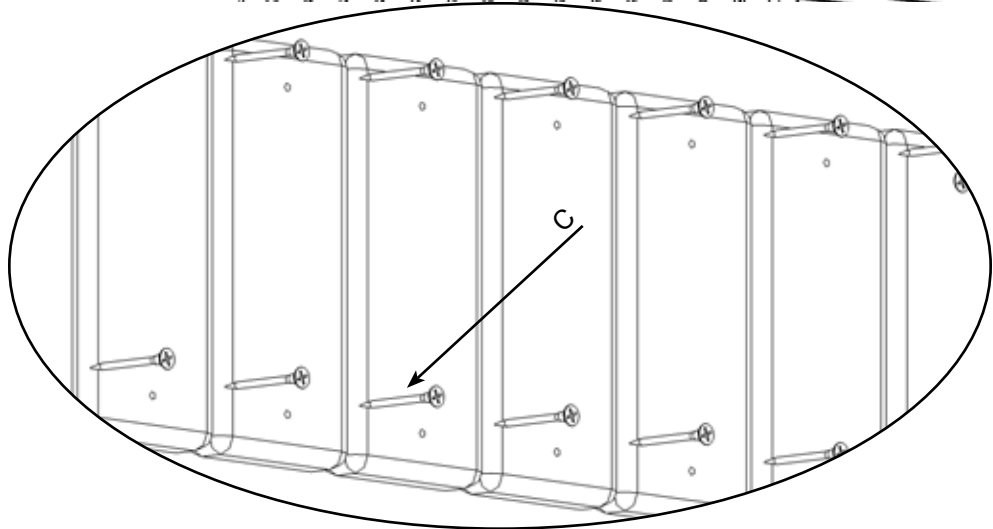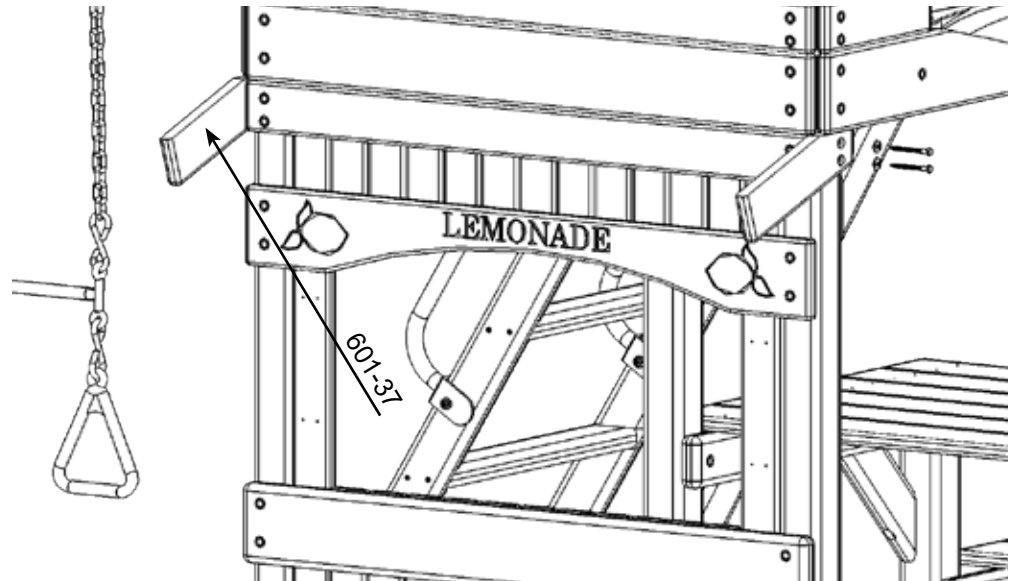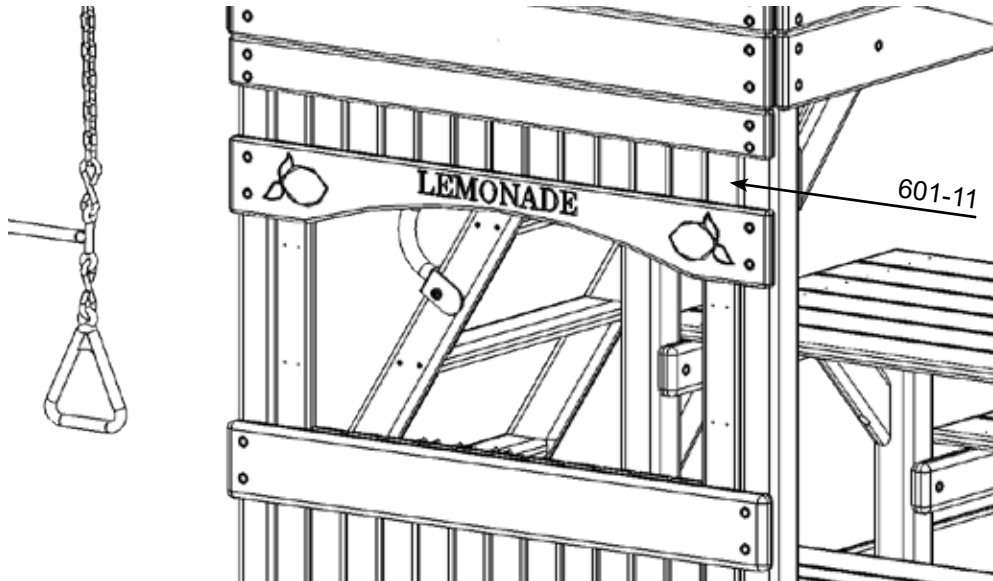





Treehouse Panel Install

PARTS NEEDED

601-92- 45 3/4" Lemonade Woof Roof Board- (2)
601-35- 8 1/4" Center Wood Roof Support- (1)

HARDWARE NEEDED

C- 1 5/8" Coated Deck Screw- (10)

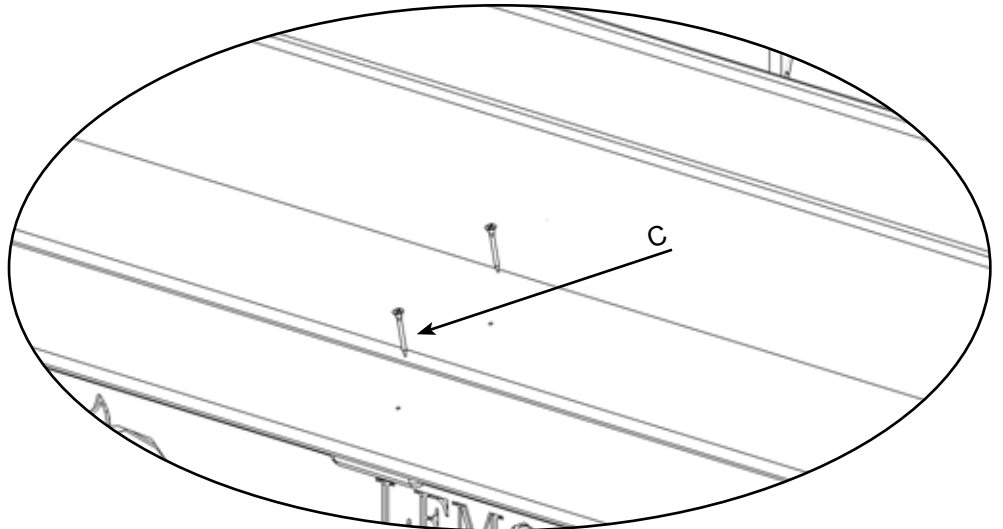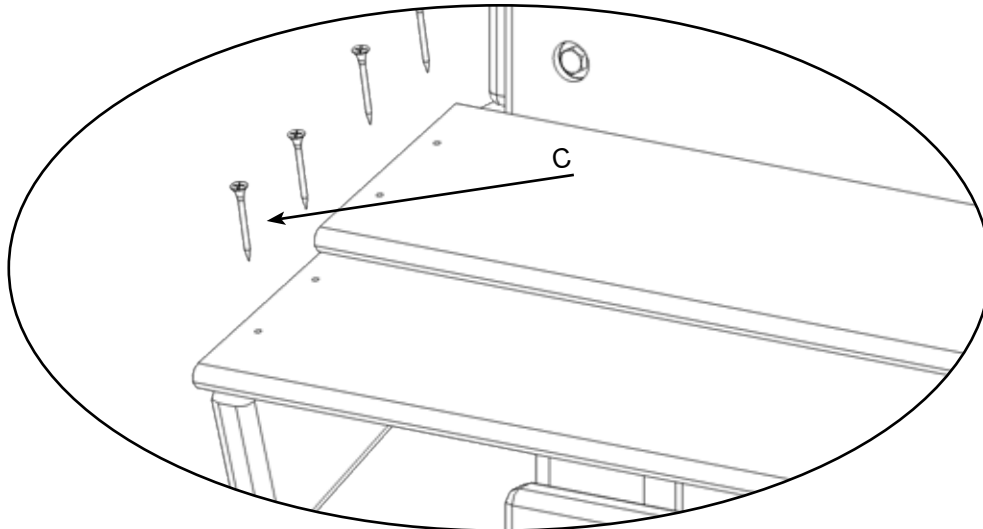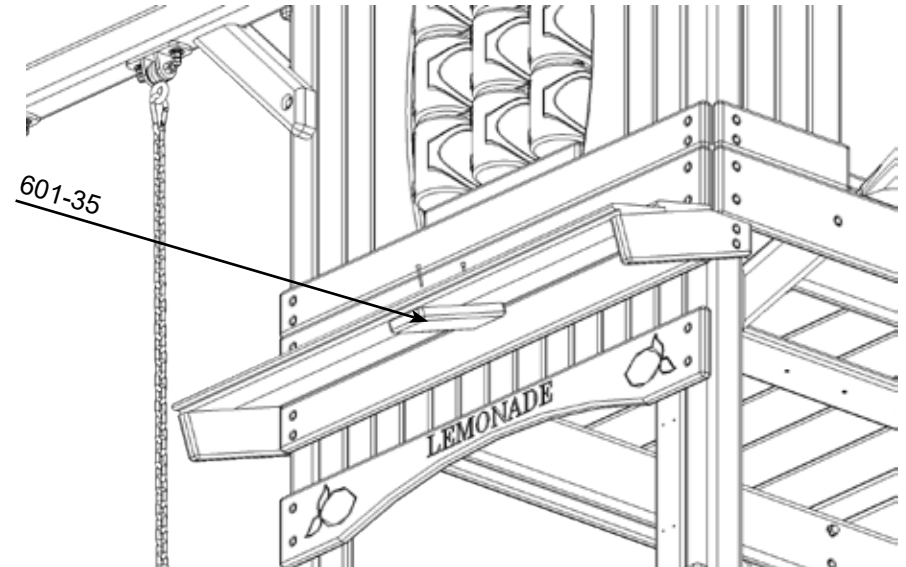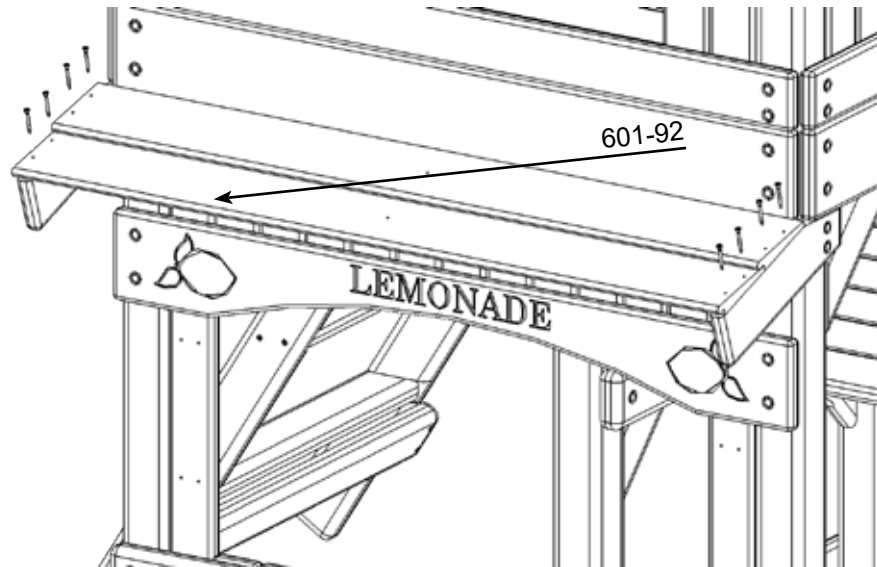

Treehouse Panel Install

PARTS NEEDED

601-58- 32 1/4" Lemonade Stand Counter- (1)
601-17- 14 1/4" Lower Left Shutter- (1)
601-18- 14 1/4" Lower Right Shutter- (1)

HARDWARE NEEDED

C- 1 5/8" Coated Deck Screw- (16)

